

[Manuals.plus](#) /

› [Miwaimao](#) /

› User Manual: Realtek RTL8821AE WiFi Bluetooth Combo Card

Miwaimao KA-N-DX257

User Manual: Realtek RTL8821AE WiFi Bluetooth Combo Card

Model: KA-N-DX257

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of the Miwaimao Realtek RTL8821AE 802.11AC 433 Mbps WiFi Bluetooth 4.0 Combo Half Mini PCI-e Wireless WiFi Card. This card is designed to provide wireless connectivity (Wi-Fi and Bluetooth) for compatible laptops and desktop computers. Please read this manual thoroughly before installation and use to ensure proper functionality and to prevent damage to the device or your computer system.

2. PRODUCT OVERVIEW

The Realtek RTL8821AE is a versatile wireless communication module offering 802.11ac Wi-Fi and Bluetooth 4.0 capabilities. It operates as a Half Mini PCI-e card, suitable for systems with a compatible slot.



Figure 2.1: Front view of the Realtek RTL8821AE card. This image displays the top side of the Half Mini PCI-e card, featuring the Realtek RTL8821AE chip, two antenna connectors labeled 'Main' and 'Aux', and various identification markings including QR codes and model number.



Figure 2.2: Back view of the Realtek RTL8821AE card. This image shows the underside of the card, featuring multiple international regulatory compliance logos and certifications such as CE, FCC, and PTA, indicating its adherence to various global standards.

Key Features:

- Wireless Standard: 802.11ac
- Data Transfer Rate: Up to 433 Mbps (Wi-Fi)
- Bluetooth Version: 4.0
- Interface: Half Mini PCI-e
- Compatibility: Laptop, Desktop (with compatible Mini PCI-e slot)

3. SETUP AND INSTALLATION

Important: Before proceeding with installation, ensure your computer is powered off and disconnected from the power source. It is recommended to discharge any static electricity by touching a grounded metal object.

3.1. System Requirements

- Operating System: Windows 7/8/10 (driver availability may vary)
- Available Half Mini PCI-e slot
- Compatible antenna cables (not included with card)

3.2. Installation Steps

1. **Prepare your computer:** Power down your laptop or desktop computer completely. Disconnect the power adapter and remove the battery if it's a laptop.

2. **Access the Mini PCI-e slot:** Depending on your computer model, you may need to remove the back panel, keyboard, or other components to access the internal Mini PCI-e slot. Refer to your computer's service manual for specific instructions.
3. **Insert the card:** Carefully align the Realtek RTL8821AE card with the Mini PCI-e slot. Gently push the card into the slot until it is fully seated.
4. **Secure the card:** Once inserted, secure the card with the retaining screws (if applicable) or clips provided by your computer's chassis.
5. **Connect antennas:** Attach the appropriate antenna cables to the 'Main' and 'Aux' connectors on the card. Ensure a firm connection.
6. **Reassemble your computer:** Carefully reassemble your computer, ensuring all components are properly connected and secured.
7. **Power on and install drivers:** Reconnect the power and turn on your computer. The operating system may automatically detect the new hardware. If not, you will need to install the appropriate drivers for the Realtek RTL8821AE. Drivers can typically be found on the Realtek website or your computer manufacturer's support page.

Note: Driver installation is crucial for the card's proper functioning. Without correct drivers, the Wi-Fi and Bluetooth features may not be available or perform optimally.

4. OPERATING INSTRUCTIONS

4.1. Wi-Fi Connectivity

1. Ensure the Wi-Fi function is enabled in your operating system settings.
2. Open the network settings or Wi-Fi icon in your system tray.
3. Select your desired Wi-Fi network from the list of available networks.
4. Enter the network password (if required) and click "Connect".
5. Once connected, you should have internet access.

4.2. Bluetooth Connectivity

1. Ensure the Bluetooth function is enabled in your operating system settings.
2. Go to Bluetooth settings (e.g., "Bluetooth & other devices" in Windows).
3. Turn on Bluetooth.
4. Put your Bluetooth device (e.g., headphones, mouse) into pairing mode.
5. Click "Add Bluetooth or other device" and select "Bluetooth".
6. Select your device from the list and follow the on-screen prompts to complete pairing.

5. MAINTENANCE

The Realtek RTL8821AE card requires minimal maintenance. Follow these guidelines to ensure longevity and optimal performance:

- **Keep drivers updated:** Regularly check for updated drivers from Realtek or your computer manufacturer's website. Updated drivers can improve performance, stability, and security.
- **Keep the environment clean:** Ensure the internal components of your computer, including the PCI-e slot area, are free from dust and debris. Dust can accumulate and affect performance or cause overheating.
- **Avoid physical damage:** Handle the card with care during installation and avoid bending or applying excessive force.

6. TROUBLESHOOTING

If you encounter issues with your Realtek RTL8821AE card, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Wi-Fi or Bluetooth not detected.	Drivers not installed or corrupted; card not seated properly; hardware issue.	Verify driver installation in Device Manager. Reinstall if necessary. Ensure the card is fully seated in the Mini PCI-e slot. Check BIOS/UEFI settings to ensure wireless/Bluetooth is enabled.
Poor Wi-Fi signal or slow speeds.	Antennas not connected; interference; outdated drivers; distance from router.	Ensure antenna cables are securely connected to the card. Update Wi-Fi drivers. Reduce distance to Wi-Fi router or remove obstructions. Check for sources of interference (e.g., other electronic devices).
Bluetooth device not pairing.	Bluetooth not enabled; device not in pairing mode; driver issue.	Confirm Bluetooth is enabled in OS settings. Ensure the Bluetooth device is in pairing mode. Update Bluetooth drivers. Remove and re-add the Bluetooth device in settings.

If these steps do not resolve the issue, consider contacting your computer manufacturer's support or a qualified technician.

7. SPECIFICATIONS

Feature	Detail
Model Number	KA-N-DX257
Chipset	Realtek RTL8821AE
Wi-Fi Standard	802.11ac
Data Transfer Rate	Up to 433 Mbps (Wi-Fi)
Bluetooth Version	Bluetooth 4.0
Interface	Half Mini PCI-e
Compatible Devices	Laptop, Desktop (with compatible slot)
Hardware Interface	Bluetooth, PCI, Bluetooth 4.0

8. WARRANTY AND SUPPORT

This product is manufactured by Miwaimao. For specific warranty information, please refer to the terms and conditions provided at the time of purchase or contact your retailer. As general guidance, most electronic components come with a limited manufacturer's warranty against defects in materials and workmanship.

For technical support, driver downloads, or further assistance, please visit the official Realtek website or the support page of your computer manufacturer, as they often provide specific drivers and support for integrated components.

Please retain your proof of purchase for any warranty claims.

© 2024 Miwaimao. All rights reserved. Realtek and other mentioned trademarks are the property of their respective owners.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question