

[Manuals.plus](#) /

› [SINGER](#) /

› SINGER Compact Fabric Shaver and Lint Remover Instruction Manual

SINGER Lint Remover

SINGER Compact Fabric Shaver and Lint Remover Instruction Manual

Model: Lint Remover

1. PRODUCT OVERVIEW

The SINGER Compact Fabric Shaver and Lint Remover is designed to efficiently remove lint, fuzz, and fabric pills from various textiles. Its portable and battery-operated design makes it convenient for both home use and travel. The device features durable stainless steel rotary blades and a detachable lint catcher for easy disposal.

Key Features:

- Equipped with 3 sharp stainless steel rotary blades for efficient lint, fuzz, and fabric pill removal.
- Suitable for a wide range of fabrics including clothes, wool, cotton, sweaters, towels, carpets, and upholstery.
- Compact and portable design (5.6" x 3.1" x 3.0") for easy storage and travel.
- Detachable lint catcher for simple and mess-free disposal of collected lint.
- Dual safety protection system with a safety mesh guard to protect fabrics and ensure user safety.
- Long-lasting sharp stainless steel blades for consistent, high-performance lint removal.
- Ergonomic design provides a comfortable grip for prolonged use.
- Gentle on delicate fabrics such as wool, cashmere, and silk.
- Easy operation with a simple on/off switch and a removable head for hassle-free cleaning.
- Constructed with premium materials for reliable and durable quality.

2. PRODUCT COMPONENTS

The SINGER Compact Fabric Shaver and Lint Remover includes the main unit, a detachable lint catcher, and a small cleaning brush.



Figure 1: Main unit of the SINGER Compact Fabric Shaver and Lint Remover.



Figure 2: View of the detachable lint catcher and the protective mesh over the stainless steel blades.



Figure 3: The included small brush for cleaning the shaver.

3. SETUP

Battery Installation:

1. Locate the battery compartment cover on the handle of the fabric shaver.
2. Slide the cover downwards to open the battery compartment.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Batteries are not included.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 4: Correctly inserting AA batteries into the shaver's compartment.

4. OPERATING INSTRUCTIONS

Using the Fabric Shaver:

1. Ensure the fabric shaver has fresh batteries installed and the lint catcher is empty and securely attached.
2. Lay the garment or fabric flat on a hard, smooth surface. Stretch the fabric taut to ensure a smooth surface for shaving.
3. Press the ON/OFF button located on the handle to activate the shaver.
4. Gently glide the shaver's mesh head over the pillied or fuzzy areas of the fabric. Apply light, even pressure. Avoid pressing too hard to prevent damage to the fabric.
5. Move the shaver in small, circular motions or short, straight strokes, depending on the fabric and the type of pilling.
6. Periodically check the lint catcher and empty it when it becomes full to maintain optimal performance.
7. Once finished, press the ON/OFF button to turn off the shaver.



Ergonomic, lightweight handle fits comfortably in your hand, making lint removal easy. The removable lint catcher collects fluff to keep fabrics clean and makes disposal easy. A small brush is included for sweeping out any extra fluff, ensuring thorough cleaning.

The SINGER Compact Fabric Shaver quickly removes lint, fuzz, and pilling with powerful stainless steel blades. Featuring an ergonomic handle, detachable lint catcher, and cordless design, it's perfect for refreshing fabrics like clothing, blankets, and towels. Lightweight and travel-friendly, it combines convenience with SINGER's trusted fabric care expertise to extend the life of your items.



Quality Assurance

Singer Sewing Machines are Delivered Pre-Threaded and Factory Tested



We've Gone Green!

Singer Product Manuals are now Paperless, and available at singer.com/support



Beginner's Machine Class

Free Beginner's Machine Class available with your purchase. Visit singer.com/my-class

Figure 5: Demonstrating the fabric shaver in use on a sweater.

Video 1: Official SINGER Lint Remover Introduction, showing unboxing, battery installation, and usage demonstration.

5. MAINTENANCE

Cleaning the Lint Catcher:

1. Ensure the shaver is turned OFF before cleaning.
2. Twist the transparent lint catcher counter-clockwise to detach it from the main unit.
3. Empty the collected lint and fuzz into a waste bin.
4. Reattach the lint catcher by twisting it clockwise until it is securely in place.

Cleaning the Blades and Mesh:

1. With the lint catcher removed, use the provided small cleaning brush to gently brush away any lint or debris from the stainless steel blades and the inner side of the mesh cover.
2. Do not use water or any liquid cleaners on the blades or mesh.
3. Ensure all parts are dry before reassembling.



Figure 6: Detaching the transparent lint catcher for easy cleaning.



Figure 7: Using the small brush to clean the blades and mesh.

6. TROUBLESHOOTING

- **Shaver not turning on:**

Check if the batteries are inserted correctly with the right polarity. Replace old or depleted batteries with new AA batteries. Ensure the battery compartment cover is securely closed.

- **Reduced performance or not removing lint effectively:**

The lint catcher may be full; empty it. The blades or mesh may be clogged with lint; clean them using the provided brush. The batteries may be low; replace them.

- **Fabric damage:**

Ensure the fabric is laid flat and taut. Avoid applying excessive pressure. Do not use on delicate fabrics that are not suitable for shaving.

- **Unusual noise:**
Check if the lint catcher is properly attached. Ensure there are no foreign objects caught in the blades.

7. SPECIFICATIONS

Specification	Detail
Brand	SINGER
Model Number	Lint Remover
Material	Metal, Plastic
Color	White
Product Dimensions	3.1"D x 3"W x 5.6"H
Handle Material	Plastic
Operation Mode	Automatic
Item Weight	4.4 ounces
Power Source	2-AA Batteries (Not Included)

8. SAFETY INFORMATION

- Keep out of reach of children.
- Do not use on wet fabrics.
- Ensure the safety mesh guard is always in place during operation.
- Turn off the device before cleaning or when not in use.
- Do not attempt to disassemble the internal components beyond the lint catcher and mesh for cleaning.
- Dispose of batteries responsibly according to local regulations.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official SINGER website. SINGER product manuals are often available online at singer.com/support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08C6Z5G6S>

More documents and user manuals: <https://manuals.plus/>