

[Manuals.plus](#) /

> [Otech](#) /

> Otech Battery for Sennheiser HDI 550 Wireless Headset User Manual

Otech 2SNH02-13106668

Otech Battery for Sennheiser HDI 550 Wireless Headset User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Otech rechargeable battery, specifically designed for the Sennheiser HDI 550 wireless headset. Please read this manual thoroughly before installation and operation.

PRODUCT OVERVIEW



Figure 1: The Otech rechargeable battery, model 2SNH02-13106668, designed for Sennheiser HDI 550 wireless headsets. This image shows the compact black casing with visible battery cells and the 'Otech Original' logo.

The Otech battery (Model: 2SNH02-13106668) is a 2.4 Volt rechargeable power source intended as a replacement or spare for the Sennheiser HDI 550 wireless headset. It is designed to provide reliable power for extended listening sessions.

SETUP AND INSTALLATION

- Power Off Headset:** Ensure your Sennheiser HDI 550 wireless headset is completely powered off before attempting battery installation or removal.
- Locate Battery Compartment:** Refer to your Sennheiser HDI 550 headset's original manual to locate and open the battery compartment. This is typically found on one of the earcups.
- Remove Old Battery (if applicable):** Carefully remove the existing battery, noting its orientation.
- Insert New Battery:** Insert the Otech battery into the compartment, ensuring the polarity (+ and - terminals) matches the indicators inside the compartment. Do not force the battery.
- Close Compartment:** Securely close the battery compartment cover.
- Initial Charge:** It is recommended to fully charge the new battery before its first use. Place the headset on its charging base or connect it to its charger as per the Sennheiser HDI 550 instructions.

Important: Always handle batteries with care. Do not short-circuit, puncture, or expose the battery to extreme temperatures.

OPERATING INSTRUCTIONS

Charging the Battery

- Use only the original Sennheiser HDI 550 charging base or charger.
- Place the headset on the charging base. Ensure the charging indicator on your headset or base illuminates, indicating proper connection and charging.
- A full charge typically takes several hours. Refer to your headset's manual for specific charging times and indicator meanings.
- Avoid overcharging by removing the headset from the charger once fully charged, especially for prolonged periods.

Battery Life and Usage

- The battery provides power for your wireless headset. Actual operating time varies based on usage volume, distance from the transmitter, and other environmental factors.
- When the headset indicates low battery, recharge it promptly to avoid interruption of use.

MAINTENANCE AND CARE

- **Storage:** If storing the battery for an extended period, ensure it is partially charged (around 50%) and stored in a cool, dry place. Avoid full discharge or full charge during long-term storage.
- **Cleaning:** Keep the battery contacts clean and dry. Use a soft, dry cloth to wipe away any dust or debris.
- **Temperature:** Avoid exposing the battery to extreme temperatures (hot or cold), as this can degrade performance and shorten its lifespan.

- **Disposal:** Dispose of old or damaged batteries responsibly according to local regulations. Do not dispose of batteries in household waste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headset not powering on after battery installation.	Battery not inserted correctly; Battery not charged; Faulty battery.	<ul style="list-style-type: none"> • Re-insert battery, ensuring correct polarity. • Place headset on charger for initial charge. • If problem persists, contact support.
Battery not charging.	Improper connection to charging base; Dirty contacts; Faulty charging base/cable; Faulty battery.	<ul style="list-style-type: none"> • Ensure headset is correctly seated on the charging base. • Clean battery and charging base contacts with a dry cloth. • Test with another charging base/cable if available. • If problem persists, contact support.
Short battery life.	Battery not fully charged; Battery nearing end of lifespan; High volume usage.	<ul style="list-style-type: none"> • Ensure battery is fully charged before use. • Consider replacing the battery if it's old. • Reduce headset volume to conserve power.

SPECIFICATIONS

- **Brand:** Otech
- **Model Number:** 2SNH02-13106668
- **Compatibility:** Sennheiser HDI 550 Wireless Headset
- **Voltage:** 2.4 Volts
- **Number of Items:** 1
- **ASIN:** B08C7583K9
- **First Available:** 25 September 2021

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty claims.



