

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [vidaXL](#) /

› [vidaXL Solid Teak Wood Reclining Patio Chairs with Cushions - Model 48982 Instruction Manual](#)

vidaXL 48982

vidaXL Solid Teak Wood Reclining Patio Chairs with Cushions - Model 48982 Instruction Manual

Your guide to assembly, operation, and care.

1. INTRODUCTION

Thank you for choosing the vidaXL Solid Teak Wood Reclining Patio Chairs with Cushions, Model 48982. These chairs are designed for outdoor use, offering comfort and durability with their solid teak wood construction and adjustable backrests. This manual provides essential information for the proper setup, operation, maintenance, and care of your new patio chairs.



Image 1.1: The vidaXL Solid Teak Wood Reclining Patio Chair with Cushions.

2. SAFETY INFORMATION

- Ensure the chair is placed on a stable, level surface before use to prevent tipping.
- Do not exceed the maximum weight recommendation of 150 kg (approximately 330 lbs).
- Keep fingers clear of moving parts when adjusting the backrest or folding the chair.
- Regularly inspect all components for wear or damage. Do not use if any part is compromised.
- This product is intended for adult use. Supervise children around the furniture.

3. PACKAGE CONTENTS

Verify that all components are present before proceeding with setup.

- 1 x vidaXL Solid Teak Wood Reclining Patio Chair (Model 48982)
- 1 x Seat Cushion (Grey)
- 1 x Back Cushion (Grey)

4. SETUP

The vidaXL Reclining Patio Chair requires no assembly. It arrives pre-assembled and only needs to be unfolded for use.

1. Carefully remove the chair and cushions from the packaging.
2. Place the chair on a flat, stable surface.
3. Gently unfold the chair until it is fully extended and stable. Ensure all locking mechanisms (if present) are engaged.
4. Place the seat and back cushions onto the chair. The cushions are designed to fit securely.



Image 4.1: The chair in its fully unfolded position, ready for use.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Backrest

The chair features a 5-position adjustable backrest for personalized comfort.

1. To recline, gently lift the armrests slightly and push the backrest backward to the desired position.

2. To bring the backrest upright, gently lift the armrests and pull the backrest forward.
3. Ensure the backrest locks securely into place at each desired position before leaning back.



Image 5.1: Illustration of the adjustable backrest mechanism.

5.2. Folding for Storage

The chair can be easily folded for compact storage when not in use.

1. Remove both the seat and back cushions from the chair.
2. Ensure the backrest is in its most upright position.
3. Gently push the front and back legs towards each other until the chair folds flat.
4. Store the folded chair in a dry, protected area.

6. MAINTENANCE

6.1. Teak Wood Care

Teak wood is naturally durable and weather-resistant. To maintain its appearance and longevity:

- **Regular Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and a soft brush, then rinse thoroughly with water.
- **Teak Patina:** Over time, teak wood will naturally weather to a soft, silvery-grey patina. This is a natural process and does not affect the wood's durability.
- **Oiling (Optional):** To maintain the original golden-brown color, apply a teak oil annually. Follow the instructions on the teak oil product.
- **Winter Storage:** During prolonged periods of harsh weather, it is recommended to store the chairs indoors or cover them with protective outdoor furniture covers.

6.2. Cushion Care

The cushion covers are removable for easy cleaning.

- **Removal:** Unzip the cushion covers and remove them from the foam inserts.
- **Washing:** Hand wash or machine wash the covers on a gentle cycle with cold water and mild detergent. Do not bleach.
- **Drying:** Air dry only. Do not tumble dry. Ensure covers are completely dry before reattaching to prevent mildew.
- **Storage:** Store cushions indoors during inclement weather or when not in use to prolong their lifespan and prevent fading.



Image 6.1: Detail of the polyester cushion material.

7. TROUBLESHOOTING

- **Chair feels unstable:** Ensure the chair is fully unfolded and placed on a flat, even surface. Check for any loose connections or damaged parts.
- **Backrest adjustment is stiff:** Apply a small amount of silicone spray to the pivot points of the backrest mechanism. Ensure no debris is obstructing the movement.
- **Cushions appear flattened:** Fluff the cushions regularly to restore their shape. If heavily soiled, follow the cleaning instructions in Section 6.2.

8. SPECIFICATIONS

Brand	vidaXL
Model Number	48982

Material	Solid Teak Wood (Frame), Polyester (Cushions)
Color	Grey (Cushions), Natural Teak (Frame)
Product Dimensions (D x W x H)	28.1" x 22.4" x 40.9" (71.5 cm x 57 cm x 104 cm)
Item Weight	44.8 Pounds (20.3 kg)
Backrest Positions	5 adjustable positions
Maximum Weight Recommendation	150 Kilograms (330 lbs)
Indoor/Outdoor Usage	Outdoor
Assembly Required	No



Image 8.1: Detailed dimensions of the patio chair.

9. WARRANTY

Specific warranty information for the vidaXL Solid Teak Wood Reclining Patio Chairs with Cushions (Model 48982) may vary by retailer and region. Please refer to your purchase documentation or contact the retailer from whom you purchased the product for detailed warranty terms and conditions.

10. SUPPORT

For further assistance, questions, or to report any issues with your vidaXL Solid Teak Wood Reclining Patio Chairs, please contact the customer support of your retailer or visit the official vidaXL website for contact information.

You can find more information about vidaXL products at: [vidaXL Store on Amazon](#)