Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amkette /
- Amkette Pocket Blast 5 in 1 FM Radio with Bluetooth, Powerful Sound, Voice & FM Recording, External Antenna, 7+ Hours Playback, MP3 Player with Number Pad (AUX, SD Card, USB Input) (Black) Black FM Radio

Amkette Pocket Blast

Amkette Pocket Blast 5 in 1 FM Radio with Bluetooth User Manual

Model: Pocket Blast | Brand: Amkette



Figure 1: The Amkette Pocket Blast, a compact and versatile 5-in-1 audio device.

The Amkette Pocket Blast is a versatile 5-in-1 audio companion designed for portable entertainment. It integrates an FM radio, Bluetooth speaker, MP3 player, voice recorder, and FM song recorder into a compact unit. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- 1 x Amkette Pocket Blast Unit
- 1 x User Manual
- 1 x Charging Cable (Type-C)

PRODUCT FEATURES

The Amkette Pocket Blast offers multiple functionalities for a comprehensive audio experience:

- 5-in-1 Audio Companion: Connect via Bluetooth, FM, USB/SD MP3 Player, or Aux input. Features a full number pad for easy song and FM selection.
- Superior Sound Quality: Equipped with a new and improved sound system, delivering clear vocals and defined bass.
- Recording Capabilities: Built-in microphone for voice notes and FM recording. Requires a USB/SD card for storage.
- Speakerphone Function: Use the device as a speakerphone when connected via Bluetooth.
- Extended Playback: Offers over 7 hours of battery life on Bluetooth mode.
- Modern Connectivity: Features a reliable Type-C charging port and a built-in FM antenna.



Figure 2: Overview of the Amkette Pocket Blast's 5-in-1 functionalities, including Bluetooth, FM Radio, AUX, USB, and Micro SD card support.



Figure 3: The compact size of the Amkette Pocket Blast, designed for portability and powerful sound.

SETUP

1. Initial Charging

Before first use, fully charge the Amkette Pocket Blast. Connect the provided Type-C charging cable to the charging port on the device and the other end to a compatible USB power adapter (not included). The charging indicator will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 2-3 hours.

2. Power On/Off

Locate the power switch on the side of the device. Slide the switch to the "ON" position to power on the device. The display will light up. To power off, slide the switch to the "OFF" position.

OPERATING INSTRUCTIONS

1. General Controls

The Amkette Pocket Blast features a number pad and function buttons on its top panel for easy navigation and control.

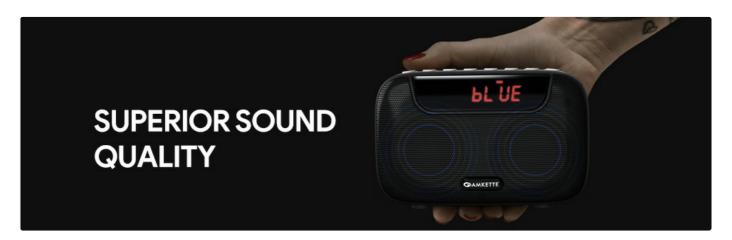


Figure 4: The number pad and control buttons on the top of the Amkette Pocket Blast for easy selection and function control.

- Number Pad (0-9): Used for direct selection of FM frequencies or MP3 tracks.
- Mode (M) Button: Press to switch between Bluetooth, FM, MP3 (USB/SD), and AUX modes.
- Play/Pause (▶||) Button: Controls playback in MP3 and Bluetooth modes. Also used for auto-scanning in FM mode.
- Previous/Next (◄◄ / ▶►) Buttons: Navigate between tracks in MP3/Bluetooth mode or FM stations.
- REC Button: Initiates voice or FM recording.
- DEL Button: Deletes recorded files.

2. Bluetooth Mode

- 1. Power on the device.
- 2. Press the Mode (M) button until "BLUE" appears on the display, indicating Bluetooth mode.
- 3. On your mobile device or computer, enable Bluetooth and search for "Pocket Blast".
- 4. Select "Pocket Blast" to pair. A confirmation tone will sound upon successful connection.
- 5. You can now play audio from your connected device. Use the Play/Pause, Previous/Next buttons on the Pocket Blast or your connected device to control playback.
- 6. **Speakerphone Function:** When a call comes in while connected via Bluetooth, press the Play/Pause button to answer or end the call.

3. FM Radio Mode

- 1. Power on the device.
- 2. Press the Mode (M) button until the FM frequency appears on the display.
- 3. **Auto Scan:** Long press the Play/Pause button to initiate an automatic scan for available FM stations. The device will save found stations.
- 4. Manual Tuning: Use the Previous/Next buttons to manually tune to desired frequencies.
- 5. Direct Frequency Entry: Use the number pad to directly enter an FM frequency (e.g., 94.3).
- 6. **FM Recording:** To record the current FM broadcast, ensure a USB drive or SD card is inserted. Press the **REC** button. Press **REC** again to stop recording.



Figure 5: The Amkette Pocket Blast in FM Radio mode, displaying the frequency. The external antenna can be extended for improved reception.



Figure 6: The Amkette Pocket Blast displaying "REC" during FM song recording, indicating active audio capture from the radio.

4. MP3 Player Mode (USB/SD Card)

- 1. Insert a USB drive into the USB port or an SD card into the TF (Micro SD) card slot.
- 2. Power on the device. The device will automatically switch to MP3 mode if a storage device is detected. If not, press the **Mode (M)** button until "MP3" or the track number appears.
- 3. Use the Previous/Next buttons to navigate between tracks.
- 4. Direct Track Selection: Use the number pad to directly enter the track number you wish to play.
- 5. Press the Play/Pause button to pause or resume playback.



Figure 7: The Amkette Pocket Blast in MP3 Player mode, demonstrating the ease of track selection using the number pad.

5. Voice Recording

- 1. Ensure a USB drive or SD card is inserted into the device.
- 2. Press the REC button. The display will show "REC" and a recording indicator.
- 3. Speak clearly into the built-in microphone.
- 4. Press the **REC** button again to stop and save the recording.
- 5. To play back recordings, switch to MP3 mode and navigate to the recorded files.



Figure 8: The Amkette Pocket Blast displaying "REC" during voice recording, indicating the device is actively capturing audio.

6. AUX Mode

- 1. Connect an audio device (e.g., smartphone, laptop) to the AUX-in port on the Pocket Blast using a 3.5mm audio cable (not included).
- 2. Power on the device.
- 3. Press the Mode (M) button until "AUX" appears on the display.
- 4. Audio from the connected device will now play through the Pocket Blast. Control playback from your connected audio device.

MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the exterior of the device. Do not use abrasive cleaners, solvents, or strong chemicals.
- Storage: Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

- Battery Care: To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- Water Exposure: This device is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Power switch is off.	Charge the device; Ensure the power switch is in the "ON" position.
No sound.	Volume too low; Incorrect mode selected; Device not paired (Bluetooth).	Increase volume; Press Mode button to select correct input; Re-pair Bluetooth device.
Poor FM reception.	Weak signal; Antenna not extended.	Extend the external antenna fully; Try repositioning the device for better signal.
Cannot record voice/FM.	No USB drive/SD card inserted; Storage full.	Insert a compatible USB drive or SD card; Delete old files or use a new storage device.
Bluetooth connection unstable.	Device too far from source; Interference.	Move the device closer to the Bluetooth source; Avoid obstacles or other wireless devices.

SPECIFICATIONS

Feature	Detail
Brand	Amkette
Model Name	Pocket Blast
Product Dimensions	12 x 4.1 x 7.8 cm
Item Weight	264 g
Connectivity Technology	Bluetooth
Tuner Technology	FM
Hardware Interface	USB
Display Type	LCD
Speakers Maximum Output Power	6 Watts
Power Source	Battery Powered
Battery Average Life	7+ Hours (Bluetooth mode)
Battery Cell Composition	Lithium Ion
Material	Plastic

Feature	Detail
Special Features	7+ hours playback, Type-C charging, FM with hidden antenna & number pad, Inbuilt Mic for Voice & FM Recording & Calls, Multi Playback Options (BT, FM, SD, USB, AUX), Superior Sound Quality.



Figure 9: Physical dimensions of the Amkette Pocket Blast: 12 cm (length), 4.1 cm (width), and 7.8 cm (height).

WARRANTY AND SUPPORT

The Amkette Pocket Blast comes with a **1-Year Manufacturing Warranty**. For any issues or support, please contact the customer support team. Contact details can typically be found on the product packaging or the official Amkette website. For further assistance, visit the official Amkette Store: Amkette Store on Amazon.in

IMPORTANT SAFETY INFORMATION

- Do not disassemble, repair, or modify the device. This may void the warranty and pose safety risks.
- Keep the device away from extreme heat sources, open flames, and direct sunlight.
- Do not expose the device to water or other liquids.
- Use only the provided charging cable or a certified Type-C cable for charging.
- · Keep out of reach of children.

VIDEO RESOURCES

Please note: While the product information indicates the availability of videos, specific URLs with creator type and filename details were not provided in the input data. Therefore, no videos can be embedded in this manual.



Related Documents - Pocket Blast



Amkette Pocket Blast Bluetooth Speaker User Guide

User guide for the Amkette Pocket Blast Bluetooth Speaker. This document provides technical specifications, troubleshooting tips, warranty information, and detailed instructions for using Bluetooth pairing, FM radio, USB/SD card playback, and recording functions.



Amkette Boomer MAXX 500 User Guide: Features, Pairing, and Troubleshooting

Comprehensive user guide for the Amkette Boomer MAXX 500 Bluetooth speaker. Learn about setup, charging, TWS pairing, AUX and USB playback, voice assistant activation, troubleshooting, specifications, and warranty information.



EvoFox Elite X2 Pro Wireless Gamepad Quick Start Guide

This guide provides instructions for setting up and using the EvoFox Elite X2 Pro Wireless Gamepad, including charging, Bluetooth and USB connectivity, button functions, and advanced features like macros and vibration control.



Amkette EvoFox ElitePro Wireless Gamepad PC Quick Start Guide

Get started with your Amkette EvoFox ElitePro Wireless Gamepad for PC. This guide covers setup, connection, troubleshooting, specifications, and warranty information for a seamless gaming experience.



AMKETTE Hush Pro ASTRA Wireless Mouse - Quick Start Guide

Get started with your AMKETTE Hush Pro ASTRA Wireless Mouse. This guide covers setup, features like power saving and DPI adjustment, specifications, and warranty information.



Amkette EvoFox One S Universal Wireless Gamepad Quick Start Guide

A comprehensive guide to setting up and using the Amkette EvoFox One S Universal Wireless Gamepad, covering features like macros, turbo settings, vibration levels, and connectivity modes for various platforms including PC, PS3, PS4, Switch, Android, and iOS.