

[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL 3-Seater Garden Swing Bench with Canopy Instruction Manual

vidaXL 49228

vidaXL 3-Seater Garden Swing Bench with Canopy

Model: 49228

1. INTRODUCTION

This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your vidaXL 3-Seater Garden Swing Bench with Canopy. Designed for outdoor relaxation, this swing bench features a durable poly rattan construction, a sturdy powder-coated steel frame, and a protective textilene canopy. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product.



Figure 1.1: Overview of the vidaXL 3-Seater Garden Swing Bench with Canopy.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- **Adult Assembly Required:** This product requires adult assembly. Keep small parts away from children during assembly.
- **Stable Surface:** Always place the swing bench on a flat, stable, and level surface to prevent tipping.
- **Weight Limit:** Do not exceed the maximum weight capacity of the swing bench. Refer to the specifications section for details.

- **Weather Conditions:** In strong winds or severe weather, it is recommended to secure the swing bench or remove the canopy to prevent damage.
- **Cushion Use:** The included cushions and pads are designed for outdoor use only. Do not bring them inside a dwelling for storage if they are wet or damp, as this may lead to mold or mildew.
- **Regular Inspection:** Periodically check all bolts, nuts, and connections to ensure they are tight and secure. Retighten as necessary.
- **No Standing:** Do not stand on the swing bench or use it as a ladder.
- **Children Supervision:** Children should be supervised at all times when using the swing bench.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- ✓ 1 x Swing bench frame and components
- ✓ 1 x Seat cushion
- ✓ 2 x Pillow
- ✓ 1 x Canopy fabric
- ✓ Assembly hardware (bolts, nuts, washers, tools if included)

4. SETUP AND ASSEMBLY

Assembly of the vidaXL 3-Seater Garden Swing Bench is required. It is recommended to assemble the product with at least two adults. Clear a spacious area for assembly and lay out all components on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and identify them against the package contents list.
2. **Assemble Base Frame:** Begin by assembling the main base frame of the swing bench using the provided hardware. Ensure all connections are finger-tight at this stage.
3. **Attach Upright Supports:** Connect the upright supports that will hold the swing and the canopy to the base frame.
4. **Assemble Swing Seat:** Construct the swing seat component, ensuring the poly rattan weaving is securely attached to its frame.
5. **Hang Swing Seat:** Carefully lift and attach the assembled swing seat to the upright supports using the hanging springs and hooks.



Figure 4.1: Detail of the spring mechanism for hanging the swing seat.

- 6. Install Canopy Frame and Fabric:** Assemble the canopy frame and attach it to the top of the upright supports. Then, stretch and secure the textilene canopy fabric over the frame.



Figure 4.2: Side view showing the overall structure and canopy.

7. **Tighten All Connections:** Once all components are in place, systematically tighten all bolts and nuts using the provided tools. Do not overtighten.
8. **Place Cushions:** Position the seat cushion and pillows on the swing bench.



Figure 4.3: Detail showing how the cushion is secured to the bench.

5. OPERATING INSTRUCTIONS

Using your vidaXL Garden Swing Bench is straightforward. Follow these guidelines for optimal enjoyment:

- **Seating:** Gently sit on the swing bench. Avoid sudden movements or jumping onto the seat. The bench is designed for up to three individuals.
- **Swinging Motion:** Initiate a gentle swinging motion by pushing off the ground with your feet. Avoid excessive or violent swinging, which could strain the frame or cause instability.
- **Canopy Adjustment:** The canopy can be adjusted to provide optimal shade throughout the day. Loosen the adjustment knobs (if applicable) on the canopy frame, reposition the canopy to your desired angle, and then tighten the knobs to secure it.



Figure 5.1: Illustration of the canopy's adjustable range.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and extend the lifespan of your swing bench.

- **Cleaning Poly Rattan and Steel Frame:** Wipe down the poly rattan and powder-coated steel frame with a soft cloth dampened with mild soap and water. Rinse thoroughly with clean water and dry completely to prevent water spots or rust. Avoid abrasive cleaners or brushes.



Figure 6.1: Detail of the durable poly rattan material.

- **Cushion Care:** The cushion covers are removable for easy cleaning. Follow the care instructions on the cushion labels. For general cleaning, spot clean with a mild detergent and water. Allow to air dry completely before reattaching or storing. Store cushions indoors during inclement weather or prolonged periods of non-use to protect them from fading and wear.
- **Canopy Care:** Clean the textilene canopy fabric with a soft brush and mild soapy water. Rinse well and allow to air dry.
- **Hardware Check:** Periodically inspect all bolts, nuts, and connections. Tighten any loose hardware to maintain stability and safety.
- **Winter Storage:** During winter months or extended periods of non-use, it is advisable to store the swing bench in a dry, sheltered area to protect it from harsh weather conditions.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Swing bench feels unstable or wobbly.	Loose hardware; uneven ground.	Ensure all bolts and nuts are securely tightened. Move the bench to a flat, level surface.
Squeaking noise during swinging.	Friction at pivot points or springs.	Apply a silicone-based lubricant to the springs and any moving metal-on-metal connections.
Canopy does not stay in position.	Adjustment knobs are loose.	Tighten the canopy adjustment knobs firmly after positioning.

Problem	Possible Cause	Solution
Cushions appear faded or worn.	Prolonged exposure to sun/weather.	Store cushions indoors when not in use or during harsh weather. Consider using protective covers for the entire bench.

8. SPECIFICATIONS

Key technical specifications for the vidaXL 3-Seater Garden Swing Bench:

Model: 49228

Color: Black frame, Cream white cushions

Material: Poly rattan, Powder-coated steel, Textilene (canopy), 100% Polyester fabric (cushions)

Overall Dimensions (W x D x H): 65.7" x 51.1" x 70" (167 cm x 130 cm x 178 cm)



Figure 8.1: Dimensional overview of the swing bench.

Seat Size (W x D): 47.2" x 20" (120 cm x 51 cm)

Height of Backrest: 17.7" (45 cm)

Item Weight: Approximately 82.9 pounds (37.6 kg)

Assembly Required: Yes

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact vidaXL customer service. Keep your purchase receipt and model number (49228) handy for faster service.

Visit the official vidaXL website for more information: www.vidaxl.com