



[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL 4x4m Blue Party Tent Instruction Manual

vidaXL 4x4m

vidaXL 4x4m Blue Party Tent Instruction Manual

Model: 4x4m Blue Party Tent

INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your vidaXL 4x4m Blue Party Tent. Please read all instructions carefully before use and retain this manual for future reference.

Your party tent is designed to provide a wonderful space for outdoor gatherings and events. It is constructed from UV and water-resistant polyethylene fabric and features a sturdy alloy steel frame for stability and durability.

IMPORTANT SAFETY WARNING: This product should NEVER be used in adverse weather conditions such as strong winds, heavy rain, snow, or thunderstorms. The product is not suitable for use as a car shelter.

SETUP AND ASSEMBLY

The vidaXL Party Tent is designed for easy assembly. It is recommended that at least two people assemble the tent to ensure safety and efficiency.

Components Overview

Before starting assembly, ensure all components are present and undamaged. Refer to the packing list for a complete inventory.

- Frame poles (alloy steel)
- Connectors
- Tent cover (polyethylene, 90 g/m²)
- Side panels with decorative windows
- Door panel with zipper
- Ground stakes and ropes (if included)

Assembly Steps

1. **Unpack and Sort:** Carefully unpack all parts and lay them out on a clean, flat surface. Group similar components together.

2. **Assemble the Roof Frame:** Connect the shorter poles and corner connectors to form the top square frame. Then, attach the roof peak poles and central connector.
3. **Attach the Roof Cover:** Drape the polyethylene roof cover over the assembled roof frame. Ensure it is centered and secured.
4. **Assemble the Leg Poles:** Attach the vertical leg poles to the roof frame connectors. Gradually raise the structure, ensuring all connections are secure.
5. **Secure the Base:** Attach the bottom frame poles to the leg poles.
6. **Install Side Panels:** Attach the side panels to the frame using the provided fasteners. The tent includes side panels with decorative windows and one door panel with a zipper for easy access.
7. **Anchor the Tent:** Secure the tent to the ground using ground stakes and ropes (if provided) to prevent movement in light winds.

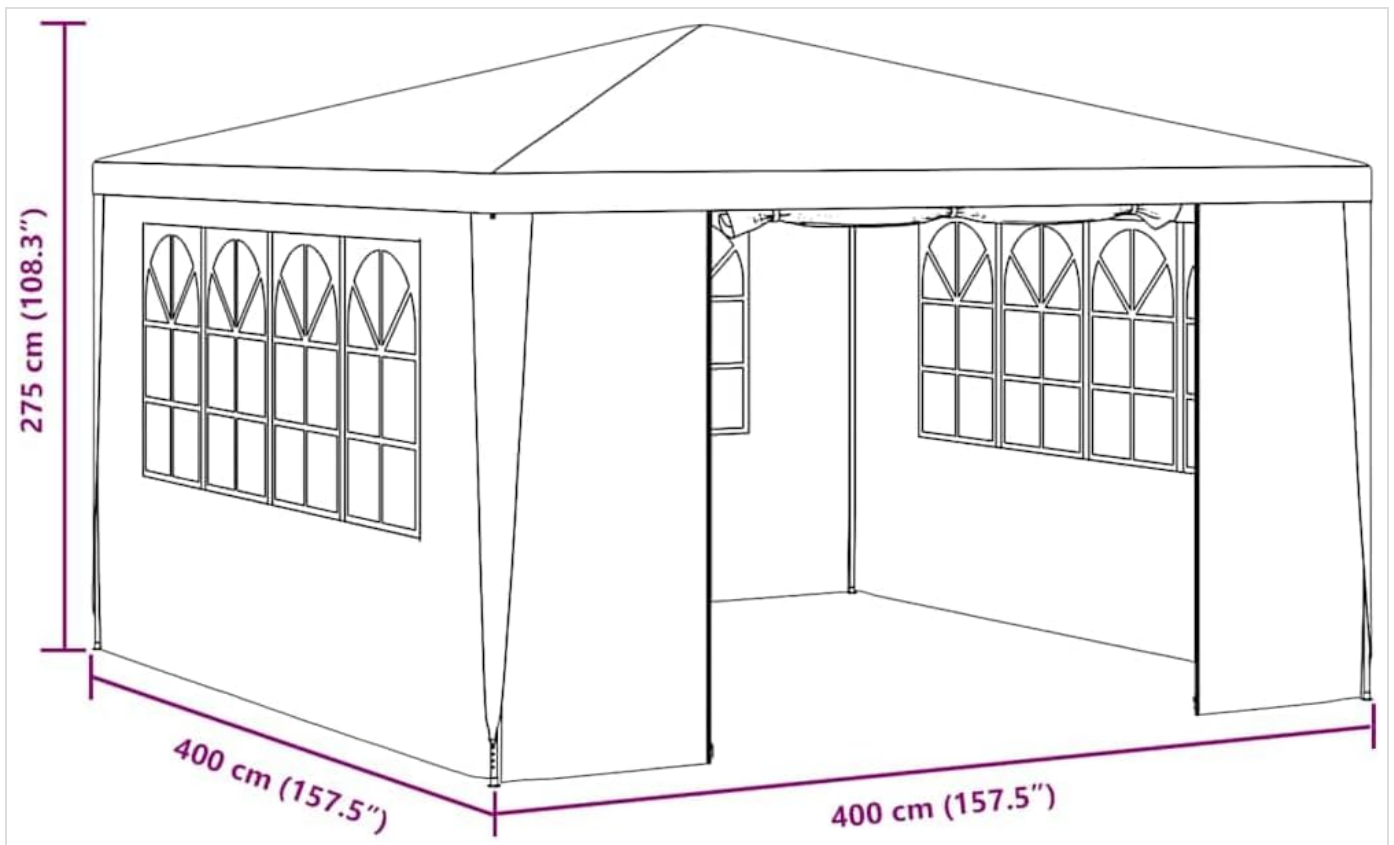


Figure 1: Tent dimensions diagram. The tent measures 400 cm (157.5 inches) in length and width, with a height of 275 cm (108.3 inches).

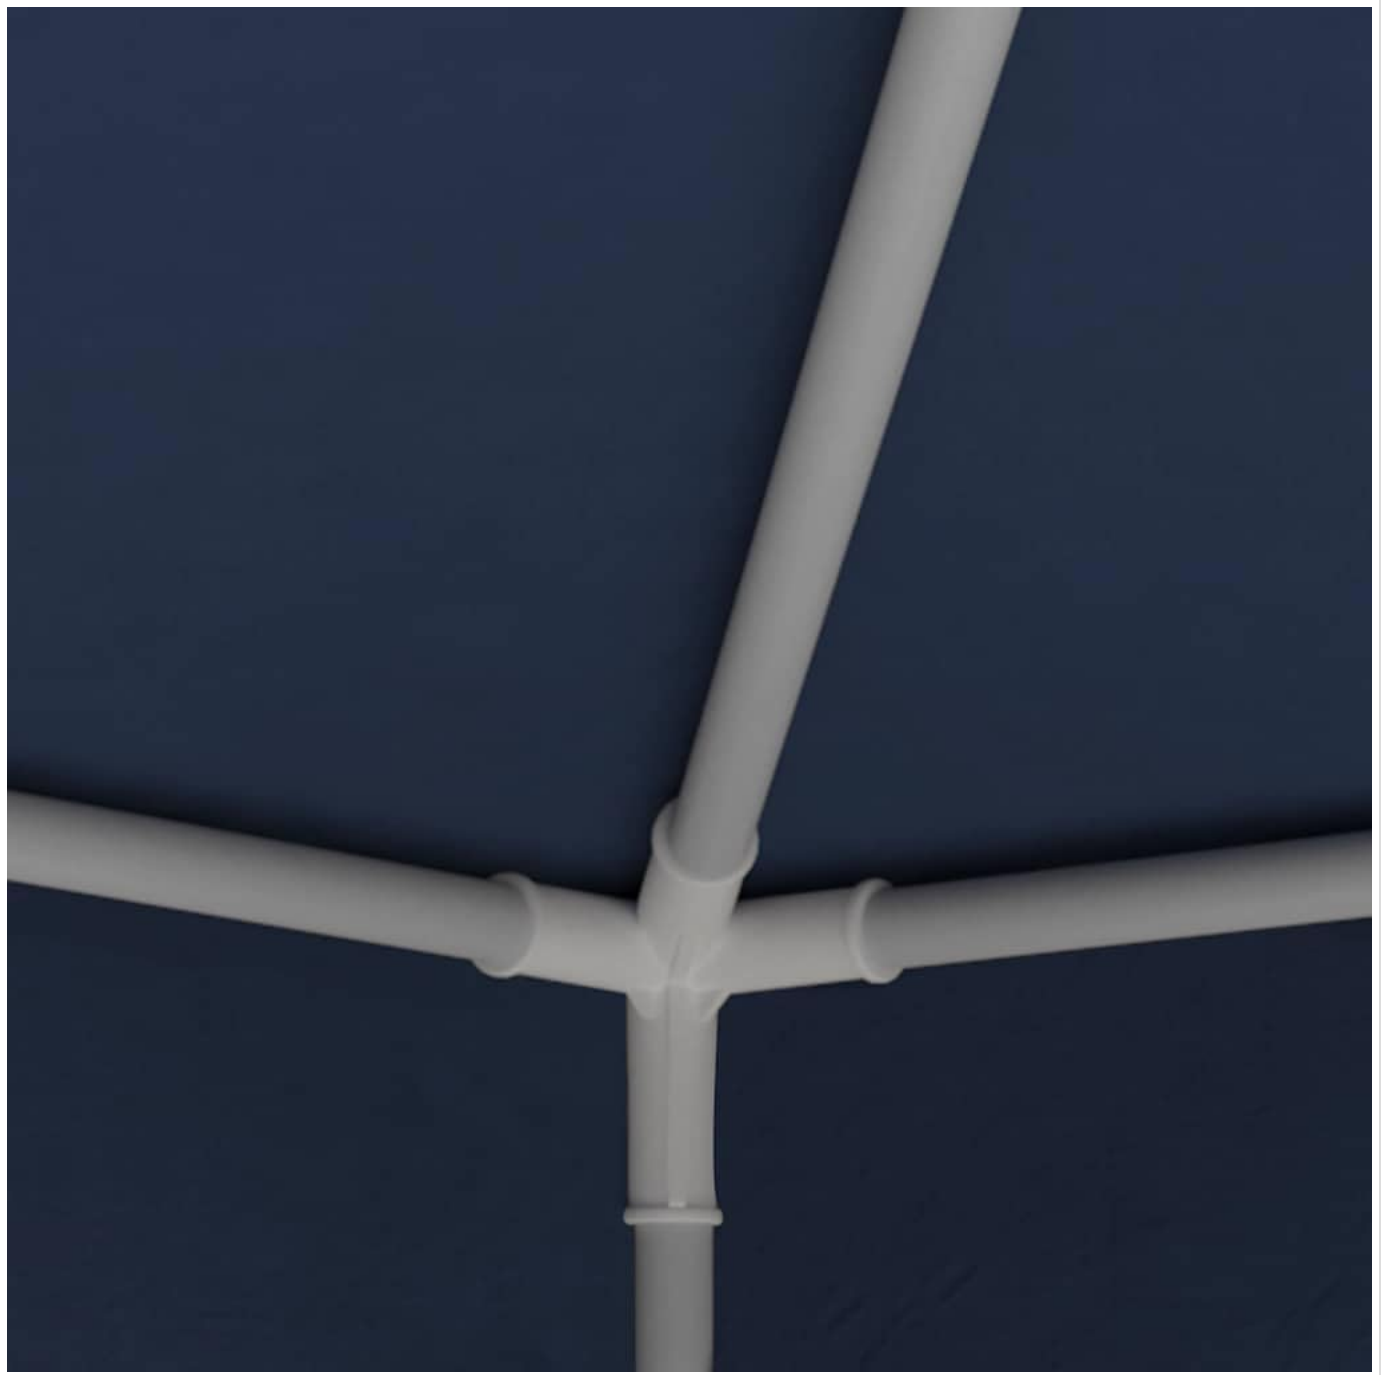


Figure 2: Detail of a frame connector, illustrating how the alloy steel poles connect to form the tent structure.



Figure 3: Tent leg pole detail, showing the attachment point for the tent fabric and the base for ground stability.

OPERATING INSTRUCTIONS

Once assembled, your vidaXL Party Tent is ready for use. It is ideal for various outdoor events and gatherings.

Usage Guidelines

- **Entry and Exit:** Utilize the zippered door panel for convenient entry and exit.
- **Ventilation:** The decorative windows on the side panels allow for some light.
- **Weather Conditions:** Always monitor weather forecasts. Disassemble the tent immediately if strong winds, heavy rain, snow, or thunderstorms are predicted or occur. Failure to do so can result in damage to the tent and potential

injury.

- **Ground Stability:** Ensure the tent remains securely anchored to the ground at all times during use.



Figure 4: The vidaXL party tent set up in an outdoor environment, showcasing its use for gatherings.



Figure 5: Detail of the zipper on the door panel, providing easy access to the tent interior.

MAINTENANCE

Proper maintenance will extend the lifespan of your vidaXL Party Tent.

Cleaning

- **Fabric:** Clean the polyethylene fabric with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners, as these can damage the UV and water-resistant coating.
- **Frame:** Wipe the steel frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before storage to prevent rust.

Storage

- Before storing, ensure all parts of the tent (fabric and frame) are completely dry to prevent mold, mildew, and rust.
- Disassemble the tent according to the reverse of the assembly instructions.

- Store components in their original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

This section addresses common issues you might encounter with your party tent.

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	Improper assembly; insufficient anchoring; uneven ground.	Ensure all frame connections are secure. Verify the tent is properly anchored with stakes and ropes. Move to a level surface if possible.
Water pooling on the roof.	Incorrect roof cover tension; heavy rain exceeding design capacity.	Adjust the roof cover to ensure proper tension and drainage. Do not use in heavy rain. Disassemble if pooling occurs.
Zipper on door panel sticks or is difficult to operate.	Dirt or debris in zipper teeth; fabric caught in zipper.	Clean the zipper teeth with a small brush. Gently pull fabric away from the zipper path. Apply a zipper lubricant if necessary.
Small tears or holes in fabric.	Sharp objects; wear and tear.	Patch with a suitable tent repair kit. For larger damage, consider replacing the affected panel.

SPECIFICATIONS

Detailed technical specifications for the vidaXL 4x4m Blue Party Tent.

Brand: vidaXL

Model: 4x4m Party Tent

Color: Blue

Material (Fabric): 100% Polyethylene (PE), 90 g/m²

Material (Frame): Alloy Steel

Product Dimensions (L x W x H): 4 x 4 x 2.75 m (157.5 x 157.5 x 108.3 inches)

Product Weight: 10.2 kg (22.5 lbs)

UV Protection: Yes

Waterproof Level: Waterproof

Recommended Use: Outdoor parties and gatherings

WARRANTY AND SUPPORT

For warranty information, replacement parts, or further support, please contact vidaXL customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can also visit the official vidaXL website for additional resources and support information www.vidaxl.com

