

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [IRIS OHYAMA](#) /
- › [IRIS OHYAMA 2-Burner IH Cooking Heater IHK-W13-B Instruction Manual](#)

IRIS OHYAMA IHK-W13-B

IRIS OHYAMA 2-Burner IH Cooking Heater

Model: IHK-W13-B

INTRODUCTION

This manual provides essential information for the safe and efficient use of your IRIS OHYAMA 2-Burner IH Cooking Heater, model IHK-W13-B. Please read these instructions thoroughly before operating the appliance and retain them for future reference.

The IRIS OHYAMA 2-Burner IH Cooking Heater is a convenient appliance that requires no special electrical installation, allowing for immediate use. It offers a safe cooking environment as it does not use an open flame, and its design helps keep the kitchen area cool, making it comfortable for cooking even in warmer seasons.

SAFETY PRECAUTIONS

To prevent accidents, injuries, or property damage, always observe the following safety precautions:

- Do not immerse the appliance in water or other liquids.
- Ensure the power cord is not damaged or pinched.
- Keep children away from the appliance during operation.
- Use only compatible cookware as specified in this manual.
- Do not place metallic objects (e.g., knives, forks, spoons, lids) on the top plate, as they may become hot.
- Avoid blocking the ventilation openings of the appliance.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance if it is damaged or malfunctioning. Contact customer support for assistance.

PACKAGE CONTENTS

Verify that all components are present in the package:

- IRIS OHYAMA 2-Burner IH Cooking Heater (Model IHK-W13-B)
- Instruction Manual

SETUP

The IRIS OHYAMA 2-Burner IH Cooking Heater is designed for easy setup without requiring special electrical work.

1. **Unpacking:** Carefully remove the appliance from its packaging.
2. **Placement:** Place the unit on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the appliance. The unit is designed to fit neatly into a standard gas stove space of approximately 60 cm width.
3. **Power Connection:** Plug the power cord into a standard AC100V (50/60Hz) electrical outlet. Ensure the outlet is easily accessible.



Image: Top view of the IRIS OHYAMA 2-Burner IH Cooking Heater IHK-W13-B, showing the two cooking zones and control panel.

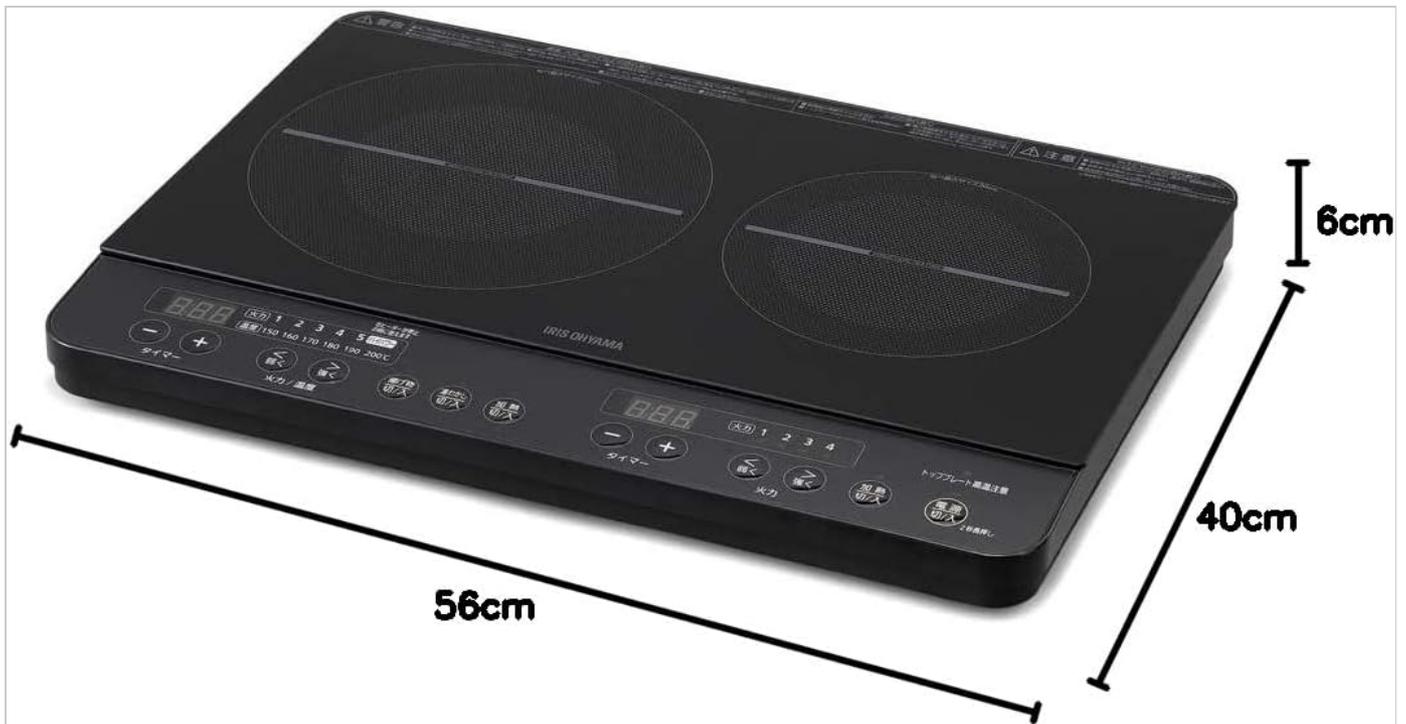


Image: Angled view of the IRIS OHYAMA 2-Burner IH Cooking Heater IHK-W13-B, illustrating its dimensions: approximately 56 cm width, 40 cm depth, and 6 cm height.

The appliance features a simple control panel with clear indicators for time and temperature settings, designed for ease of use. The buttons are slightly angled for comfortable pressing.

Power On/Off

- Press the power button to turn the unit on or off.

Heat Adjustment (Heating Mode)

The left and right heaters have different heat settings:

- **Left Heater:** Offers 6 levels of heat adjustment, from approximately 100W equivalent to 1400W.
- **Right Heater:** Offers 4 levels of heat adjustment, from approximately 100W equivalent to 700W.

Cooking Modes

- **Frying Mode:** Available only on the left heater. This mode offers 6 oil temperature settings from approximately 150°C to 200°C, making it convenient for deep-frying. This mode cannot be used while the right heater is in operation.
- **Boil Mode:** Available only on the left heater. When water boils, a buzzer will sound, the heat will be reduced, and the water will be kept warm for 3 minutes before automatically turning off. This mode cannot be used while the right heater is in operation.

Timer Function

- The timer can be set from 1 minute up to 9 hours and 50 minutes.
- The timer cannot be used during Frying Mode or Automatic Boil Mode.

COMPATIBLE COOKWARE

The type of pot that can be used with an IH cooker varies depending on its material and size. For optimal performance and safety, we recommend using pots with the SG mark from the Product Safety Association foundation.

- **Left Heater:** Compatible with pots with a diameter of 12 cm to 26 cm.
- **Right Heater:** Compatible with pots with a diameter of 12 cm to 20 cm.

MAINTENANCE AND CLEANING

The flat glass top design allows for easy cleaning.

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the top plate with a soft cloth dampened with a mild detergent.
- For stubborn stains, use a non-abrasive cleaner specifically designed for glass ceramic cooktops.
- Do not use abrasive pads, harsh chemicals, or steam cleaners.
- Clean the ventilation openings regularly to prevent dust buildup.

TROUBLESHOOTING

If you encounter issues with your IH Cooking Heater, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Appliance does not turn on.	Check if the power cord is securely plugged into the outlet. Ensure there is power to the outlet.
Heating does not start.	Verify that a compatible pot is placed correctly on the cooking zone. The pot detection function may be active.
Error code displayed.	Refer to the specific error code in the full manual (if available) or contact customer support. Common causes include incompatible cookware or overheating.
Unusual noise during operation.	A low humming sound is normal for IH cookers. If the noise is loud or unusual, ensure the appliance is on a stable surface and ventilation is not blocked.

SPECIFICATIONS

Feature	Specification
Product Dimensions (W x D x H)	Approx. 56 cm x 40 cm x 6 cm
Weight	Approx. 5.5 kg
Main Materials	Body: ABS resin, PC; Bottom plate: Polypropylene; Top plate: Crystallized glass
Power Supply	AC100V (50/60Hz common)
Rated Power Consumption	1400W
Power Cord Length	Approx. 2.5 m
Left Heater Heat Adjustment	6 levels (approx. 100W to 1400W equivalent)
Right Heater Heat Adjustment	4 levels (approx. 100W to 700W equivalent)
Frying Temperature Settings	6 levels (approx. 150°C to 200°C oil temperature)
Timer	1 minute to 9 hours 50 minutes
Safety Functions	Pot detection, No-pot detection, Small object detection, Automatic power-off for forgotten operation, Top plate overheat prevention

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your product or visit the official IRIS OHYAMA website. Keep your purchase receipt as proof of purchase for warranty claims.

