

Pipishell PIMF7

Pipishell Full Motion TV Wall Mount User Manual

MODEL: PIMF7

Introduction

This manual provides comprehensive instructions for the safe and proper installation, operation, and maintenance of your Pipishell Full Motion TV Wall Mount. Please read this manual thoroughly before beginning installation to ensure correct setup and to prevent damage to your television or the mount.

The Pipishell Full Motion TV Wall Mount (PIMF7) is engineered to securely hold 26-60 inch flat or curved televisions weighing up to 77 lbs. Its articulating arms allow for versatile viewing angles, including extension, tilt, swivel, and post-installation leveling, providing an optimal viewing experience.



Figure 1: Overview of the Pipishell Full Motion TV Wall Mount components.

Safety Information

WARNING: Failure to read and follow all instructions can result in personal injury, property damage, or voiding of your warranty. If you do not understand these instructions or have doubts about the safety of the installation, please contact a qualified installer or Pipishell customer support.

- Do not install this mount on drywall alone. It must be mounted into wood studs, solid concrete, or brick walls.
- Ensure the wall structure can safely support the combined weight of the mount and your TV.
- Do not exceed the maximum weight capacity of 77 lbs (35 kg).
- This mount is designed for TVs between 26 and 60 inches. Verify your TV's size and VESA pattern before installation.
- Always use a stud finder to locate wood studs accurately.
- Use appropriate safety gear during installation, including eye protection.
- Keep children and pets away during installation.

Package Contents

Please verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact Pipishell customer support for assistance.

- TV Wall Mount Assembly (Wall Plate, Articulating Arm, VESA Plate)
- Mounting Hardware Kit (various screws, washers, spacers for TV and wall)
- Leveling Tool
- Cable Ties
- Instruction Manual

Specifications

Feature	Specification
Brand	Pipishell
Model Number	PIMF7
TV Size Compatibility	26 - 60 inches
Weight Capacity	Up to 77 lbs (35 kg)
VESA Compatibility	75x75mm to 400x400mm
Wall Type Compatibility	Wood Stud, Solid Concrete, Brick Wall (Do not install on drywall alone)
Tilt Angle	+5° / -15°
Swivel Angle	+/- 90°
Leveling Adjustment	+/- 4°
Extension from Wall	2.36 inches (retracted) to 17 inches (extended)
Material	Alloy Steel

RELIABLE TV STABILITY



Figure 2: The mount is designed for reliable TV stability, supporting up to 77 lbs.

WIDE TV COMPATIBILITY



VESA PATTERNS

400x400mm	400x300mm	400x200mm
300x300mm	300x200mm	200x400mm
200x300mm	200x200mm	200x100mm
100x200mm	100x100mm	75x75mm

Figure 3: Wide TV compatibility for screens ranging from 26 to 60 inches, supporting various VESA patterns.

VESA PATTERNS

Please verify your TV's VESA size

Option A



75 x 75mm (3" x 3")
100 x 100mm (3.9" x 3.9")
100 x 200mm (3.9" x 7.9")
200 x 100mm (7.9" x 3.9")
200 x 200mm (7.9" x 7.9")

Option B



200 x 300mm (7.9" x 11.8")
200 x 400mm (7.9" x 15.7")

Option C




300 x 300mm (11.8" x 11.8")
400 x 400mm (15.7" x 15.7")

Option D



300 x 200mm (11.8" x 7.9")
400 x 200mm (15.7" x 7.9")

Option E

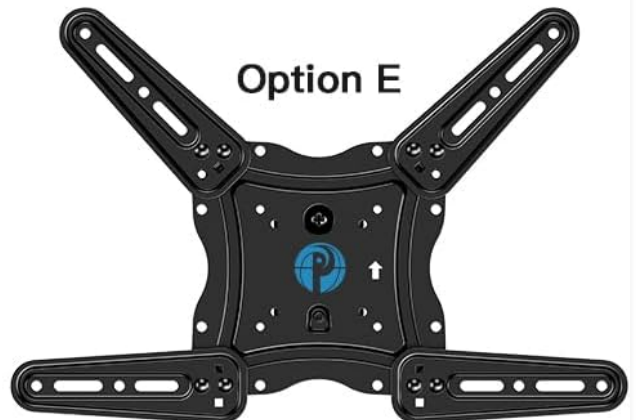

400 x 300mm (15.7" x 11.8")

Figure 4: Verify your TV's VESA size using the provided pattern options for proper fit.

Pre-Installation Checklist

- **Verify TV Compatibility:** Ensure your TV's size (26-60 inches), weight (under 77 lbs), and VESA pattern (75x75mm to 400x400mm) are compatible with the mount.
- **Identify Wall Type:** Determine if your wall is wood stud, solid concrete, or brick. **DO NOT install on drywall alone.**
- **Gather Tools:** You will need a stud finder, drill, level, measuring tape, pencil, and a Phillips head screwdriver.

CHECK TV SPECS

TV Size: **26"–60"**

Max Load: **77 lbs**



Figure 5: Compatible wall types for secure installation. Always avoid installing on drywall without proper anchoring into a stud or concrete.

Installation Steps

1. Step 1: Mount the Arm Assembly on the Wall.

Using a stud finder, locate the center of a wood stud. Mark the drilling locations for the wall plate. For concrete or brick walls, use a masonry drill bit and anchors (included) as per instructions. Secure the wall plate firmly to the wall using the provided lag bolts.

2. Step 2: Connect the Faceplate to Your TV.

Attach the VESA plate (faceplate) to the back of your TV using the appropriate screws, washers, and spacers from the hardware kit. Ensure the plate is centered and securely fastened to your TV's VESA mounting holes.

3. Step 3: Hang the TV on the Arm Assembly.

Carefully lift your TV with the attached VESA plate and hook it onto the articulating arm assembly. Ensure the TV is properly seated and secured. Tighten any safety screws or locking mechanisms to prevent accidental dislodging.

**FITS TVs &
MONITORS**



Operating

Adjusting Your TV Mount

The Pipishell Full Motion TV Wall Mount offers various adjustments to achieve your desired viewing angle:

- **Extension/Retraction:** Gently pull the TV away from the wall to extend the arm up to 17 inches, or push it back towards the wall to retract it to a low-profile 2.36 inches.
- **Swivel:** Pivot the TV left or right up to +/- 90 degrees to direct the screen towards your viewing position.
- **Tilt:** Adjust the vertical angle of your TV from +5 degrees (upward) to -15 degrees (downward) to reduce glare or optimize viewing from different heights.
- **Leveling:** After installation, you can fine-tune the TV's horizontal level by rotating it +/- 4 degrees to ensure it is perfectly straight.

FULL MOTION FLEXIBILITY



Figure 7: The full motion design allows for flexible positioning, including tilt, swivel, and extension.



Figure 8: Fine-tune your TV's position with +/- 4 degrees of leveling adjustment for a perfect view.

Maintenance

Regular maintenance helps ensure the longevity and safe operation of your TV wall mount.

- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust. Do not use abrasive cleaners or solvents.
- **Periodic Checks:** Periodically check all screws and connections to ensure they remain tight and secure. Over time, vibrations or frequent adjustments may loosen fasteners.
- **Lubrication:** The articulating joints are designed for smooth movement. If you notice any stiffness, a small amount of silicone-based lubricant can be applied to the pivot points.

Troubleshooting

If you encounter any issues with your Pipishell TV Wall Mount, refer to the common problems and solutions below:

Problem	Possible Cause / Solution
TV is not level after installation.	Use the +/- 4° leveling adjustment feature to correct the tilt. Ensure the wall plate is level during initial installation.
Mount feels loose or wobbly.	Check all wall mounting bolts and TV attachment screws. Tighten any loose fasteners. Ensure the mount is installed into a solid structural element (wood stud, concrete, or brick).
Difficulty moving the articulating arm.	The joints may be stiff. Apply a small amount of silicone-based lubricant to the pivot points. Ensure no cables are snagged.
TV does not fit the mount.	Verify your TV's VESA pattern and weight against the mount's specifications. This mount supports VESA patterns from 75x75mm to 400x400mm and TVs up to 77 lbs.

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Pipishell website. You can also contact Pipishell directly for assistance with product inquiries, technical support, or replacement parts.

Manufacturer: Pipishell

Contact: Refer to your product packaging or the Pipishell brand store on Amazon for the most current support contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question