

[Manuals.plus](#) /

› [PetDroid](#) /

› PetDroid Interactive Dog Toy Ball Instruction Manual

PetDroid M04-Bundle

PetDroid Interactive Dog Toy Ball Instruction Manual

Model: M04-Bundle

Brand: PetDroid

INTRODUCTION

Welcome to your new PetDroid Interactive Dog Toy Ball. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device. Designed to keep your canine companion entertained, this motion-activated ball offers two distinct play modes and is built for durability.

SETUP

Package Contents

- Interactive Dog Ball Toy
- Tennis Cover
- USB Cable
- User Manual

Package Included



Dog ball toy



Tennis cover



USB cable



User manual

Figure 1: Included package contents.

Initial Charging

Your PetDroid Interactive Dog Toy Ball comes with a built-in 600mAh battery. Before first use, fully charge the device.

1. Locate the silicone switch button on the ball.
2. Gently remove the silicone switch button to reveal the charging port.
3. Plug the included USB cable into the charging port and connect the other end to a suitable USB power source (e.g., computer, wall adapter).
4. Charging time is approximately 1.5 hours for 4 hours of continuous working time.

Built-in G-sensor Touch Activated

Rechargeable Large Capacity Battery



Touch Induction Activated



Charge 1.5 hours work for 4 hours

Figure 2: Charging the PetDroid Interactive Dog Toy Ball.

Suitable for multiple sites

Keep Your Dogs Interested and Busy

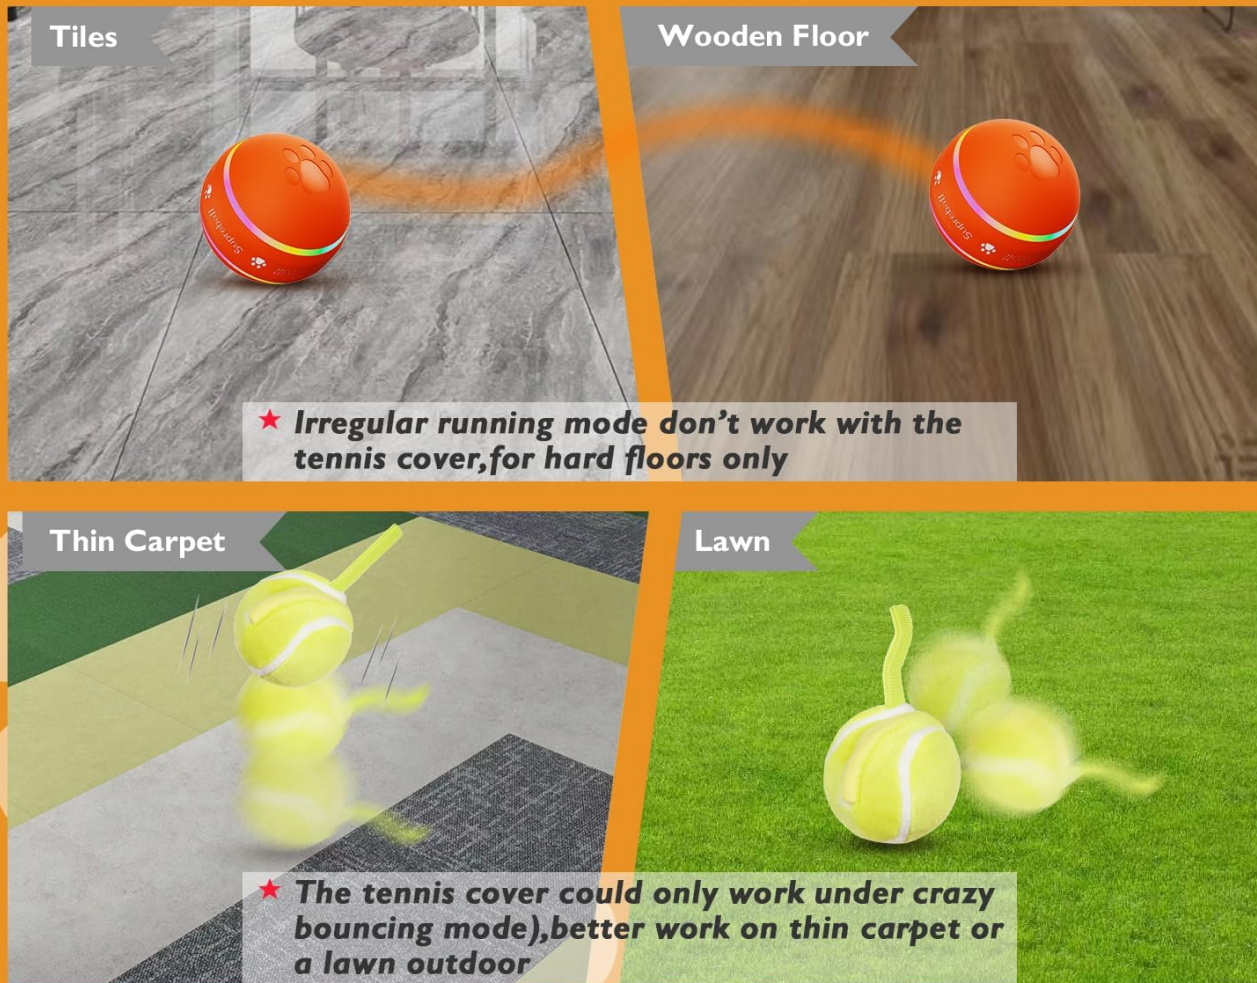


Figure 3: Step-by-step guide for initial setup and charging.

OPERATING INSTRUCTIONS

Powering On/Off

After charging, cover the rubber cap and press the button to turn it on.

Play Modes

The PetDroid Interactive Dog Toy Ball features two distinct play modes to suit different environments and dog preferences.

1. Irregular Rolling Mode (Blue Light)

Press the first button (indicated by a blue light). In this mode, the ball will automatically move and rotate for 25 seconds, then pause for 5 seconds, repeating this cycle for a total of 2 minutes before entering standby mode. This mode is recommended for use on hard floors only and is not suitable for use with the tennis cover. It is also not recommended for aggressive chewers.

2. Crazy Bouncing Mode (Red Light)

Press the second button (indicated by a red light). In this mode, the ball will bounce for 10 seconds, stop for 5 seconds, repeating this cycle. It operates for a total of 1 minute before entering standby mode.

The tennis cover can only be used in this mode. It is special for slight chewers and works better on thin carpet or a lawn outdoors to reduce noise.

Without Tennis Cover-Random rolling mode

With Tennis Cover-Crazy Bouncing Mode



Random Rolling Mode

Press the button 1st (● **Blue light**), recommend for use on hard surfaces, no need to put on a dog ball cover



Crazy Bouncing Mode

Press the button 2nd(● **Red light**), recommended to use ball cover for reducing noise and increasing fun

Figure 4: Comparison of Irregular Rolling Mode and Crazy Bouncing Mode.

Motion Activation

Equipped with a built-in motion sensor, the toy automatically activates when your dog touches or bites it. It will then roll or bounce according to the selected mode. The ball also has built-in multi-color flashing lights to attract attention.

Durable & Safe Materials

Waterproof Design for Indoor and Outdoor Use



Made of Polyamide, Durable and Safe, BUT NOT FOR AGGRESSIVE CHEWERS



Waterproof:IP54, Meet the requirements for indoor and outdoor use

Figure 5: Motion-activated feature of the toy ball.

Adapting to Different Surfaces

The ball is suitable for various indoor and outdoor surfaces.

- For hard floors (tiles, wooden floors), use the Irregular Rolling Mode without the tennis cover.
- For thin carpets or lawns, use the Crazy Bouncing Mode with the tennis cover for reduced noise and enhanced play.

Specially designed for dogs only

Easy to Use



1 Remove the silicone switch button from the ball



2 Plug it into the **USB** charging cable



3 Cover the rubber cap and press the button to turn it on



4 Put on the ball cover and fasten it tightly with the Velcro

Figure 6: Recommended usage for different surfaces.

Introducing the Toy to Your Dog

To help your dog warm up to the new toy:

1. Let your dog sniff the ball in your hand to build trust.
2. Gently shake it and say it's a toy to spark curiosity.
3. Roll it slowly and reward your dog for bringing it back.
4. Repeat 2-3 times, then turn it on and let them play.

HOW TO HELP YOUR DOG WARM UP TO NEW TOYS



- Let your dog sniff the ball in your hand to build trust

- Gently shake it and say it's a toy to spark curiosity



- Roll it slowly and reward your dog for bringing it back

- Repeat 2–3 times, then turn it on and let them play



Figure 7: Steps to help your dog adapt to the new toy.

MAINTENANCE

Cleaning

The PetDroid Interactive Dog Toy Ball is water-repellent (IP54 rated), meeting requirements for indoor and outdoor use.

To clean, wipe the ball with a damp cloth. Do not submerge the ball in water.

Built-in G-sensor Touch Activated

Rechargeable Large Capacity Battery



Touch Induction Activated



**4
HOURS**

Working time

**1.5
HOURS**

Charging time

**Charge 1.5 hours work for
4 hours**

Figure 8: The toy ball is water-repellent for easy cleaning.

Battery Care

Recharge the ball when the lights dim or movement becomes sluggish. Avoid completely draining the battery for optimal lifespan.

Material Durability

The toy is made from durable polyamides that are safe and non-toxic.

Important Note: This toy is NOT suitable for aggressive chewers. Aggressive chewing may damage the toy and pose a choking hazard.

Built-in G-sensor Touch Activated

Rechargeable Large Capacity Battery



Touch Induction Activated



Charge 1.5 hours work for 4 hours

Figure 9: The toy is durable but not for aggressive chewers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ball does not turn on or move.	Low battery.	Charge the ball fully (approx. 1.5 hours).
Ball stops moving frequently.	Low battery or standby mode activated.	Recharge the ball. If in standby, touch or bite the ball to reactivate.
Irregular Rolling Mode not working with tennis cover.	Mode incompatibility.	The Irregular Rolling Mode is designed for hard floors without the tennis cover. Use Crazy Bouncing Mode with the tennis cover.

Problem	Possible Cause	Solution
Ball is too noisy on hard floors.	Using without tennis cover or in Irregular Rolling Mode.	For reduced noise on hard floors, consider using the Crazy Bouncing Mode with the tennis cover, or use on softer surfaces like thin carpet or lawn.
Ball is damaged from chewing.	Aggressive chewing.	This toy is not designed for aggressive chewers. Supervise play and discontinue use if damaged.

SPECIFICATIONS

Model Name: Dog ball toy

Model Number: M04-Bundle

Brand: PetDroid

Material: Plastic (Polyamides)

Color: Orange

Dimensions: 2.76 x 2.76 x 2.76 inches

Item Weight: 8.1 ounces (0.23 Kilograms)

Battery: 600mAh (1 CR5 batteries required, included)

Charging Time: Approx. 1.5 hours

Working Time: Approx. 4 hours (continuous)

Waterproof Rating: IP54

Target Audience: Dogs (Small, Medium, Large)

Recommended Use: Indoor, Outdoor

Date First Available: March 15, 2018

WARRANTY AND SUPPORT

Warranty Information

PetDroid provides a 1-year manufacturer's warranty.

We offer free changes to our customers without returning bad ones within 1 year.

Customer Support

For further assistance, please visit the official PetDroid store on Amazon: [PetDroid Store](#).