

[Manuals.plus](#) /

› [Kircuit](#) /

› Kircuit AC Power Adapter for PANDIGITAL P19001DW Digital Photo Frame User Manual

Kircuit AC Power Adapter

Kircuit AC Power Adapter for PANDIGITAL P19001DW Digital Photo Frame User Manual

Model: AC Power Adapter

1. INTRODUCTION


This user manual provides essential information for the safe and effective use of your Kircuit AC Power Adapter. This adapter is specifically designed as a replacement power supply for the PANDIGITAL P19001DW Digital Photo Picture Frame. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or modify the adapter. This will void any warranty and may cause electrical hazards.
- Ensure the adapter is used with devices that match its output specifications. Using an incompatible device may cause damage.
- Unplug the adapter from the wall outlet when not in use for extended periods.
- Keep out of reach of children.

Built Safety Protections

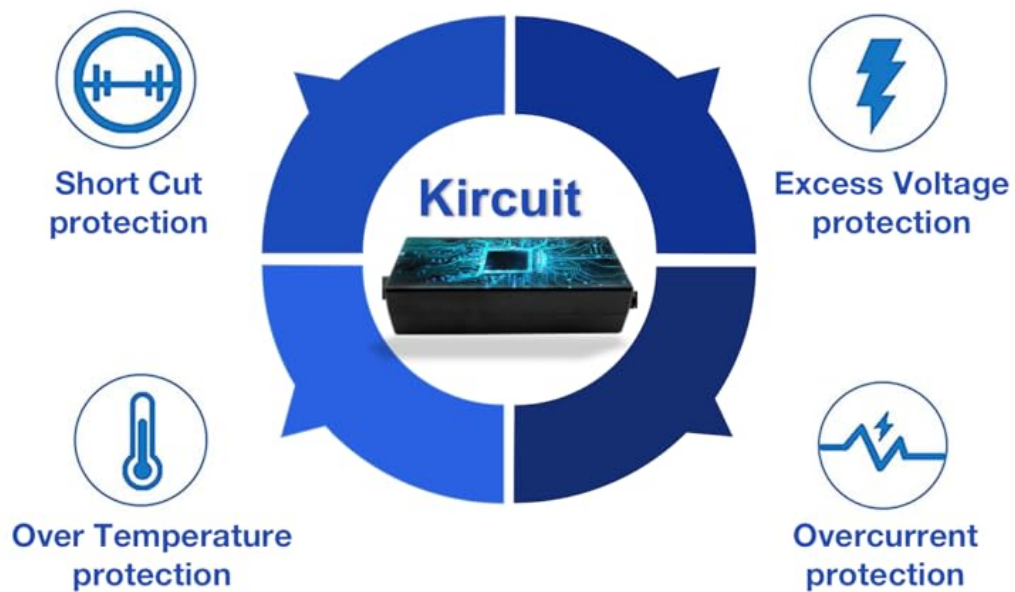

This image illustrates the built-in safety protections of the Kircuit AC Power Adapter, including safeguards against short circuits, excess voltage, over temperature, and overcurrent.

3. PACKAGE CONTENTS

Your package should contain the following item:

- 1 x Kircuit AC Power Adapter Cable



This image displays the Kircuit AC Power Adapter, showing the main adapter unit and its integrated power cord with the DC output plug.

4. SETUP

Follow these steps to set up your Kircuit AC Power Adapter:

1. **Connect to Device:** Insert the DC output plug of the Kircuit AC Power Adapter into the power input port of your PANDIGITAL P19001DW Digital Photo Frame. Ensure a firm connection.
2. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard wall power outlet (100V-240V AC).
3. **Verify Power:** Once connected, your digital photo frame should receive power and operate as intended.



This image shows the Kircuit AC Power Adapter connected to a power strip, demonstrating a typical setup for powering a device on a desk.

5. OPERATING INSTRUCTIONS

The Kircuit AC Power Adapter is designed for simple plug-and-play operation:

- Once properly connected to both the power outlet and your PANDIGITAL P19001DW Digital Photo Frame, the adapter will supply continuous power to the device.


- The adapter functions as a direct power source and does not typically have indicator lights for its own operation. The power status of your digital photo frame will indicate successful power delivery.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the cable and adapter housing for any signs of damage, such as cuts, fraying, or cracks. If damage is observed, discontinue use and replace the adapter.

Durable design

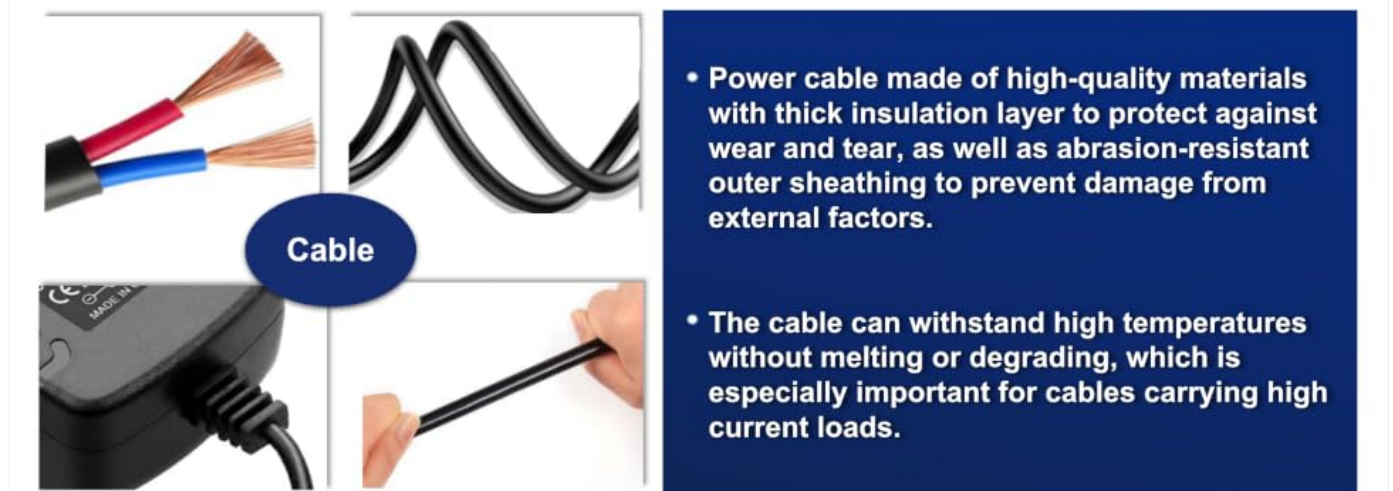

This image highlights the durable design of the power cable, emphasizing its high-quality materials, thick insulation, and abrasion-resistant outer sheathing.

7. TROUBLESHOOTING

If you encounter issues with your Kircuit AC Power Adapter, refer to the following common solutions:

Problem	Possible Cause	Solution
Digital photo frame does not power on.	Adapter not properly connected. No power from outlet. Faulty adapter.	Ensure both ends of the adapter are securely plugged in. Test the wall outlet with another device. Inspect the adapter for damage.
Adapter feels unusually hot.	Overload or poor ventilation.	Unplug the adapter immediately. Ensure it is not covered and has adequate airflow. Verify the connected device is compatible and not drawing excessive power.

Problem	Possible Cause	Solution
Visible damage to cable or adapter.	Physical stress or wear.	Discontinue use immediately. Replace the adapter to prevent electrical hazards.

8. SPECIFICATIONS

- **Input:** 100V-240V AC, 50/60Hz, 0.3A
- **Output:** Specific voltage and amperage (refer to adapter label for details)
- **Cord Length:** Approximately 6.5 feet (2 meters)
- **Protections:** Built-in Dynamic IC, Charger IC, and Power fuse for Short Circuit Protection, Over Voltage Protection, Over Temperature Protection, and Overcurrent Protection.
- **Compatibility:** PANDIGITAL P19001DW Digital Photo Picture Frame



This image displays the Kircuit AC Power Adapter, highlighting its label with input specifications and indicating a cord length of 6.5 feet.

9. WARRANTY AND SUPPORT

Kircuit products are manufactured with quality and reliability in mind. For specific warranty information, product support, or to inquire about replacement parts, please refer to the official Kircuit website or contact your retailer. Please have your product model and purchase date available when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08C9RX512>

More documents and user manuals: **<https://manuals.plus/>**