

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN EUR7662Y30 Remote Control Instruction Manual for Panasonic Home Theater Systems

PERFASCIN EUR7662Y30

PERFASCIN EUR7662Y30 Remote Control Instruction Manual

For Panasonic SC-HT and SA-HT Series Home Theater Systems

INTRODUCTION

This manual provides instructions for the PERFASCIN EUR7662Y30 replacement remote control, designed for use with various Panasonic DVD Receiver Home Theater Stereo Systems. This remote offers a straightforward solution for controlling your compatible Panasonic audio-visual equipment.

SETUP: BATTERY INSTALLATION

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





Figure 1: Rear view of the remote control showing the open battery compartment with two AAA batteries installed. The cover is shown detached to the left.

The remote is now ready for use. No programming is required for compatible Panasonic models.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Panasonic home theater system. Below is a general overview of the main buttons and their functions.





Figure 2: Front view of the PERFASCIN EUR7662Y30 remote control, displaying all control buttons.

Key Functions:

- **Power (Red Button, Top Left):** Turns the system power on or off.
- **TV / VIDEO (Top Right):** Switches between TV and video input modes.
- **VOLUME (+/-):** Adjusts the master volume level.
- **CH (Channel) Up/Down:** Navigates through channels (if applicable to the connected device).
- **DVD / FM/AM / MUSIC P. / AUX:** Selects the input source.
- **Numeric Keypad (0-9, DISC, >10):** For direct track selection, channel input, or other numerical entries.
- **Playback Controls (STOP, PAUSE, PLAY, SKIP, SLOW/SEARCH):** Standard controls for media playback.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **MENU / TOP MENU:** Accesses the main menu or disc top menu.
- **RETURN:** Goes back to the previous screen or menu.
- **SETUP:** Accesses system setup options.
- **SOUND Modes (e.g., SURROUND MUSIC, SFC, DPL II, H.BASS, SUB WOOFER):** Adjusts audio settings and sound effects.
- **Muting:** Mutes or unmutes the audio output.

Refer to your Panasonic home theater system's original manual for specific functions and advanced settings.

COMPATIBILITY

The PERFASCIN EUR7662Y30 remote control is compatible with the following Panasonic DVD Receiver Home Theater Stereo Systems:

- SC-HT744
- SA-HT740
- SA-HT743
- SA-HT940
- SA-HT740P
- SA-HT740PC
- SA-HT740PX
- SA-HT743P
- SA-HT743PC
- SA-HT940P
- SA-HT940PC
- SC-HT740
- SC-HT940

- SC-HT743

If your model is not listed, please verify compatibility with the seller before use.

SPECIFICATIONS

Model Number:	EUR7662Y30
Product Dimensions:	7 x 2 x 0.65 inches
Item Weight:	2 ounces
Batteries Required:	2 AAA batteries
Connectivity Technology:	Infrared (IR)
Max Number of Supported Devices:	5 (for multi-device control, if programmed)
Special Feature:	Ergonomic design

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote and the home theater system's IR receiver.
 - Ensure you are within the effective range of the home theater system.
- **Specific buttons not working:**
 - This remote is a replacement and should function without programming for listed compatible models. If a specific button does not work, it might not be supported by your particular system model, or the system's IR receiver might be faulty.
 - Clean the remote's surface and buttons to ensure no debris is interfering with button presses.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or immerse the remote in water.
- **Battery Care:**
 - Remove batteries if the remote will not be used for an extended period to prevent leakage.
 - Dispose of used batteries responsibly according to local regulations.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

SUPPORT

For any inquiries regarding this product, including compatibility questions or operational issues not covered in this manual, please contact the seller directly. Refer to your purchase documentation for seller contact information.

This product is manufactured by PERFASCIN.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08CB74HZV>

More documents and user manuals: <https://manuals.plus/>