

Beko WDW75141Steam1

Beko WDW75141Steam1 Washer Dryer User Manual

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use, installation, maintenance, and troubleshooting of your Beko WDW75141Steam1 washer dryer. Please read this manual thoroughly before operating the appliance and keep it for future reference.

SAFETY INFORMATION

General Safety: Always disconnect the appliance from the power supply before cleaning or maintenance. Do not allow children to play with the appliance. Ensure the appliance is properly grounded. Do not operate the machine if the power cord is damaged. Keep packaging materials away from children.

Installation Safety: The appliance must be installed by a qualified person. Ensure all transport bolts are removed before use. Connect the water inlet hose to a cold water tap. The drain hose should be securely fitted to prevent leaks. Do not install the appliance on a carpeted floor that could block ventilation openings.

Operation Safety: Do not overload the machine. Use only detergents and additives suitable for automatic washing machines. Do not open the detergent drawer during operation. Avoid touching the drum when it is hot. Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.

SETUP

Unpacking and Positioning

Carefully unpack the appliance. Remove all packaging materials and transport bolts. The Beko WDW75141Steam1 is a freestanding unit. Position it on a flat, stable surface. Adjust the feet to ensure the machine is level.

Dimensions: 60 cm (Width) x 50 cm (Depth) x 84 cm (Height). The depth with the door open is approximately 50 cm.



Front view of the Beko WDW75141Steam1 Washer Dryer with the loading door slightly open.

Electrical and Water Connections

Connect the power cord to a grounded outlet (230V). Ensure the water inlet hose is securely attached to a cold water supply. Position the drain hose to discharge into a suitable drain or sink, ensuring it is not kinked or blocked.

First Use

Before washing clothes for the first time, run a short wash program without laundry to clean the interior of the machine. Use a small amount of detergent for this cycle.

OPERATING INSTRUCTIONS

Control Panel Overview

The appliance features a touch control panel for easy operation. The main dial allows selection of wash and dry programs, while additional buttons control temperature, spin speed, and special functions.



Detailed view of the control panel, showing the program selection dial, digital display, and touch buttons.

Loading Laundry and Detergent

Open the front loading door and place laundry loosely into the drum, ensuring not to exceed the maximum capacity of 7 kg for washing and 4 kg for drying. Add detergent and fabric softener to the single compartment dispenser.

Program Selection

Turn the program selection dial to choose the desired wash or dry program. The machine offers 7 wash cycles and 16 dry cycles. Common programs include:

- **Wash & Wear:** For daily mixed loads.
- **Eco 40-60:** Energy-efficient program for normally soiled cotton garments.

- **Hygiene+ Wash & Dry:** Provides enhanced hygiene with steam.
- **Wool:** Gentle care for woolens.
- **Express:** Quick wash for lightly soiled items.
- **Spin + Drain:** For draining water and spinning laundry.

Adjust temperature and spin speed using the dedicated buttons if needed. Press the Start/Pause button to begin the cycle.

Special Features

- **Hygienic Steam Function:** This feature helps to reduce allergens and sanitize clothes by introducing steam into the drum during certain cycles.



View inside the drum showing the steam function in action.

- **Bluetooth / HomeWhiz Connectivity:** Connect your appliance to the HomeWhiz app via Bluetooth for remote control, additional programs, and smart features.

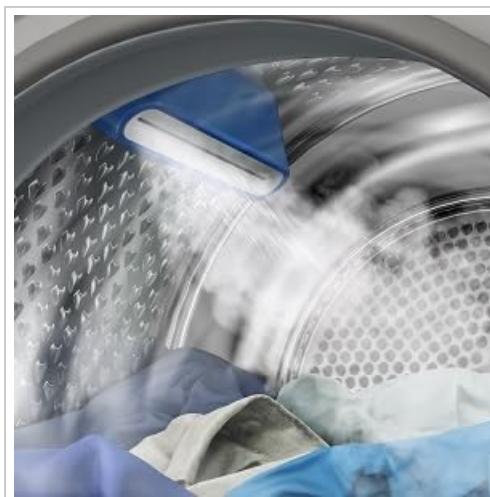


Illustration of the HomeWhiz app icon on a smartphone, indicating smart connectivity.

- **Add-Load Function:** Allows you to add forgotten items of laundry after a cycle has started, provided the water level and temperature are safe.
- **Watersafe:** A safety system designed to protect against water leaks.

MAINTENANCE

Cleaning the Detergent Drawer

Regularly clean the detergent drawer to prevent residue buildup. Pull the drawer out completely, remove any inserts, and wash under running water. Reinsert the components and push the drawer back into place.

Cleaning the Drum

The drum is made of stainless steel. To prevent odors and maintain hygiene, run a drum cleaning program (if available) or a hot wash cycle with a suitable cleaning agent periodically.

Cleaning the Water Inlet Filter

If the water supply is slow, the water inlet filter may be clogged. Close the water tap, disconnect the hose, and clean the filter with a brush. Reconnect securely.

Cleaning the Pump Filter

The pump filter should be cleaned regularly to prevent blockages. Refer to the diagram in the full manual for the exact location and procedure. Always drain residual water before opening the filter cover.

TROUBLESHOOTING

If you encounter an issue with your appliance, please consult the following common troubleshooting steps before contacting service.

- Machine does not start:** Check if the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed.
- No water intake:** Ensure the water tap is open and the water inlet hose is not kinked. Check if the water inlet filter is clogged.
- Water not draining:** Check if the drain hose is kinked or blocked. Clean the pump filter.
- Excessive vibration or noise:** Ensure the machine is level and all transport bolts have been removed. Check if the load is unbalanced.
- Poor washing results:** Check detergent dosage, program selection, and water temperature. Do not overload the machine.

If the problem persists after performing these checks, contact Beko customer support.

SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Number	WDW75141Steam1
Type	Freestanding Washer Dryer
Loading Type	Front Loader
Wash Capacity	7 Kilograms
Dry Capacity	4 Kilograms
Product Dimensions (W x D x H)	60 x 50 x 84 cm

Item Weight	65 Kilograms
Annual Energy Consumption	160 Kilowatt-hours
Energy Efficiency Rating	D
Noise Level	56 Decibels
Maximum Spin Speed	1400 RPM
Control Type	Touch
Number of Wash Cycles	7
Number of Dry Cycles	16
Drum Material	Stainless Steel
Special Features	Hygienic Steam, Bluetooth (HomeWhiz), Add-Load Function, Watersafe
Included Components	Power Cord
Voltage	230V

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card provided with your appliance or visit the official Beko website. You can also contact Beko customer service directly for assistance with any issues not covered in this manual.