

VMAI G700

VMAI Cordless Electric Mop User Manual

Model: G700

INTRODUCTION

Thank you for choosing the VMAI Cordless Electric Mop. This powerful and versatile floor cleaner is designed to make your cleaning tasks effortless and efficient. Featuring dual motors, a detachable long-lasting battery, and a water spray function, it is suitable for various sealed hard floor surfaces including vinyl, tile, hardwood, laminate, and marble. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Always ensure the mop is turned off before assembling, disassembling, or performing maintenance.
- Do not immerse the main unit in water.
- Use only the provided charger and battery.
- Keep out of reach of children and pets.
- Do not use on unsealed or water-sensitive surfaces.
- Avoid spraying water directly into electrical outlets or components.

PACKAGE CONTENTS

Please check the box for the following items:

- Electric Mop Main Unit
- Handle and Pole Assembly
- Detachable Battery
- Power Adapter/Charger
- 4 Reusable Replacement Mop Pads (2 for cleaning, 2 for waxing)
- Measuring Cup
- User Manual



Image: The VMAI Cordless Electric Mop with its included accessories, including the main unit, handle, battery, charger, and various mop pads.

SETUP

1. Assembly

1. Connect the pole to the main mop head unit. Ensure it clicks securely into place.
2. Attach the handle to the top of the pole.
3. Insert the detachable battery into its designated slot on the mop unit.
4. Attach the desired mop pads to the bottom of the mop head. The pads are reusable and can be easily attached via hook-and-loop fasteners.



Image: A close-up view of the detachable battery being inserted into the mop's main unit.

2. Battery Charging

Before first use, fully charge the battery. The 2550mAh detachable battery provides 40-60 minutes of use after a 2.5-3 hour charge.

- Connect the power adapter to the charging port on the battery or directly to the mop unit if the battery is installed.
- Plug the adapter into a power outlet.
- The indicator lights on the mop or battery will show charging status.



Image: The detachable battery can be charged either while connected to the mop or independently using the provided charger.

3. Filling the Water Tank

The mop features a 300ml water tank for cleaning solutions or water.

- Locate the water tank cap on the mop head.
- Open the cap and use the provided measuring cup to fill the tank with water or your preferred cleaning solution. Do not overfill.
- Securely close the cap before operation.

CONTROL HOW MUCH WATER YOU WANT



Image: A user filling the 300ml water tank on the mop head, demonstrating the easy refill process.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button on the handle to turn the mop on or off. The dual motors will begin spinning at 280 r/min for effective cleaning.

2. Water Spray Function

Press the spray button located on the handle to dispense water or cleaning solution from the 300ml tank. This allows for simultaneous spraying and mopping.

3. Maneuvering and Self-Propelled Movement

The VMAI electric mop is designed to be lightweight (less than 3 pounds) and self-propelled, reducing physical effort. Its swivel steering allows for 180° horizontal and 90° vertical rotation, making it easy to navigate around furniture and into tight spaces.

Swivel Steering Self-propelled

Effortless and more convenient with
only 3lb mop and 180° rotation from
side to side.



Image: The mop head swivels 180 degrees horizontally and 90 degrees vertically, showcasing its maneuverability and self-propelled feature.

4. LED Headlight

The integrated LED headlight illuminates the cleaning path, helping you spot dust and stains in dimly lit areas or under furniture.



Image: The LED headlight on the front of the mop head helps to reveal hidden dirt and dust, ensuring a thorough clean.

5. Applicable Floor Types

This electric mop is suitable for cleaning and waxing various sealed hard floor surfaces, including:

- Hardwood Floors
- Tile Floors
- Laminate Floors
- Marble Floors
- Vinyl Floors

Applied for All Types of Floor

Available for different kinds of floor surface include vinyl, tile, hard floor, wood floor, marble, etc.



Tea Stains




Splotch



Dust



Footprint

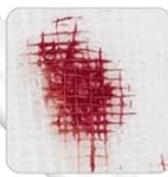

Gun Stains



Wine Stains



Honey



Dander



Glue Stains



Marble Floor

Hardwood Floor

Tile Floor

Vinyl Floor

Image: An illustration showing the versatility of the mop across different hard floor surfaces like marble, hardwood, tile, laminate, and vinyl.

MAINTENANCE

1. Cleaning Mop Pads

The included mop pads are reusable. After each use:

- Remove the dirty pads from the mop head.
- Wash them by hand or in a washing machine.
- Allow them to air dry completely before reattaching or storing.



Image: The reusable mop pads can be easily cleaned by hand or in a washing machine for continued use.

2. Emptying Water Tank

To prevent mold buildup and ensure proper function, empty any remaining liquid from the water tank after each use.

3. Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If the mop will not be used for an extended period, charge the battery to about 50% before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop does not turn on.	Battery is not charged or not properly inserted.	Ensure battery is fully charged and securely inserted.
Mop pads are not spinning.	Obstruction or motor issue.	Check for any debris caught in the mop head. If problem persists, contact support.
Water spray is weak or not working.	Water tank is empty or nozzle is clogged.	Refill water tank. Check and clear any blockages in the spray nozzle.
Mop is making unusual noise.	Debris caught in pads or internal issue.	Remove and clean mop pads. Check for any foreign objects. If noise continues, contact support.

SPECIFICATIONS

Feature	Detail
Model Number	G700
Brand	VMAI
Item Weight	5.6 pounds

Feature	Detail
Product Dimensions	16.9" L x 5.9" W x 20.9" H
Battery Capacity	2550mAh
Charging Time	2.5-3 hours
Run Time	40-60 minutes
Water Tank Volume	300 Milliliters
Motor Speed	280 r/min
Noise Level	Less than 50 dB
Handle Material	Plastic
Head Material	Plastic
Assembly Required	Yes

WARRANTY


The VMAI Cordless Electric Mop comes with a 1-year warranty. For battery replacement service, please feel free to reach out to customer support. VMAI also offers 2-Year Product Protection.

SUPPORT

If you have any questions, concerns, or require assistance with your VMAI Cordless Electric Mop, please contact our customer support team. You can typically reach us through your purchase platform:

- Go to your Account > Orders > Order Detail.
- Find the item and select 'Sold by: Vmai Direct'.
- Click 'Ask a question' to send us a message.

We aim to provide a reply within 24 hours.

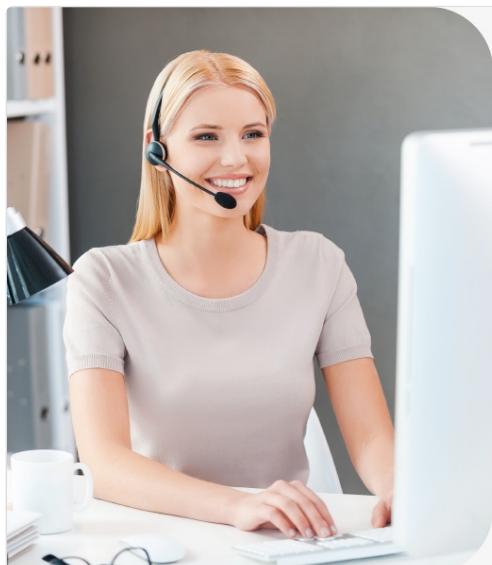

VMAI Support

How to reach us

If there are any concerns about our product, please tell us via the following channel:

[Account - Orders - Order Detail - Sold by: Vmai Direct - Ask a question](#)



12 Hrs Fast Support
24/7 Support



2-Year Product Protection
No Repairs Needed

Image: VMAI customer support details, highlighting 2-year product protection and how to reach out via order details.

Documents - VMAI – G700

no relevant documents