

Manuals.plus /

> [AEG](#) /

> AEG MBE2657SEB Integrated Microwave Oven User Manual

AEG MBE2657SEB

AEG MBE2657SEB Integrated Microwave Oven User Manual

Model: MBE2657SEB | Brand: AEG

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installing and using the appliance. Keep this user manual for future reference. The manufacturer is not responsible for any injuries or damage resulting from incorrect installation or use.

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not operate with a damaged cord or plug.
- **General Use:** This appliance is intended for household use only. Do not use it for commercial purposes.
- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Flammable Materials:** Do not store or use flammable materials near the oven.
- **Overheating:** Do not heat liquids or other foods in sealed containers as they are liable to explode.

2. PRODUCT OVERVIEW

The AEG MBE2657SEB is an integrated microwave oven designed for seamless integration into your kitchen cabinetry. It features an intuitive LCD display and electronic door opening for ease of use.

2.1 Components

- **Control Panel:** Features an LCD display and touch-sensitive buttons for operation.
- **Oven Cavity:** The interior cooking space.
- **Turntable:** Rotates food for even cooking.
- **Oven Door:** Electronically opened.
- **Interior Light:** Illuminates the oven cavity during operation.

2.2 Control Panel

The control panel consists of an LCD display showing time, cooking settings, and program indicators, along with various buttons for function selection and adjustment.



Figure 1: Front view of the AEG MBE2657SEB Integrated Microwave Oven. This image shows the sleek black finish, the central microwave door, the LCD display on the right, and the control buttons below the display. The display currently shows "12:30".

3. INSTALLATION AND SETUP

The AEG MBE2657SEB is designed for integrated installation into a standard kitchen cabinet. Proper ventilation is crucial for optimal performance and safety.

3.1 Cabinet Requirements

- Ensure the cabinet dimensions meet the requirements for integrated appliances.
- Provide adequate space for air circulation around the appliance.
- The electrical outlet should be accessible after installation.

3.2 Electrical Connection

Connect the appliance to a properly grounded electrical outlet. The oven operates on 220 Volts.

3.3 Dimensions for Integration

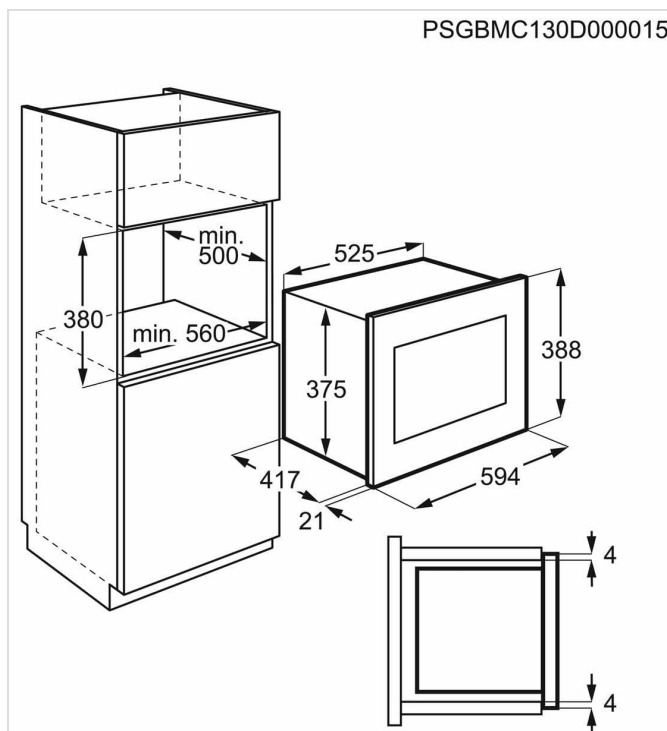


Figure 2: Installation diagram showing the required cabinet dimensions for the AEG MBE2657SEB. The diagram indicates a minimum cabinet width of 560mm, a minimum depth of 500mm, and an appliance height of 388mm, with a total cabinet opening height of 380mm.

Refer to the diagram for precise measurements for cabinet cut-out and ventilation requirements. The product dimensions are approximately 15.91 x 23.46 x 15.28 inches (40.4 x 59.6 x 38.8 cm).

4. OPERATING INSTRUCTIONS

4.1 Setting the Clock

1. Ensure the oven is plugged in and powered on.
2. Press the clock setting button (refer to control panel icons).
3. Use the adjustment buttons to set the current time.
4. Confirm the setting.

4.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Select the desired power level (e.g., 900 Watts for full power).
4. Set the cooking time using the adjustment buttons.
5. Press the Start button to begin cooking.

4.3 Defrost Program

The defrost program allows for quick and efficient thawing of food based on weight or time.

1. Press the Defrost button.
2. Select defrost by weight or by time.
3. Enter the weight of the food or the desired defrost time.
4. Press Start.

4.4 Programmable Functions

The oven features 3 programmable functions, allowing you to save frequently used cooking settings for quick access.

1. To program a function, set the desired power level and cooking time.
2. Press and hold the Program button until the setting is saved to a memory slot.
3. To recall a program, press the Program button and select the desired memory slot.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your microwave oven.

5.1 Interior Cleaning

- Wipe the interior cavity with a damp cloth and mild detergent after each use.
- For stubborn food splatters, place a bowl of water with lemon slices inside and heat for a few minutes to loosen residue.
- Clean the turntable and turntable support ring regularly with warm, soapy water.

5.2 Exterior Cleaning

- Clean the exterior surfaces, including the control panel and door, with a soft, damp cloth.
- Avoid abrasive cleaners or scouring pads, which can damage the stainless steel finish.

5.3 General Care

- Do not allow grease or food particles to accumulate around the door seal.
- Ensure the oven is unplugged before performing any cleaning or maintenance.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not start.	Power cord unplugged; Door not closed properly; Fuse blown.	Check power connection; Ensure door is securely latched; Check household fuse/circuit breaker.
Food not cooking evenly.	Turntable not rotating; Incorrect power level/time.	Ensure turntable is correctly placed; Adjust power level and cooking time.
Display is blank.	Power outage; Appliance not powered on.	Check power supply; Press power button if available.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	MBE2657SEB
Brand	AEG
Capacity	26 Liters
Microwave Power	900 Watts
Voltage	220 Volts
Material	Stainless Steel
Product Dimensions (L x W x H)	15.91 x 23.46 x 15.28 inches (40.4 x 59.6 x 38.8 cm)
Item Weight	18 Kilograms (39.6 pounds)
Human Interface Input	Buttons
Number of Programs	3 (Programmable Functions)
Special Features	LCD Display, Interior Light, Electronic Opening, Defrost Program

8. WARRANTY AND CUSTOMER SUPPORT

For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official AEG website. For technical assistance, spare parts, or repair services, please contact AEG customer support.

You can typically find contact information on the manufacturer's website or in the product packaging.

© 2024 AEG. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08CBJW2DQ>

More documents and user manuals: <https://manuals.plus/>