

[Manuals.plus](#) /

› [Reebok](#) /

› Reebok Royal Classic Jogger 3 Kids' Running Shoes User Manual

Reebok KXB14

Reebok Royal Classic Jogger 3 Kids' Running Shoes

Model: KXB14

INTRODUCTION

This manual provides essential information for the proper use and care of your Reebok Royal Classic Jogger 3 Kids' Running Shoes. Designed for comfort and durability, these low-cut athletic shoes are suitable for various activities. Please read this manual thoroughly to ensure optimal performance and longevity of your product.

SETUP

The Reebok Royal Classic Jogger 3 shoes come ready for immediate use.

1. **Unpacking:** Carefully remove the shoes from their packaging. Inspect them for any visible damage or defects.
2. **Initial Fit:** Have the child try on the shoes to ensure a comfortable and secure fit. Adjust the laces as needed to provide proper support without being too tight.



Image: Side view of the Reebok Royal Classic Jogger 3 Kids' Running Shoes, showcasing the lace-up design and low-cut ankle.

OPERATING (USAGE)

These shoes are designed for general athletic activities, particularly running, and everyday casual wear.

- **Lacing:** Ensure laces are tied securely to prevent tripping and provide adequate foot support. Double-knotting can help prevent laces from coming undone during active play.
- **Activity:** Suitable for running, walking, and general play on various surfaces. The rubber sole provides good traction.
- **Comfort:** The low-cut design allows for freedom of movement around the ankle, while the synthetic upper provides a comfortable fit.



Image: Angled view of the Reebok Royal Classic Jogger 3 Kids' Running Shoes, highlighting the synthetic outer material and sole.

MAINTENANCE

Proper care will extend the life and appearance of your shoes.

- **Cleaning:** Hand wash only. Use a mild soap and a soft brush or cloth to clean the outer surface. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Air dry at room temperature. Do not use direct heat sources like radiators or tumble dryers, as this can damage the materials.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

- **Laces frequently untying:** Ensure laces are double-knotted. Consider replacing worn laces.
- **Unpleasant odor:** Allow shoes to air out after each use. Remove insoles and air them separately if possible. Use shoe deodorizers or baking soda to absorb odors.

- **Minor scuffs/marks:** For synthetic materials, a damp cloth with mild soap can often remove surface marks. For deeper scuffs, specialized shoe cleaners may be required.

SPECIFICATIONS

Feature	Detail
Manufacturer	Reebok
Item Model Number	KXB14
Department	Boys
Care Instructions	Hand Wash
Sole Material	Rubber
Outer Material	Synthetic
Closure Type	Lace-Up
First Available Date	July 7, 2021

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided within this manual. For details regarding warranty coverage, returns, or customer support, please refer to the official Reebok website or contact the retailer where the product was purchased. You may also visit the [product page on Amazon.eg](#) for additional information or to contact the seller.

© 2023 Reebok. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08CBPRRNN>

More documents and user manuals: <https://manuals.plus/>