



[Manuals.plus](#) /

> [AIDITIYMI](#) /

> AIDITIYMI AH59-02530A Replacement Remote Control for Samsung Blu-ray Players Instruction Manual

AIDITIYMI AH59-02530A

AIDITIYMI AH59-02530A Replacement Remote Control Instruction Manual

For Samsung Blu-ray Players and Home Theater Systems

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the AIDITIYMI AH59-02530A replacement infrared remote control. This remote is designed to function with various Samsung Blu-ray Players and Home Theater Systems without requiring any programming or pairing. Simply install the batteries, and it is ready for use.



Figure 1: Front view of the AIDITIYMI AH59-02530A remote control, showing all buttons and layout.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back view of the remote control with the battery compartment open, illustrating correct battery placement.

Once batteries are installed, the remote is ready for immediate use with compatible devices. No programming or pairing is required.

3. OPERATING INSTRUCTIONS

3.1 Basic Operation

To operate your Samsung Blu-ray Player or Home Theater System, point the remote control directly at the device's infrared receiver. Ensure there are no obstructions between the remote and the device. The maximum effective range is approximately 32 feet (10 meters).

3.2 Compatible Models

This replacement remote control is compatible with a wide range of Samsung Blu-ray Players and Home Theater Systems, including but not limited to the following models:

- HT-J4500, HT-J4100, HT-JM41, HT-J5500W, HT-HS5200
- HT-J4100/ZA, HT-J5500, HT-J5550W
- HT-H4500R, HT-F4200, HT-F4500, HT-F4550, HT-FM45/ZA
- HT-H4200R, HT-H4550R, HT-H5200, HT-H5500, HT-H5500W
- HT-H5530, HT-H5550, HT-H5550W, HT-H5500K, HT-H5550K, HT-H5550WK

3.3 Key Functions Overview

The remote features 45 buttons designed for comprehensive control of your compatible Samsung device. Refer to Figure 1 for a visual representation of the button layout.

- **Power Button (U)**: Turns the device on or off.
- **Volume Buttons (VOLUME +/-)**: Adjusts the audio volume.
- **Mute Button (MUTE)**: Mutes or unmutes the audio.
- **Navigation Buttons (Up, Down, Left, Right, Enter)**: Used to navigate menus and select options.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Controls media playback.
- **Home Button (HOME)**: Accesses the main menu or smart hub.
- **Number Buttons (0-9)**: For direct input or channel selection.
- **Function Buttons (A, B, C, D)**: Multi-colored buttons for specific functions within applications or menus.
- **Return/Exit Buttons**: Navigates back or exits current menus.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Warning: Dispose of used batteries according to local regulations. Do not expose batteries to excessive heat or fire.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new AAA alkaline batteries if necessary.
- **Line of Sight:** Verify that there is a clear line of sight between the remote control and the infrared sensor on your Samsung device. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of approximately 32 feet (10 meters).
- **Device Power:** Confirm that your Samsung Blu-ray Player or Home Theater System is powered on.
- **Interference:** Strong light sources, such as direct sunlight or certain types of fluorescent lighting, can interfere with infrared signals. Try operating the remote in a different environment.

If the remote still does not function after performing these checks, it may indicate a fault with the remote control or the receiving device.

6. SPECIFICATIONS

Feature	Detail
Brand	AIDITIYMI
Model Name	AH59-02530A
Connectivity Technology	Infrared (IR)
Compatible Devices	Samsung Blu-ray Players, Home Theater Systems
Number of Batteries Required	2
Battery Type	AAA Alkaline
Maximum Range	32 Feet (approx. 10 meters)
Button Quantity	45
Dimensions (L x W x H)	8" x 2" x 0.6" (20.32 cm x 5.08 cm x 1.52 cm)
Special Feature	Ergonomic Design

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This AIDITIYMI remote control typically comes with a 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but generally excludes damage caused by misuse, accidents, or unauthorized modifications.

7.2 Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact the seller or manufacturer directly through their official support channels. Refer to your purchase documentation for specific contact details.

