

[Manuals.plus](#) /

> [Toshiba](#) /

> Toshiba MW2-AG23PF (BK) Microwave Oven User Manual

Toshiba MW2-AG23PF(BK)

Toshiba MW2-AG23PF (BK) Microwave Oven User Manual

Model: MW2-AG23PF(BK) | Brand: Toshiba

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Toshiba MW2-AG23PF (BK) Microwave Oven. Please read it thoroughly before using the appliance and keep it for future reference.



Figure 1: Front view of the Toshiba MW2-AG23PF (BK) Microwave Oven.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not deep fry in the oven.
- Do not overcook food.
- Clean the oven regularly and remove any food deposits.

SETUP AND INSTALLATION

1. Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including the turntable and turntable ring. Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

2. Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation around the unit.

- Minimum clearance: 20 cm (7.9 inches) above the oven, 10 cm (3.9 inches) at the rear, and 5 cm (2 inches) on each side.
- Do not block air vents.
- Do not place the oven near heat sources or in a damp environment.

MULTI-AUFTAUEN MODUS

Auftauen nach Gewicht oder Zeit



Fleisch



Gefrorenes
Gemüse



Fisch



Gefrorene
Lebensmittel

Vorher ✓



Nachher

Figure 2: External dimensions of the microwave oven (48.5 cm width, 40.3 cm depth, 29.6 cm height) and recommended clearances.

3. Electrical Connection

Plug the oven into a standard 230V, 50Hz AC power outlet. Ensure the outlet is properly grounded. Do not use extension cords or adapters.

4. Turntable Installation

Place the turntable ring in the center of the oven cavity. Then, place the glass turntable securely on top of the turntable ring. Ensure it rotates freely.

OPERATING INSTRUCTIONS

1. Control Panel Overview

BEDIENFELD



Figure 3: Detailed view of the control panel, featuring LED digital display, rotary knobs for function and setting, and push buttons for operation.

- **LED Digital Display:** Shows time, power level, and cooking status.
- **Function Knob:** Selects cooking modes (Microwave, Grill, Combination).
- **Setting Knob:** Adjusts time, weight, or menu options.
- **STOP/CANCEL/ECO Button:** Stops cooking, clears settings, or activates ECO mode.
- **START/+30S Button:** Starts cooking or adds 30 seconds to cooking time.

2. Basic Microwave Operation

To cook with microwave power:

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Turn the Function knob to select "Microwave".
4. Turn the Setting knob to set the desired cooking time.

5. Press the START/+30S button to begin cooking.

The microwave offers 5 power levels: High (900W), Medium-High, Medium, Defrost, and Low. Adjust the power level using the Function or Setting knob as per your model's specific controls.

3. Grill Function

The grill function is ideal for browning and crisping food. Use the metal grill rack provided.

1. Place food on the grill rack.
2. Turn the Function knob to select "Grill".
3. Turn the Setting knob to set the desired grilling time.
4. Press the START/+30S button.

KOCHEN WURDE EINFACHER

8 automatische Voreinstellungen



	
	
	
	

Figure 4: Illustration of the microwave oven utilizing its grill function for browning food.

4. Combination Function

The combination function combines microwave and grill cooking for faster, more evenly cooked, and browned results. There are typically two combination modes:

- **Combi 1:** 30% Microwave, 70% Grill (e.g., for poultry, gratin).
- **Combi 2:** 55% Microwave, 45% Grill (e.g., for fish, vegetables).

1. Place food on the grill rack.
2. Turn the Function knob to select "Combi 1" or "Combi 2".
3. Turn the Setting knob to set the desired cooking time.
4. Press the START/+30S button.

5. ECO Function (Energy Saving)

To reduce energy consumption in standby mode, activate the ECO function. The LED display will turn off.

- Press the STOP/CANCEL/ECO button once to activate ECO mode.
- Press any button or open the door to exit ECO mode.



Figure 5: The microwave oven display showing the ECO mode symbol, indicating reduced power consumption.

6. Defrosting by Weight/Time

The oven offers convenient defrosting options:

- **Defrost by Weight:** Select the defrost function, then input the weight of the food. The oven automatically calculates the

defrosting time.

- **Defrost by Time:** Select the defrost function, then manually set the desired defrosting time.



Figure 6: Examples of food items suitable for multi-defrost mode, including meat, frozen vegetables, fish, and other frozen foods.

7. Quick Start (+30S)

For quick cooking at full power, simply press the START/+30S button. Each press adds 30 seconds to the cooking time, up to a maximum of 95 minutes.

8. Auto Menus

The oven features 8 automatic preset menus for common food items, simplifying cooking. These include Pizza, Potato, Meat, Fish, Vegetables, Drink, Pasta, and Popcorn.

1. Turn the Function knob to select the desired auto menu.
2. Turn the Setting knob to select the quantity/weight.
3. Press the START/+30S button.

INTELLIGENTER DREHTELLER

Bequeme und sichere Nutzung

Konventionell



Start



Ende

Positionsspeicher



Start



Ende



Figure 7: A selection of 8 automatic preset cooking options available on the microwave oven, such as Pizza, Potato, Meat, Fish, Vegetables, Drink, Pasta, and Popcorn.

9. Child Safety Lock

To prevent unsupervised operation by children, activate the child safety lock.

- To activate: Press and hold the STOP/CANCEL/ECO button for 3 seconds until a beep sounds and "LOCK" appears on the display.
- To deactivate: Press and hold the STOP/CANCEL/ECO button for 3 seconds until a beep sounds and "LOCK" disappears.

10. Clock and Kitchen Timer

The oven can display the current time and function as a kitchen timer.

- **Setting the Clock:** Refer to the control panel diagram for specific steps, usually involving pressing a clock button and using the setting knob.
- **Using the Kitchen Timer:** This functions independently of cooking. Set the desired time using the setting knob and activate the timer.

11. Position Memory Turntable

The innovative position memory turntable ensures that the turntable returns to its original starting position after cooking, making it easier and safer to remove items with handles.

SCHNELLES KOCHEN SPART ZEIT

Drücken Sie die START/+30S-Taste für schnelles Kochen



Figure 8: Comparison of a conventional turntable versus the intelligent turntable with position memory, showing how the latter ensures items return to an accessible position.

CARE AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your microwave oven.

1. Cleaning the Oven Interior

- After each use, wipe the interior with a damp cloth and mild detergent.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for 2-3 minutes to loosen food particles, then wipe clean.
- Do not use abrasive cleaners or scouring pads.

2. Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth.

- Avoid getting water into the ventilation openings.

3. Turntable and Ring Care

- The glass turntable and turntable ring can be washed in warm soapy water or in a dishwasher.
- Ensure they are completely dry before placing them back in the oven.

4. Door Seals

Regularly clean the door seals and adjacent parts with a damp cloth to remove any spills or splashes. This helps ensure a proper seal during operation.

TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Microwave output low	Incorrect power level selected.	Ensure correct power level is selected for desired cooking.
Food not cooking evenly	Food not stirred or turned; Turntable not rotating.	Stir or turn food halfway through cooking; Check turntable and ring for obstructions.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Steam escaping from door or vents	Normal during cooking.	This is normal and does not indicate a problem.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	MW2-AG23PF(BK)
Capacity	23 Liters
Microwave Power Output	900 Watts (5 levels)
Grill Power Output	1000 Watts
External Dimensions (L x W x H)	48.5 x 40.3 x 29.6 cm
Internal Dimensions (L x W x H)	31.4 x 34.7 x 22.1 cm
Turntable Diameter	270 mm
Weight	17 Kilograms
Voltage	230 Volts
Color	Black

Feature	Specification
Material	Glass (interior lining, turntable)
Special Features	Defrost, Turntable with Position Memory, ECO Function, Child Safety Lock, Auto Menus

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Toshiba website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or spare parts inquiries, please contact Toshiba customer service. Information regarding spare parts availability is not provided in this document.