

Indesit IS 83Q60 NE

Indesit IS 83Q60 NE Induction Hob User Manual

Model: IS 83Q60 NE

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Indesit IS 83Q60 NE Induction Hob. Please read these instructions carefully before installation and use, and keep them for future reference.

The Indesit IS 83Q60 NE is a modern induction hob designed for efficient and precise cooking. It features four cooking zones and a sleek glass-ceramic surface.

2. SAFETY INFORMATION

General Safety:

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not operate the hob if the glass surface is cracked or broken.
- Keep children away from the appliance during operation and cooling.
- Use only induction-compatible cookware.
- Avoid placing metallic objects (e.g., cutlery, lids) on the hob surface as they can become hot.
- Do not use abrasive cleaners or sharp metal scrapers to clean the hob.
- Always switch off the cooking zones after use.

Electrical Safety:

- The appliance must be properly earthed.
- Do not modify the electrical cord. If damaged, it must be replaced by the manufacturer or a qualified service agent.
- Disconnect the appliance from the power supply before any maintenance or cleaning.

3. PRODUCT OVERVIEW

The Indesit IS 83Q60 NE is a sleek black induction hob with four cooking zones, offering efficient and responsive heating. The controls are integrated into the glass surface for a seamless look and easy cleaning.

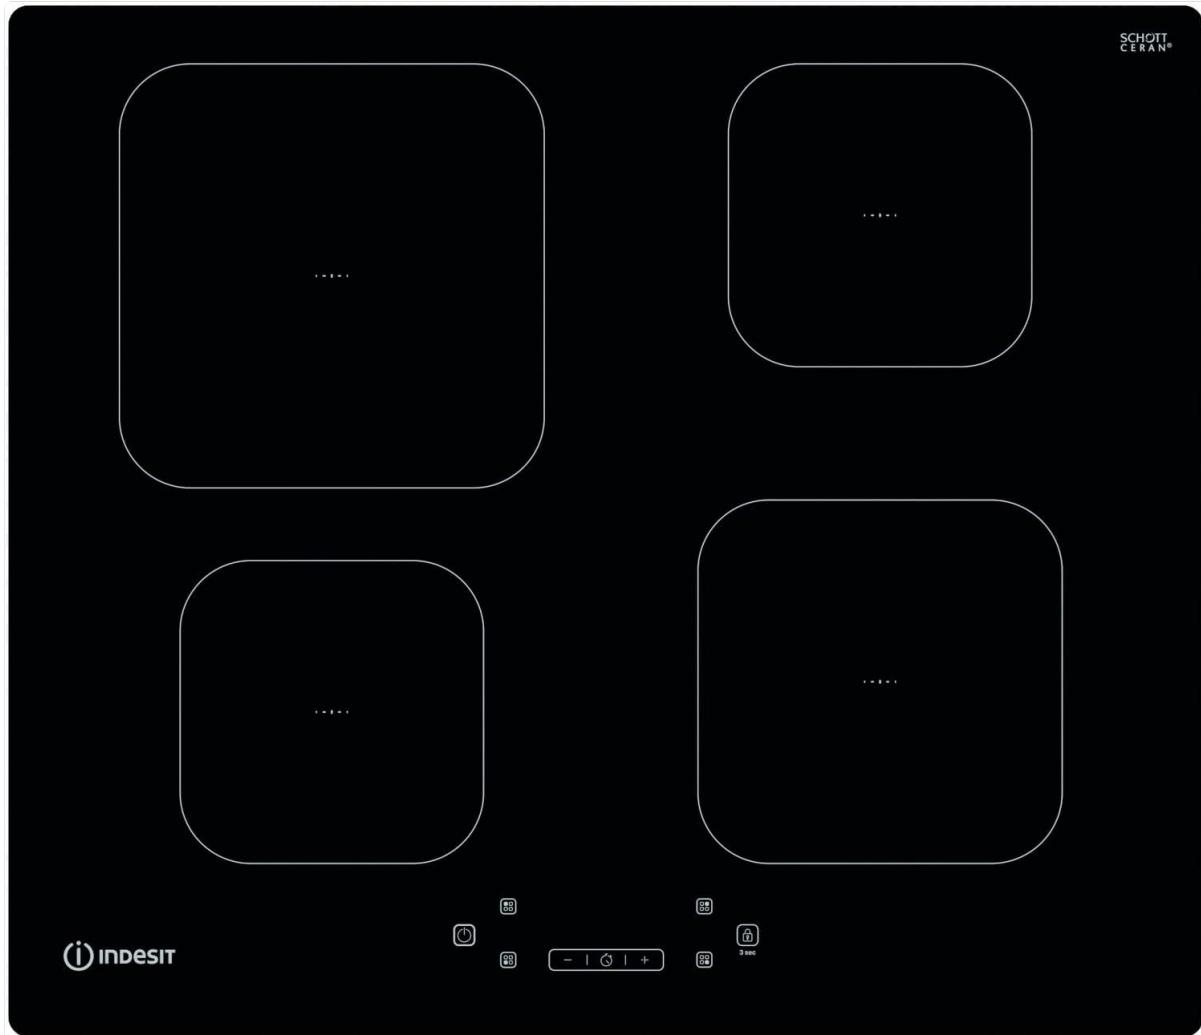


Figure 1: Top view of the Indesit IS 83Q60 NE Induction Hob, showcasing its four cooking zones and touch controls.



Figure 2: The induction hob in use with a pot, demonstrating its functionality in a kitchen environment.

4. INSTALLATION

Proper installation is crucial for the safe and optimal performance of your induction hob. It must be installed by a qualified professional.

Cutout Dimensions:

- Product Dimensions: 51 cm (Depth) x 59 cm (Width) x 5.4 cm (Height)
- Refer to the diagram below for precise cutout and clearance requirements.

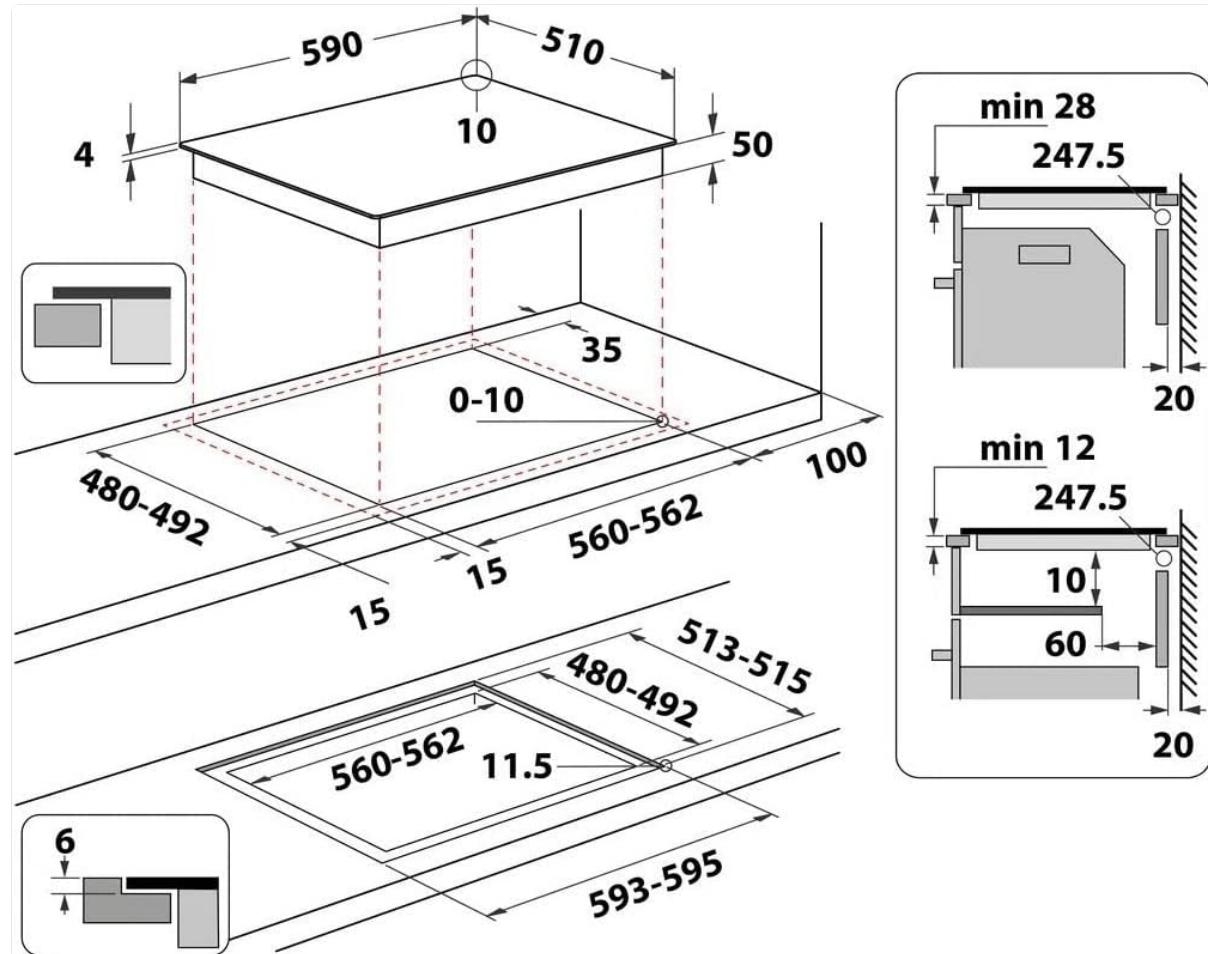


Figure 3: Detailed diagram showing the required dimensions for countertop cutout and clearances for proper installation of the hob.

Electrical Connection:

- The hob requires a wired electrical connection.
- Ensure the power supply matches the appliance's requirements as specified on the rating plate.

5. OPERATING INSTRUCTIONS

Your Indesit IS 83Q60 NE Induction Hob features intuitive touch controls for easy operation.

Turning On/Off:

- Press the power button (**ON/OFF** symbol) to turn the hob on.
- Press and hold the power button to turn the hob off.

Selecting a Cooking Zone and Adjusting Power:

- Place an induction-compatible pan on the desired cooking zone.
- Select the cooking zone by touching its corresponding control.
- Use the + and - buttons to adjust the power level from 1 (low) to 9 (high).

Booster Function:

- The Booster function provides maximum power for rapid heating.
- To activate, select a cooking zone and then press the **Booster** button (often indicated by a 'P' or similar symbol).
- The Booster function will automatically switch off after a set period or when the temperature is reached.

Timer Function:

- To set a timer for a specific cooking zone, select the zone and then press the **Timer** button (clock symbol).
- Use the + and - buttons to set the desired cooking time.
- The zone will switch off automatically when the timer expires.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

- Always ensure the hob is cool before cleaning.
- Wipe the glass-ceramic surface with a soft cloth and a mild detergent after each use.
- For stubborn stains, use a specialized hob cleaner and a non-abrasive scraper.
- Do not use steam cleaners or high-pressure cleaning equipment.
- Avoid spilling sugary substances on the hot hob, as they can cause permanent damage.

7. TROUBLESHOOTING

If you encounter any issues with your hob, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; child lock activated.	Check circuit breaker; deactivate child lock.
Cooking zone not heating.	Incorrect cookware; pan not centered; power level too low.	Use induction-compatible pan; reposition pan; increase power level.
Display shows an error code.	Specific fault detected.	Refer to the full manual for specific error code meanings or contact customer support.
Unusual noise during operation.	Normal operation sound of induction technology or fan.	This is usually normal. If excessively loud or unusual, contact service.

8. SPECIFICATIONS

- **Brand:** Indesit
- **Model Number:** IS 83Q60 NE
- **Type:** Induction Hob
- **Number of Heating Zones:** 4
- **Surface Material:** Glass-ceramic
- **Color:** Black
- **Product Dimensions (D x W x H):** 51 cm x 59 cm x 5.4 cm
- **Weight:** 9 kg
- **Power Source:** Wired Electric
- **Special Feature:** Booster

What's in the Box:

- Induction Hob (PIANO COTTURA)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your product or visit the official Indesit website. Standard return policies apply for products purchased through retailers. If you receive a defective or damaged product, please contact your retailer or the manufacturer's customer service immediately.

