

Manuals.plus /

- › QKKE /
- › QKKE AC Wall Power Supply Adapter Charger Instruction Manual

QKKE BP-DLG1200PS

Instruction Manual

QKKE AC Wall Power Supply Adapter Charger for Duralast Gold 1200 Peak Amps Jump Starter Power Station

INTRODUCTION

This manual provides essential information for the safe and effective use of your QKKE AC Wall Power Supply Adapter Charger, designed for compatibility with the Duralast Gold 1200 Peak Amps Jump Starter Power Station (Model BP-DLG1200PS). Please read this manual thoroughly before operation and retain it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury to persons:

- Use this adapter only with the specified Duralast Gold 1200 Peak Amps Jump Starter Power Station or compatible devices as indicated by the manufacturer.
- Do not expose the adapter to rain or excessive moisture.
- Do not operate the adapter if it has been dropped or damaged in any way.
- Do not disassemble the adapter. Refer all servicing to qualified service personnel. Incorrect reassembly may result in a risk of electric shock or fire.
- Unplug the adapter from the outlet when not in use or before cleaning.
- Ensure the power outlet voltage matches the adapter's input voltage (100V - 240V).
- Keep out of reach of children.

PRODUCT OVERVIEW

The QKKE AC Wall Power Supply Adapter Charger is a replacement power supply designed to charge your Duralast Gold 1200 Peak Amps Jump Starter Power Station. It features a standard US plug and a barrel connector output.



Figure 1: Front view of the QKKE AC Wall Power Supply Adapter Charger, showing the AC plug and barrel connector cable.



Figure 2: Angled view of the adapter, highlighting the compact design and barrel connector.



Figure 3: Top view of the adapter, showing the coiled cable and barrel connector.

SETUP

1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
2. **Locate Charging Port:** Identify the appropriate charging input port on your Duralast Gold 1200 Peak Amps Jump Starter Power Station. This is typically a DC input port designed for barrel connectors.
3. **Connect Adapter to Device:** Insert the barrel connector of the QKKE adapter firmly into the charging port of your jump starter.
4. **Plug into Power Outlet:** Insert the AC plug of the adapter into a standard 100V-240V wall power outlet.

5. **Verify Charging:** Confirm that your jump starter indicates it is receiving a charge (e.g., charging indicator light, display update).

OPERATING INSTRUCTIONS

This AC adapter is designed for charging the internal battery of your Duralast Gold 1200 Peak Amps Jump Starter Power Station. The intelligent switching circuit within the adapter is designed to recognize a full battery and automatically switch to a save mode, preventing overcharge.

- Once connected as per the "Setup" instructions, the adapter will begin charging the jump starter's battery.
- Monitor the charging status on your jump starter device. Refer to your jump starter's manual for specific charging indicators and estimated charging times.
- The adapter is designed to prevent overheating and short circuits.
- Disconnect the adapter from the wall outlet and the jump starter once charging is complete or if the jump starter is not in use.

MAINTENANCE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or sprays.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Keep the cable neatly coiled to prevent kinks or damage.
- **Inspection:** Periodically inspect the adapter and its cable for any signs of wear, cuts, or damage. If damage is found, discontinue use immediately and replace the adapter.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Adapter not charging device.	Adapter not properly plugged into wall outlet. Barrel connector not fully inserted into device. Wall outlet is not live. Adapter or device is faulty.	Ensure adapter is securely plugged into a working wall outlet. Push the barrel connector firmly into the device's charging port. Test the wall outlet with another appliance. If issues persist, contact customer support.
Adapter feels warm during use.	Normal operation during charging. Poor ventilation.	A slight warmth is normal. Ensure the adapter is in a well-ventilated area and not covered. If it becomes excessively hot, disconnect immediately.

SPECIFICATIONS

- **Input Voltage:** 100V - 240V AC (Worldwide compatible)
- **Connector Type:** Barrel Connector
- **Compatible Devices:** Duralast Gold 1200 Peak Amps Jump Starter Power Station BP-DLG1200PS (and other compatible devices)
- **Included Components:** 1 x Switching power supply
- **Special Feature:** Short Circuit Protection, Over-voltage protection, Over-current protection
- **Certification:** CE Certified
- **Color:** Black

WARRANTY AND SUPPORT

This QKKE AC Wall Power Supply Adapter Charger comes with a **12 Months Warranty** and a **30 Days Money Back Guarantee**. We also provide **Lifetime Support Customer Service**.

For warranty claims, technical support, or any inquiries, please contact your retailer or the manufacturer directly. Please have your product model number (BP-DLG1200PS) and purchase information ready when contacting support.