

Parkside PAMFW 12 C3

Parkside PAMFW 12 C3 Cordless Multifunction Tool User Manual

Model: PAMFW 12 C3

Brand: Parkside

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Parkside PAMFW 12 C3 Cordless Multifunction Tool. Please read this manual thoroughly before first use and keep it for future reference.

The Parkside PAMFW 12 C3 is a versatile cordless tool designed for a variety of tasks including sawing, cutting, scraping, and sanding. Its compact design and cordless operation provide flexibility and ease of use in various applications. Note that the battery is sold separately and is not included with the tool.



Image 1: The Parkside PAMFW 12 C3 Cordless Multifunction Tool shown with a selection of its included accessories, highlighting its versatility for different tasks.

2. GENERAL SAFETY INSTRUCTIONS

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

2.1 Work Area Safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2.2 Personal Safety

- Always wear eye protection and hearing protection. Use a dust mask if dust is generated.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.
- Stay alert, watch what you are doing, and use common sense when operating a power tool.

2.3 Power Tool Use and Care

- Do not force the power tool. Use the correct power tool for your application.
- Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Parkside PAMFW 12 C3 tool:

1. Tool Release Lever
2. On/Off Switch
3. LED Battery Display
4. Release Buttons (for battery pack)
5. Dust Extraction Unit Attachment Point
6. Speed Adjustment Wheel
7. Dust Extraction Duct
8. Ventilation Slots
9. LED Work Light
10. Tension Screw (for accessory attachment)

11. Ring Connector (for accessory attachment)
12. 52 mm Scraper
13. 64 mm Diamond Saw Blade
14. 32 mm HCS Plunge Saw Blade
15. Sanding Pad



Image 2: The multifunction tool with the 52mm scraper attachment installed, ready for use.



Image 3: The durable carrying case for the Parkside PAMFW 12 C3, providing convenient storage and transport for the tool and its accessories.

4. SETUP AND ASSEMBLY

4.1 Unpacking

Carefully remove all components from the packaging. Ensure all listed parts are present and undamaged. Dispose of packaging materials responsibly.

4.2 Battery Installation (Battery Sold Separately)

The Parkside PAMFW 12 C3 operates on a compatible 12V battery (not included). To install the battery:

1. Align the battery pack with the battery slot on the tool's handle.
2. Slide the battery pack into the slot until it clicks securely into place.

3. To remove, press the release buttons on the sides of the battery pack and slide it out.

4.3 Attaching Accessories

The tool features a quick-release system for changing accessories. Always ensure the tool is switched off and the battery is removed before changing accessories.

1. Pull the Tool Release Lever (1) upwards to unlock the accessory holder.
2. Align the desired accessory (e.g., saw blade, scraper, sanding pad) with the accessory holder, ensuring the tension screw (10) and ring connector (11) fit correctly.
3. Push the Tool Release Lever (1) downwards until it locks the accessory firmly in place.
4. Gently tug on the accessory to ensure it is securely fastened before operation.



Image 4: A selection of triangular sanding sheets with different grit sizes, designed for use with the multifunction tool's sanding pad attachment.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To switch the tool on, slide the On/Off Switch (2) to the "I" position. To switch it off, slide the switch to the "O" position.

5.2 Speed Adjustment

The Speed Adjustment Wheel (6) allows you to select the oscillation speed suitable for your task and material. Rotate the wheel to increase or decrease the speed. Start with a lower speed and gradually increase as needed.

5.3 Using the LED Work Light

The integrated LED Work Light (9) illuminates your work area, providing better visibility, especially in dimly lit conditions.

5.4 Specific Applications

5.4.1 Sanding

Attach the Sanding Pad (15) and the desired sanding sheet (Image 4). Use for smoothing surfaces, removing paint, or preparing materials for finishing. Apply even, light pressure and move the tool steadily across the surface.



Image 5: A user demonstrating the sanding function of the Parkside multifunction tool on a wooden surface, highlighting its effectiveness for surface preparation.

5.4.2 Scraping

Attach the 52 mm Scraper (12). Ideal for removing old paint, adhesive residues, or soft materials. Hold the tool at a shallow angle to the surface and apply gentle pressure.



Image 6: The multifunction tool being used to scrape material from a floor, showcasing its utility for removal tasks.

5.4.3 Sawing/Cutting

Select either the 64 mm Diamond Saw Blade (13) for abrasive materials or the 32 mm HCS Plunge Saw Blade (14) for wood and softer materials. Ensure the blade is appropriate for the material you are cutting. Apply steady, controlled pressure.

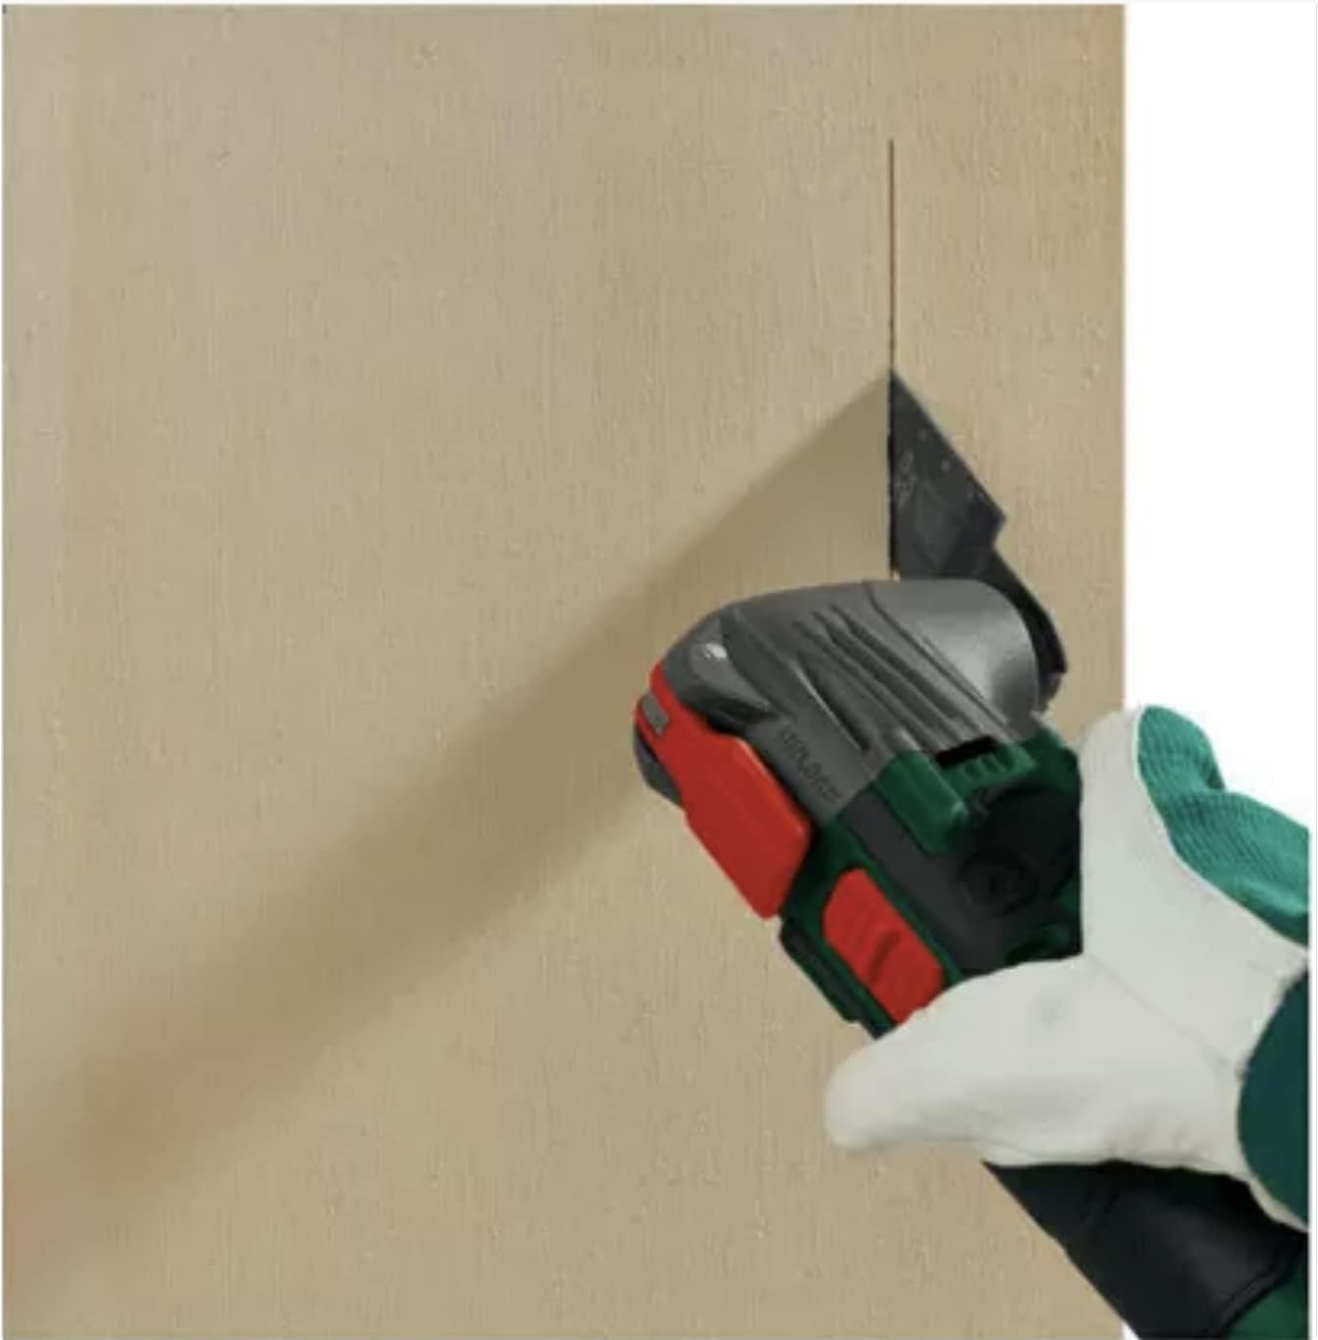


Image 7: A user performing a plunge cut into a wall with the multifunction tool, demonstrating its precision for intricate cuts.



Image 8: The multifunction tool in action, cutting through a textured material, illustrating its capability for various cutting applications.

5.5 Dust Extraction

For cleaner operation, especially during sanding, attach a suitable dust extraction system to the Dust Extraction Unit Attachment Point (5) and connect it to the Dust Extraction Duct (7). This helps to reduce airborne dust and keep your work area tidy.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your tool.

6.1 Cleaning

- Always disconnect the battery pack before cleaning.
- Clean the tool's housing with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Keep the Ventilation Slots (8) clear of dust and debris to prevent overheating. Use compressed air if necessary.
- Clean accessories after each use to maintain their effectiveness.

6.2 Storage

- Store the tool and accessories in a dry, secure place, out of reach of children.
- If storing for extended periods, remove the battery pack from the tool.
- The included carrying case (Image 3) is ideal for storage and transport.

7. TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Tool does not start.	Battery not charged or not properly inserted.	Ensure battery is fully charged and securely inserted. Check LED Battery Display (3).
Reduced performance or excessive vibration.	Worn or dull accessory; incorrect speed setting; excessive pressure.	Replace accessory if worn. Adjust Speed Adjustment Wheel (6). Apply less pressure.
Tool overheats.	Ventilation slots blocked; continuous heavy use.	Clear Ventilation Slots (8). Allow tool to cool down. Reduce workload.
Accessory not holding securely.	Tool Release Lever not fully engaged.	Ensure Tool Release Lever (1) is fully pushed down and locked.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	PAMFW 12 C3
Model Number	10c82b3b-5c2a-48c8-9654-86cc91690503
Brand	Parkside (Manufacturer: Lidl)
Power Source	Battery-powered (12V, battery sold separately)
Dimensions (Package)	32.1 x 23.6 x 10.9 cm
Weight (Tool only)	Approx. 1.79 kg (package weight)
Special Features	Cordless operation, LED work light, speed adjustment, quick accessory change system.
Included Accessories	52 mm Scraper, 64 mm Diamond Saw Blade, 32 mm HCS Plunge Saw Blade, Sanding Pad.

9. WARRANTY INFORMATION

Specific warranty details for the Parkside PAMFW 12 C3 are not provided in the product data. Please refer to the warranty card included with your purchase or contact the retailer/manufacturer directly for information regarding warranty coverage and terms.

10. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to order replacement parts, please contact the retailer where you purchased the product or refer to the manufacturer's official website for support contact details. For general inquiries, please have your product model (PAMFW 12 C3) and ASIN (B08CD3M88X) ready.

© 2025 Parkside. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.