

[manuals.plus](#) /

› [PAXCESS](#) /

› [PAXCESS Electronic Drum Set G3006LC User Manual](#)

## PAXCESS G3006LC

# PAXCESS Electronic Drum Set (Model G3006LC) User Manual

Model: G3006LC

## 1. INTRODUCTION

---

This manual provides instructions for the PAXCESS Electronic Drum Set, Model G3006LC. This portable drum set is designed for practice and entertainment, featuring a compact, roll-up design. It includes multiple drum pads, foot pedals, and offers various sound options for diverse musical styles. The unit is equipped with a rechargeable battery, built-in speakers, and headphone connectivity for versatile use.



Image 1.1: The PAXCESS Electronic Drum Set G3006LC, a portable and colorful drum pad with drumsticks and foot pedals.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1 x Electronic Drum (7 Pads)
- 1 x Pair of Drum Sticks
- 2 x Foot Pedals (for Bass Drum and Hi-Hat functions)
- 1 x USB Power Cable
- 1 x Audio Cable
- 1 x Headphone
- 1 x User Manual

# Truly slowing down Accompany childhood growth



Image 2.1: All components included in the PAXCESS Electronic Drum Set package, laid out on a white surface.

## 3. PRODUCT OVERVIEW

---

The PAXCESS Electronic Drum Set features a flexible drum pad with integrated control module. Familiarize yourself with the various components and their functions.

# Introduces Marvellous Music Learning Methods



Image 3.1: Detailed diagram illustrating the drum pads (SNARE, TOMS, CRASH, RIDE, HI-HAT) and the control panel connections (OFF-ON, MP3, PHONES, PEDAL, USB/DC 5V).

## 3.1 Drum Pads

- **SNARE:** Central drum sound.
- **TOMS (1, 2, 3):** Three different tom-tom drum sounds.
- **CRASH (1, 2):** Two crash cymbal sounds.
- **RIDE:** Ride cymbal sound.
- **HI-HAT:** Hi-hat cymbal sound.

## 3.2 Control Panel and Connections

- **OFF-ON Switch:** Powers the unit on or off.
- **MP3 Input:** Connect an external audio device (e.g., smartphone, MP3 player) to play along with music.
- **PHONES Output:** Connect headphones for private practice.
- **PEDAL Input:** Connect the included foot pedals for bass drum and hi-hat control.

- **USB/DC 5V Port:** Used for charging the device and for MIDI output connection to a computer.
- **Function Buttons:** Control timbre selection, demo songs, rhythms, volume, and recording functions.

## 4. SETUP INSTRUCTIONS

---

### 4.1 Initial Charging

1. Connect the provided USB power cable to the USB/DC 5V port on the drum set.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. Allow the unit to charge fully before first use. A full charge provides up to 10 hours of playtime.

### 4.2 Connecting Foot Pedals

1. Locate the two foot pedals included in the package.
2. Plug the cables from the foot pedals into the "PEDAL" input port on the control panel. One pedal controls the bass drum sound, and the other controls the hi-hat function.

### 4.3 Audio Output Options

- **Built-in Speakers:** The drum set has integrated dual speakers for direct sound output.
- **Headphones:** For private practice, connect the included headphones or any standard 3.5mm headphones to the "PHONES" output jack.
- **External Speakers:** To connect to external speakers, use the audio cable (if provided, or a standard 3.5mm audio cable) from the "PHONES" output to the input of your external speaker system.

### 4.4 MIDI Connection (Optional)

The USB/DC 5V port also functions as a MIDI output. You can connect the drum set to a computer using a USB cable to use it as a MIDI controller for music production software or drumming games.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

Slide the "OFF-ON" switch to the "ON" position to power on the drum set. Slide it to "OFF" to power down the unit.

### 5.2 Adjusting Volume

Use the volume control buttons on the control panel to increase or decrease the sound output level. There are up to 10 levels of volume adjustment.

### 5.3 Selecting Timbres, Demo Songs, and Rhythms

The drum set offers 5 Timbres, 8 Demo Songs, and 3 Rhythms. Use the dedicated buttons on the control panel to cycle through and select these options to customize your drumming experience.

### 5.4 Recording and Playback

The unit supports recording your drum performances. Refer to the specific buttons on the control panel for initiating recording and playing back your recorded tracks.

### 5.5 Playing Along with External Music

Connect your MP3 player or smartphone to the "MP3" input jack using an audio cable. You can then play along with your favorite songs through the drum set's speakers or connected headphones.

## 6. MAINTENANCE

The PAXCESS Electronic Drum Set is made from waterproof silicone, making it easy to clean and maintain.



Image 6.1: Demonstrates the ease of cleaning the waterproof silicone drum pad with a cloth.

### 6.1 Cleaning

- Ensure the drum set is powered off and disconnected from any power source before cleaning.
- Wipe the silicone drum pads with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
- Do not submerge the control module in water. Use a dry or slightly damp cloth to clean the control panel.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the surface.

### 6.2 Storage

When not in use, the drum set can be rolled up for compact storage, saving space. Store it in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

If you encounter any issues with your PAXCESS Electronic Drum Set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speakers/headphones.	Unit is off, volume is too low, headphones/speakers not connected properly, or battery is low.	Ensure unit is ON. Increase volume. Check headphone/speaker connections. Charge the battery.
Drum pads are unresponsive.	Unit is off, or a specific pad may be faulty.	Ensure unit is ON. Try restarting the device. If a specific pad remains unresponsive, contact customer support.
Foot pedals not working.	Pedals not connected correctly.	Ensure foot pedals are securely plugged into the "PEDAL" input.
Cannot connect to computer via MIDI.	Incorrect USB cable, driver issues, or software settings.	Use the provided USB cable. Ensure your computer recognizes the device. Check MIDI settings in your music software.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	G3006LC
Drum Pads	7 (1 Snare, 3 Toms, 1 Crash, 1 Ride, 1 Hi-Hat)
Foot Pedals	2 (Bass Drum, Hi-Hat)
Timbres	5
Demo Songs	8
Rhythms	3
Battery	Built-in 2000mAh rechargeable lithium-ion
Playtime per Charge	Up to 10 hours
Audio Output	Built-in dual speakers, 3.5mm headphone jack
Connectivity	USB (charging/MIDI out), 3.5mm MP3 input, 3.5mm headphone output, Pedal input
Material	Waterproof Silicone (drum pad), Bass Wood (body material)
Item Weight	2.42 pounds (1.1 kg)
Product Dimensions (L x W x H)	16.73 x 5.91 x 2.56 inches (42.5 x 15 x 6.5 cm)







## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase

documentation or visit the official PAXCESS website. Keep your proof of purchase for any warranty claims.

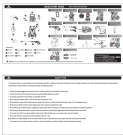

Related Documents - G3006LC

	<p><a href="#">Portable Electronic Drum Pad G3006L User Guide   Paxcess</a></p> <p>Comprehensive user guide for the Paxcess Portable Electronic Drum Pad (Model G3006L), covering setup, features, safety precautions, specifications, and maintenance.</p>
	<p><a href="#">Paxcess JC-230 Steam Mop User Manual</a></p> <p>User manual for the Paxcess JC-230 Steam Mop, including safety precautions, product features, components, specifications, usage instructions, maintenance, and troubleshooting.</p>
	<p><a href="#">Paxcess High Pressure Washer Quick Start Guide and Safety Tips</a></p> <p>A quick start guide and safety tips for the Paxcess High Pressure Washer, covering assembly, operation, and important safety precautions.</p>
	<p><a href="#">Paxcess XWASHER-P2 High Pressure Washer User Manual</a></p> <p>This user manual provides detailed instructions for the safe operation, maintenance, and troubleshooting of the Paxcess XWASHER-P2 High Pressure Washer. It includes safety guidelines, assembly instructions, technical specifications, and warranty information.</p>
	<p><a href="#">Paxcess SK-BTI-029 Bluetooth Transmitter &amp; Receiver User Manual</a></p> <p>User manual for the Paxcess SK-BTI-029 Bluetooth transmitter and receiver. This guide provides detailed information on product features, specifications, setup, charging, pairing instructions for single and dual devices, and warranty details.</p>
	<p><a href="#">PAXCESS TWINS Portable Bluetooth Speaker User Manual and Guide</a></p> <p>Comprehensive user manual for the PAXCESS TWINS portable Bluetooth 2-in-1 stereo speaker. Includes detailed instructions on button functions, setup, charging, splitting/reconnecting units, technical specifications, LED indicators, and troubleshooting FAQs.</p>