

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Hamilton Beach](#) /
- › Hamilton Beach Wave Action Blender (Model 58175) User Manual

Hamilton Beach 58175

Hamilton Beach Wave Action Blender (Model 58175) User Manual

Brand: Hamilton Beach | Model: 58175

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Hamilton Beach Wave Action Blender, Model 58175. Please read all instructions carefully before use and retain this manual for future reference.





Image: The Hamilton Beach Wave Action Blender, featuring a black base and a clear glass jar filled with colorful fruits and ice, ready for blending.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:


- Read all instructions.
- To protect against electrical shock, do not place the blender base, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle carefully.
- Always operate blender with lid in place.
- Do not blend hot liquids.

PARTS AND FEATURES

Your Hamilton Beach Wave Action Blender is designed for efficient and quiet blending. Key components and features include:

- **Blender Base:** Houses the 800-watt motor and control panel. Features a patented design for quieter operation by minimizing motor and airflow noise.
- **40 oz. Glass Jar:** Durable and dishwasher safe, designed for continuous ingredient circulation.
- **Stainless Steel Ice Sabre Blades:** Engineered for strength and durability, capable of crushing ice and tough ingredients effectively.
- **Lid with Patented No-Mess Pouring Spout:** Ensures easy pouring without spills or drips, featuring a hinged cap.
- **Control Panel:** Intuitive buttons for various blending functions.

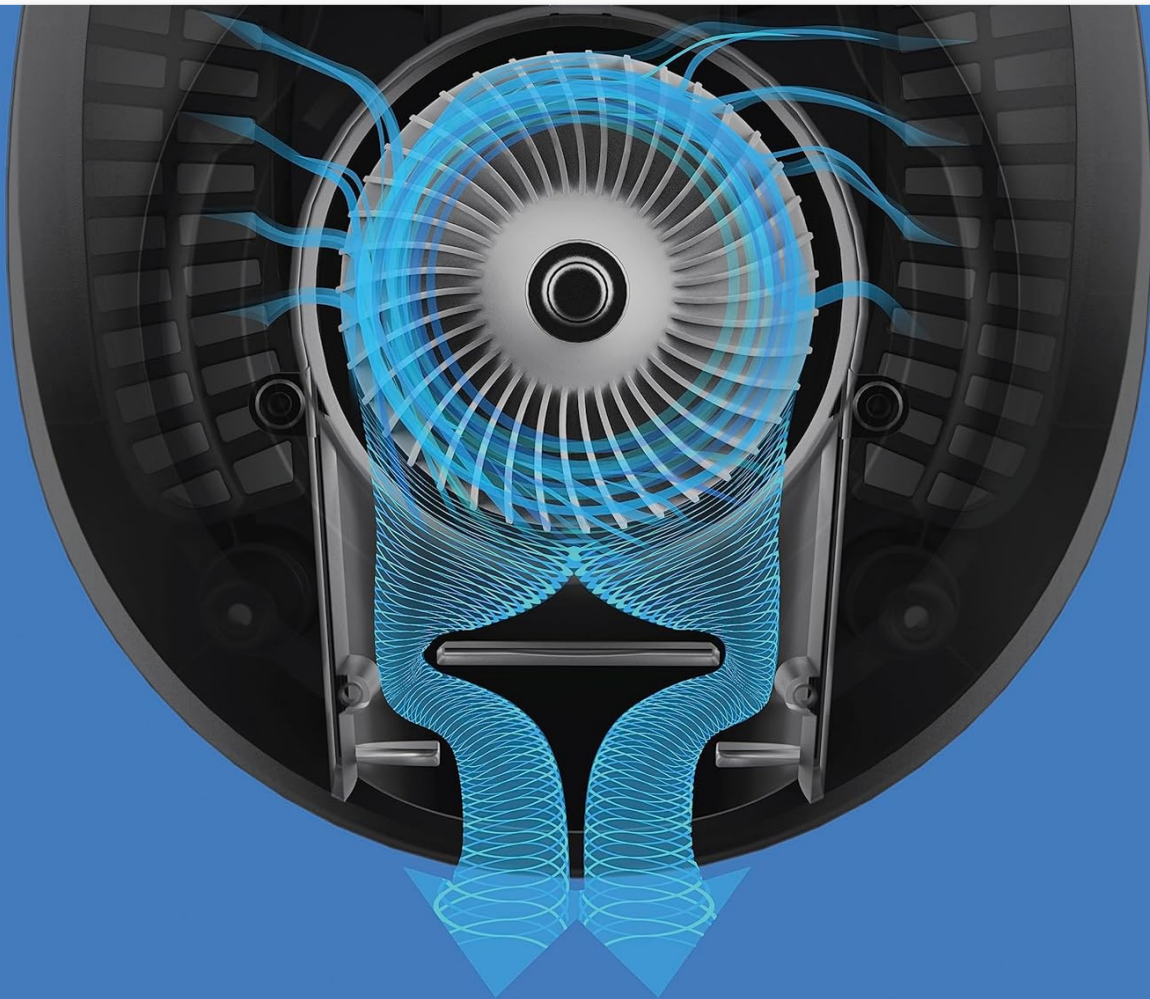

Quieter blending

Patented design minimizes
motor & airflow noise

Image: An internal diagram illustrating the patented airflow design within the blender base, which contributes to quieter blending by minimizing motor and airflow noise.



Stainless steel Ice Sabre® blades easily crush ice

Image: A close-up view of the stainless steel Ice Sabre blades, designed for efficient ice crushing and blending of tough ingredients.



Patented no-mess pouring spout

Lets you pour without
messy spills or drips and
has a hinged cap

Image: The blender pouring a smooth, pink beverage from its patented no-mess pouring spout into a glass, highlighting its spill-free design.

SETUP

Before first use, wash all parts except the blender base in hot, soapy water. Rinse thoroughly and dry. The glass jar, removable blades, and lid are dishwasher safe.

1. Place the blender base on a clean, dry, and stable surface.
2. Ensure the removable blades are securely seated in the bottom of the glass jar.
3. Place the glass jar onto the blender base, ensuring it is properly aligned and seated.
4. Place the lid securely on the glass jar. Ensure the lid is properly aligned and snapped into place to prevent leaks during operation.

OPERATING INSTRUCTIONS

Your blender features 800 watts of peak power and intuitive controls for various blending tasks.

Easily crush and blend ice, greens & frozen ingredients

With 800 watts of peak
blending power



Image: The blender jar filled with ice, leafy greens, and frozen fruit, demonstrating its capability to crush and blend various ingredients.

Ultra-smooth results

Patented Wave~Action® system continuously forces ingredients into blades



Image: A diagram showing the patented Wave~Action system, where ingredients are continuously forced down into the blades and circulated for ultra-smooth results.

Blending Process:

1. Add ingredients to the glass jar. For best results, add liquids first, then soft ingredients, followed by hard ingredients and ice. Do not overfill past the maximum fill line.
2. Secure the lid firmly onto the jar.
3. Plug the blender into a standard electrical outlet.
4. Select the desired blending function using the control panel buttons. The buttons are designed for specific tasks:
 - **OFF:** Turns the blender off.
 - **MIX/MILKSHAKE/EASY CLEAN:** For lighter blending tasks, milkshakes, or quick cleaning.
 - **PUREE/SHAKE/ICY DRINK:** For creating smooth purees, shakes, and icy beverages.
 - **DICE/CHOP/SALSA:** For chopping ingredients like vegetables for salsa.
 - **GRIND/GRATE/PULSE:** For grinding harder ingredients or using short bursts of power.

5. Hold the lid during operation, especially when blending thicker mixtures.
6. Once blending is complete, press the OFF button and unplug the blender.
7. Carefully remove the lid and pour your blended mixture using the no-mess spout.

Tips for Best Results:

- For thicker mixtures, use the PULSE function in short bursts to help move ingredients towards the blades.
- Do not run the blender continuously for more than 2 minutes. Allow it to rest for a few minutes between cycles.
- If ingredients stick to the sides, turn off the blender, remove the lid, and use a spatula to scrape down the sides. Re-secure the lid before continuing.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.



Image: The clear glass jar of the blender, highlighting its BPA-free material in food zones and emphasizing its ease of cleaning, as the jar, blades, and lid are dishwasher safe.

Cleaning:

1. **Immediate Cleaning:** For quick cleaning, add 2 cups of warm water and a drop of dish soap to the blender jar. Secure the lid and press the 'EASY CLEAN' button or pulse for 10-15 seconds. Rinse thoroughly.
2. **Deep Cleaning:** Disassemble the jar, blades, and lid. All these parts are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Exercise caution when handling the sharp blades.
3. **Blender Base:** Wipe the blender base with a damp cloth. Do not immerse the base in water or any other liquid.
4. Ensure all parts are completely dry before reassembling or storing.

Storage:

Store the blender in a dry place. You can store the jar assembled on the base or separately.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; jar not properly seated on base.	Ensure blender is plugged in; check power outlet; ensure jar is securely seated.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients stuck.	Add more liquid; reduce ingredient quantity; use PULSE function or scrape sides (with blender off).
Lid leaks during blending.	Lid not properly secured; jar overfilled.	Ensure lid is firmly snapped into place; do not fill past max line.
Motor smells or overheats.	Overloaded; continuous operation for too long.	Reduce load; allow blender to cool down for 10-15 minutes before resuming.

SPECIFICATIONS

Feature	Detail
Brand	Hamilton Beach
Model Number	58175
Color	Black
Capacity	40 oz. Glass Jar
Power	800 Watts (Peak)

Feature	Detail
Blades	Stainless Steel Ice Sabre Blades
Special Features	Quiet Design, Wave~Action System, No-Mess Pouring Spout
Care Instructions	Dishwasher Safe (Jar, Blades, Lid)
Product Dimensions	8.66 x 6.5 x 14.69 inches
Item Weight	6.46 pounds
UPC	040094581757

Hamilton Beach®



Quiet Blender

Image: A visual representation of the Hamilton Beach Quiet Blender with its key dimensions: approximately 16 inches tall, 6.5 inches deep, and 6 inches wide.

WARRANTY AND SUPPORT

Hamilton Beach products are manufactured to the highest standards. This product typically comes with a 5-year limited warranty, covering defects in material and workmanship from the original date of purchase. Please refer to the official product documentation for specific warranty terms and conditions.

For customer support, service, or to inquire about replacement parts, please visit the official Hamilton Beach website or contact their customer service department. You may also refer to the official user manual PDF for more detailed information: [Download User Manual \(PDF\)](#)