

Severin RG 2372

SEVERIN Raclette Party Grill RG 2372 Instruction Manual

MODEL: RG 2372

1. Introduction

Thank you for choosing the SEVERIN Raclette Party Grill RG 2372. This appliance is designed for preparing a variety of grilled and baked dishes for up to 8 people. The natural stone plate ensures excellent heat retention for gentle cooking, while the non-stick raclette pans allow for individual culinary creations. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance of your device. Keep this manual for future reference.

2. Important Safety Instructions

- Read all instructions before operating the appliance.
- This appliance is intended for household use only. Do not use outdoors.
- Ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always supervise children when they are near the appliance.
- Surfaces become hot during use. Use oven mitts or handles.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow to cool completely before handling or cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Place the appliance on a stable, heat-resistant surface, away from walls and flammable materials.

3. Product Overview and Components

The SEVERIN Raclette Party Grill RG 2372 features a robust design for versatile grilling and baking. Key components include:

- Natural Stone Plate: For gentle and even grilling.
- 8 Non-Stick Raclette Pans: For individual portions and easy cleaning.

- Heating Element: Provides heat for both the stone plate and raclette pans.
- Rotary Control with Control Light: For adjusting temperature and indicating operation.
- Insulated Handles: For safe handling of raclette pans.



Front view of the SEVERIN Raclette Party Grill RG 2372, showcasing the natural stone grilling surface on top and the eight individual raclette pans beneath, ready for use. The control knob is visible at the front.

4. Setup

Follow these steps to set up your raclette grill for first use:

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Initial Cleaning:** Before first use, wipe the natural stone plate and raclette pans with a damp cloth. Dry thoroughly. The heating element and base should be wiped with a dry cloth.
3. **Placement:** Place the raclette grill on a stable, level, and heat-resistant surface. Ensure there is sufficient space around the appliance for ventilation (at least 10 cm from walls or other objects).
4. **Power Connection:** Plug the power cord into a suitable grounded wall outlet (220V).



The SEVERIN Raclette Party Grill RG 2372 in operation, with grilled fish, vegetables, and meat on the natural stone plate, and melted cheese with ingredients in the raclette pans below. This image demonstrates typical usage.

5. Operating Instructions

To operate your SEVERIN Raclette Party Grill:

1. **Preheating:** Turn the rotary control knob to the 'MAX' position. The control light will illuminate, indicating the appliance is heating. Allow the grill to preheat for approximately 10-15 minutes to reach the desired temperature, especially for the natural stone plate.
2. **Temperature Control:** Once preheated, you can adjust the temperature using the rotary control knob between 'MIN' and 'MAX' to suit your cooking needs.
3. **Using the Natural Stone Plate:** Lightly grease the stone plate with a small amount of cooking oil before placing food items like meat, fish, or vegetables directly onto it for grilling.
4. **Using the Raclette Pans:** Place desired ingredients (e.g., cheese, vegetables, small pieces of meat) into the non-stick raclette pans. Slide the pans under the heating element for baking and melting.
5. **Serving:** Use wooden or heat-resistant plastic spatulas to remove food from the stone plate and raclette pans to avoid scratching the non-stick coating.
6. **Switching Off:** After use, turn the rotary control knob to the 'MIN' position and unplug the appliance from the wall outlet. Allow the grill to cool down completely before cleaning.



A detailed view of the rotary control knob on the SEVERIN Raclette Party Grill RG 2372. The knob features 'MIN' and 'MAX' settings and is surrounded by an illuminated blue ring, indicating power and temperature adjustment.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and hygiene of your raclette grill.

- **Always unplug the appliance and allow it to cool completely before cleaning.**
- **Natural Stone Plate:** Once cooled to lukewarm, place a damp cloth over the stone to loosen any stuck-on food. Scrape off larger residues with a wooden or plastic spatula. Clean with warm water and a soft sponge. Avoid harsh detergents as the stone is porous. Dry thoroughly.
- **Raclette Pans:** The non-stick pans can be easily cleaned with warm soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads to protect the non-stick coating.
- **Base Unit:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water.
- **Storage:** Store the clean and dry appliance in a safe place, away from moisture.

7. Troubleshooting

If you encounter issues with your raclette grill, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet faulty; rotary control not turned on.	Check power plug; test outlet with another appliance; turn rotary control to 'MAX'.
Food sticks to the stone plate.	Plate not sufficiently greased; plate not hot enough.	Lightly grease the stone plate before use; allow sufficient preheating time.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. It should dissipate quickly.

8. Technical Specifications

- **Brand:** Severin
- **Model:** RG 2372
- **Power:** Max. 1300 Watts
- **Voltage:** 220 Volts
- **Material:** Stone, Stainless Steel
- **Product Dimensions:** Approximately 56.5 x 25 x 14.5 cm (L x W x H)
- **Item Weight:** Approximately 6.4 kg
- **Special Features:** Adjustable thermostat, Easy to clean, Rotary control with control light
- **Included Components:** Grill plates, 8 Raclette pans, Stone grill plate

9. Warranty and Customer Support


SEVERIN products are manufactured to high-quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or warranty claims, please contact your local SEVERIN customer service or the retailer where you purchased the product. Keep your proof of purchase for warranty purposes.



Entdecken Sie den SEVERIN RG 9690 Raclette Party Grill. Diese umfassende Anleitung bietet detaillierte Informationen und Sicherheitshinweise in mehreren Sprachen.



Umfassende Bedienungsanleitung und Sicherheitshinweise für den SEVERIN RG 2374 Raclette Party Grill mit Naturgrillstein. Enthält Anleitungen in mehreren Sprachen zur sicheren und effektiven Nutzung.

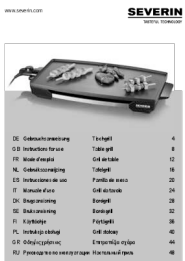

Umfassende Bedienungsanleitung und Sicherheitshinweise für den SEVERIN Tischgrill. Enthält Informationen zu Anschluss, Aufbau, Bedienung, Reinigung, Entsorgung und Garantie.



An exploded view and parts list for the Severin PG 8107 Barbecue Grill, detailing all components for assembly and maintenance.



Umfassende Sicherheitshinweise für den SEVERIN Kontaktgrill KG 2398 und KG 2399. Erfahren Sie mehr über bestimmungsgemäßen Gebrauch, Installation, Betrieb und Risikovermeidung.



