

Wetocke SK-X10

Wetocke SK-X10 Vinyl Record Player Style Bluetooth Speaker User Manual

INTRODUCTION

Thank you for choosing the Wetocke SK-X10 Vinyl Record Player Style Bluetooth Speaker. This portable speaker combines a classic retro design with modern audio technology, offering versatile playback options including Bluetooth, AUX input, and SD card support. Please read this manual carefully to ensure proper use and optimal performance of your device.

PACKAGE CONTENTS

- 1 x Wetocke SK-X10 Bluetooth Speaker
- 1 x USB Charging Cable
- 1 x AUX Cable
- 1 x User Manual

PRODUCT OVERVIEW

The Wetocke SK-X10 speaker features a unique vinyl record player aesthetic. Key components include the speaker grille, volume/power knob, mode selection button, and the decorative spinning record.



Image: Front view of the Wetoocke SK-X10 Bluetooth Speaker in white, showcasing the speaker grille, volume knob, and the decorative record on top.



Image: A hand demonstrating the adjustment of the volume knob on the Wetocke SK-X10 Bluetooth Speaker.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the speaker using the provided USB charging cable. Connect the USB cable to a DC 5V1A power source (e.g., a computer USB port or a USB wall adapter). The charging indicator light will show charging status.
3. **Power On:** To power on the speaker, gently move the tone arm (needle) from its resting position over the decorative record. The speaker will emit an audible prompt indicating it is powered on and ready for use.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Move the tone arm over the record.
- **Power Off:** Return the tone arm to its resting position.

Mode Selection

The speaker supports Bluetooth, AUX, and SD card playback modes. To switch between modes, press the mode selection button located on the speaker's top surface (near the record).

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (an audible prompt will confirm).
2. On your smartphone or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "SK-X10" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation. You can now play audio wirelessly from your device.

AUX Input Mode

1. Connect one end of the provided AUX cable to the AUX input port on the speaker.
2. Connect the other end of the AUX cable to the audio output jack of your external device.
3. Switch the speaker to AUX mode using the mode selection button. Audio will now play through the speaker.

SD Card Playback Mode

1. Insert a compatible SD (TF) card with audio files into the SD card slot on the speaker.
2. Switch the speaker to SD card mode using the mode selection button. The speaker will automatically begin playing audio files from the card.

Volume Control

Adjust the volume by rotating the mechanical knob on the front of the speaker, similar to a traditional record player.

CHARGING

The Wetocke SK-X10 speaker has a built-in 3.7V 1000mAh Li-ion battery. To charge:

- Connect the provided USB charging cable to the speaker's charging port.
- Connect the other end of the USB cable to a DC 5V1A power source.
- Charging typically takes 2-3 hours for a full charge, providing approximately 8 hours of music playback.
- The charging indicator light will provide status feedback (e.g., red for charging, off or blue for fully charged, depending on the model).

SPECIFICATIONS

Model	SK-X10
Dimensions (L x W x H)	112.4mm x 105mm x 57mm (4.42in x 4.13in x 2.24in)
Weight	300g (0.66lb)
Battery	3.7V 1000mAh Li-ion
Charging Time	2-3 hours

Playback Time	Approximately 8 hours
Speaker Output	40mm, 4Ω, 5W
Charging Input	DC 5V1A
Bluetooth Version	4.1 + EDR
Bluetooth Range	Up to 10 meters (32.8 feet)
Supported Modes	Bluetooth, AUX, SD Card (TF Card)
Material	Plastic

TROUBLESHOOTING

- **No Power:** Ensure the speaker is fully charged. Check the USB charging cable connection.
- **No Sound:** Verify the volume is turned up on both the speaker and your connected device. Ensure the correct playback mode (Bluetooth, AUX, SD Card) is selected.
- **Bluetooth Pairing Issues:** Make sure the speaker is in Bluetooth pairing mode. Disable and re-enable Bluetooth on your device, then try pairing again. Ensure your device is within the 10-meter range.
- **SD Card Not Playing:** Ensure the SD card is inserted correctly and contains compatible audio files.

MAINTENANCE

- Keep the speaker away from water, moisture, and extreme temperatures.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping or subjecting the speaker to strong impacts.
- When not in use for extended periods, store the speaker in a cool, dry place and charge it periodically to maintain battery health.

WARRANTY AND SUPPORT

The Wetocke SK-X10 Bluetooth Speaker comes with a one-year warranty from the date of purchase. If you encounter any issues or require support, please contact Wetocke customer service with your purchase details. Do not attempt to disassemble or repair the device yourself, as this may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question