

Jocel JME001368

Jocel JME001368 Built-in Microwave Oven User Manual

Model: JME001368 | Brand: Jocel

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Jocel JME001368 Built-in Microwave Oven. This manual provides important information regarding the installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

1.1 Important Safety Instructions

- Always ensure the appliance is properly grounded.
- Do not operate the microwave if the door is damaged or if the seals are worn.
- Never attempt to repair or modify the appliance yourself. Contact qualified service personnel.
- Do not heat sealed containers, as they may explode.
- Use only microwave-safe cookware.
- Supervise children when the appliance is in use.
- Clean the microwave regularly to prevent grease buildup.

2. PRODUCT OVERVIEW

The Jocel JME001368 is a 25-liter built-in microwave oven featuring a grill function and a modern touch panel control. Its sleek white glass front and stainless steel interior are designed for durability and ease of cleaning.

2.1 Key Features

- **Capacity:** 25 Liters
- **Functions:** Microwave, Grill, Combination Grill, Defrost
- **Microwave Output Power:** 900 W

- **Grill Output Power:** 1000 W
- **Control Type:** Touch Panel with LCD screen
- **Power Levels:** 5 microwave power levels
- **Timer:** 60-minute digital timer
- **Interior Material:** Stainless Steel
- **Turntable Diameter:** Ø 270 mm
- **Safety:** Child protection lock
- **External Dimensions (H x W x D):** 390 x 595 x 345 mm

2.2 Product Image

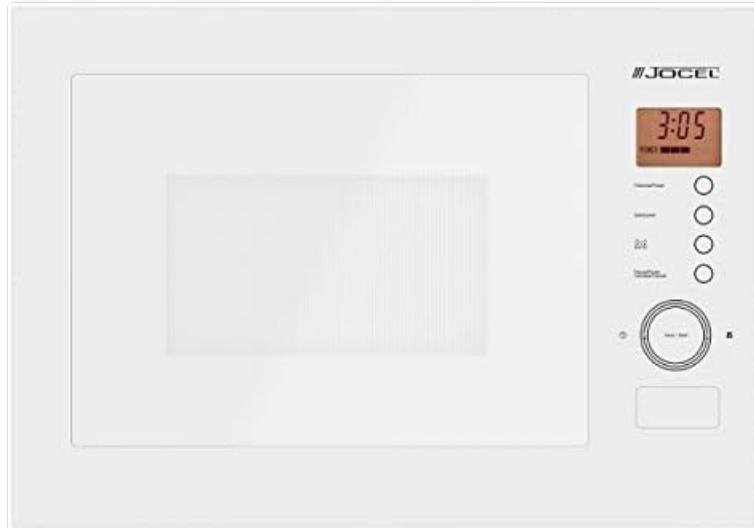


Figure 1: Front view of the Jocel JME001368 Built-in Microwave Oven. The image displays the appliance's white exterior, the transparent door, and the touch control panel on the right side with a digital display showing "3:05".

3. INSTALLATION AND SETUP

This microwave oven is designed for built-in installation. Proper ventilation and cabinet dimensions are crucial for safe and efficient operation.

3.1 Unpacking

- Carefully remove all packaging materials.
- Check the appliance for any signs of damage. Do not install if damaged.
- Ensure all accessories, including the turntable and roller ring, are present.

3.2 Cabinet Dimensions

Ensure the cabinet opening meets the following requirements for proper fit and ventilation:

- **External Microwave Dimensions (H x W x D):** 390 x 595 x 345 mm
- **Internal Microwave Dimensions (H x W x D):** 218 x 347 x 323 mm
- Refer to the installation template provided with your appliance for precise cutout dimensions.

3.3 Electrical Connection

- **Voltage:** 230 V ~ 50 Hz
- Ensure the electrical outlet is properly grounded and matches the appliance's requirements.
- Do not use extension cords or adapters.

3.4 Turntable Assembly

1. Place the roller ring in the center of the microwave cavity.
2. Place the glass turntable (Ø 270 mm) securely on top of the roller ring.
3. Ensure the turntable rotates freely.

4. OPERATING INSTRUCTIONS

The Jocel JME001368 features a user-friendly touch panel and LCD screen for easy operation.

4.1 Setting the Clock

Upon first power-up or after a power outage, the display will show "0:00". Follow the instructions in your appliance's specific manual for setting the time using the touch controls.

4.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Select the desired microwave power level (5 available levels).
4. Set the cooking time using the digital timer (up to 60 minutes).
5. Press "Start" to begin cooking. An audible indicator will sound at the end of the operation.

4.3 Grill Cooking

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Select the grill function.
3. Set the desired cooking time.
4. Press "Start".

4.4 Combination Cooking

This mode combines microwave and grill functions for faster cooking and browning.

- Refer to the specific combination settings in your appliance's manual for optimal results.

4.5 Defrost Function

The defrost function allows for thawing food by weight or time.

- Select the defrost mode.
- Input the weight of the food or the desired defrost time.

- Press "Start".

4.6 Child Protection Lock

To prevent accidental operation, especially by children, activate the child lock function. Consult your appliance's manual for specific instructions on how to activate and deactivate the child lock via the touch panel.

5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

5.1 Cleaning the Interior

- Always unplug the appliance before cleaning.
- Wipe the stainless steel interior with a damp cloth and mild detergent after each use.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen residue.
- Clean the turntable and roller ring with warm, soapy water. They are often dishwasher safe.

5.2 Cleaning the Exterior

- Wipe the white glass front and exterior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners or scouring pads, as they can scratch the surface.
- Clean the door seals and surrounding areas to ensure proper closure.

6. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; Power cord unplugged; Fuse blown/circuit breaker tripped; Child lock activated.	Ensure door is firmly closed; Check power connection; Reset circuit breaker or replace fuse; Deactivate child lock.
Food not heating.	Incorrect power level or cooking time set; Microwave-safe cookware not used.	Adjust power level and time; Use appropriate cookware.
Turntable not rotating.	Turntable not correctly placed; Obstruction under turntable.	Re-position turntable and roller ring; Remove any obstructions.
Unusual noises during operation.	Food container touching cavity walls; Turntable not seated correctly.	Adjust food container position; Re-seat turntable.

If the problem persists after trying these solutions, please contact qualified service personnel.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Jocel
Model Number	JME001368
External Dimensions (H x W x D)	39.0 x 59.5 x 34.5 cm
Internal Dimensions (H x W x D)	21.8 x 34.7 x 32.3 cm
Capacity	25 Liters
Installation Type	Built-in
Special Feature	Child Protection
Cooking Modes	Microwave, Grill, Combination Grill, Defrost
Color	White
Voltage	230 V ~ 50 Hz
Microwave Output Power	900 Watts
Grill Output Power	1000 Watts
Microwave Input Power	1400 Watts
Defrost Type	Electric Defrost
Material (Front)	Glass
Interior Material	Stainless Steel
Controller Type	Touch Panel (LCD Screen)
Turntable Diameter	Ø 270 mm
Net / Gross Weight	14.2 kg / 15.8 kg

8. WARRANTY AND SUPPORT

Jocel products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or contact Jocel customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, you may visit the official Jocel website or contact your local authorized service center.

© 2023 Jocel. All rights reserved. Information in this manual is subject to change without notice.