

ALLIMITY RM-C3090

ALLIMITY RM-C3090 Replacement Remote Control Instruction Manual

For JVC 4K UHD TV Models

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your ALLIMITY RM-C3090 replacement remote control. This remote is designed to function as a direct replacement for various JVC 4K UHD TV models. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or humidity.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control. This may void any implied warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

PACKAGE CONTENTS

Verify that your package contains the following items:

- 1 x ALLIMITY RM-C3090 Replacement Remote Control
- (Batteries are not included and must be purchased separately)

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment. **Note:** Rechargeable batteries may not be compatible or provide optimal performance.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Image: The ALLIMITY RM-C3090 remote control, showing its design and typical button layout. The battery compartment is located on the rear side.

OPERATING INSTRUCTIONS

This remote control is designed to work immediately with compatible JVC 4K UHD TV models without requiring any programming. Simply point the remote control towards your television and press the desired function button.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **CH +/-:** Changes channels sequentially.
- **VOL +/-:** Adjusts the volume level.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Exit/Back Button:** Exits the current menu or returns to the previous screen.

COMPATIBLE JVC TV MODELS

The ALLIMITY RM-C3090 remote control is compatible with the following JVC 4K UHD TV models:

- LT-24VH42J, LT-24VH42K, LT-24VH30K, LT-24V47JH, LT-24V44JH
- LT-32V3010, LT-32V4201, LT-32VF43I, LT-32VH42K, LT-32V4200, LT-32V48JH, LT-32VH30K
- LT-39VF42K
- LT-40VF42K, LT-40VF42I, LT-40V3000, LT-40VF43A, LT-40V4200
- LT-43V2100, LT-43VF43A, LT-43V44JF
- LT-49V4200
- LT-50VF30K

This list may not be exhaustive. If your JVC 4K UHD TV model is not listed but is similar to those provided, the remote may still be compatible.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.

Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm that the remote control is pointed directly at the TV.
- **Some buttons not working:**
 - This remote is a replacement and may not have all the exact functions of your original TV remote if your original had specialized smart TV buttons not present on this model.
 - Ensure the batteries have sufficient power.
- **Short operating range:**
 - Replace batteries with new ones.
 - Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
Model Number	RM-C3090 (WXZY-RM-C3090-ACEF)
Brand	ALLIMITY
Connectivity Technology	Infrared (IR)
Number of Buttons	8
Maximum Range	10 Meters
Battery Type	AAA Alkaline (2 required, not included)
Compatible Devices	JVC 4K UHD TVs (Specific models listed above)

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the retailer or the ALLIMITY official website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question