

[Manuals.plus](#) /

› [Keenstone](#) /

› Keenstone 2-Slice Retro Stainless Steel Toaster (Model WT-330) User Manual

Keenstone WT-330

Keenstone 2-Slice Retro Stainless Steel Toaster (Model WT-330) User Manual

Your guide to perfect toast every time.

1. PRODUCT OVERVIEW

The Keenstone 2-Slice Retro Stainless Steel Toaster is designed for efficient and consistent toasting. It features wide slots to accommodate various bread types, multiple browning settings, and convenient functions for different toasting needs. Its durable stainless steel construction ensures longevity and safety.



Image: Front view of the Keenstone 2-Slice Retro Stainless Steel Toaster in white, showcasing its sleek design and control panel.

Key Features:

- **Versatile Toasting Functions:** Includes Bagel, Defrost, and Cancel options to meet diverse toasting requirements.
- **Extra-Wide Slots:** 1.5-inch wide slots accommodate thick bagels, Texas toast, and various bread types.
- **6 Browning Levels:** Adjustable browning control from light to dark to suit individual preferences.
- **User-Friendly Design:** Features a flat lever button for easy operation, a removable crumb tray for simple cleaning, and cord storage for a tidy countertop.
- **Durable and Safe Construction:** Made with high-quality 18/8 stainless steel, ensuring durability, non-toxicity, and BPA-free use. The metal housing is designed for rapid cool-off.

2. SETUP

1. **Unpack the Toaster:** Carefully remove the toaster and all packaging materials from the box. Retain packaging for future storage or transport if needed.
2. **Remove Protective Film:** Peel off any protective films or stickers from the toaster's exterior and interior.
3. **Position the Toaster:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable

materials and curtains. Ensure adequate ventilation around the appliance.

4. **Connect to Power:** Plug the power cord into a standard 120V AC, 60Hz electrical outlet. Ensure the cord is not dangling where it can be tripped over.
5. **First Use (Conditioning):** Before toasting food, operate the toaster empty on the highest browning setting (Level 6) for a few minutes. This helps to burn off any manufacturing residues and odors. A slight smoke or odor may be present during this initial use; this is normal. Allow the toaster to cool completely before its first actual use with food.

3. OPERATING INSTRUCTIONS

Basic Toasting:

1. **Insert Bread:** Place slices of bread or other items into the toaster slots. The 1.5-inch wide slots can accommodate various thicknesses.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 6 (darkest).
3. **Start Toasting:** Press the lift lever down until it locks into place. The toaster will begin the toasting cycle.
4. **Retrieve Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Carefully remove the hot toast.



Image: Visual guide demonstrating the four simple steps to operate the toaster: inserting bread, selecting the browning level, pushing the lever, and enjoying the finished toast.

Special Functions:

- **Cancel Function:** To stop the toasting cycle at any time, press the 'CANCEL' button. The toast will immediately pop up.
- **Defrost Function:** For frozen bread, insert the bread and then press the 'DEFROST' button after pushing down the lift lever. This function thaws and then toasts the bread.
- **Bagel Function:** For bagels, insert the bagel halves into the slots and press the 'BAGEL' button after pushing down the lift lever. This function toasts only the cut side of the bagel.

Multiple Toasting Functions



Image: Close-up of the toaster's control panel, illustrating the 'CANCEL', 'DEFROST', and 'BAGEL' function buttons.

Browning Levels Guide:

The toaster offers 6 browning levels to achieve your preferred toast shade. Experiment with different settings to find your ideal crispness.

Delicious Toast to Everyone's Liking

6 Browning Settings for Delicious Bread

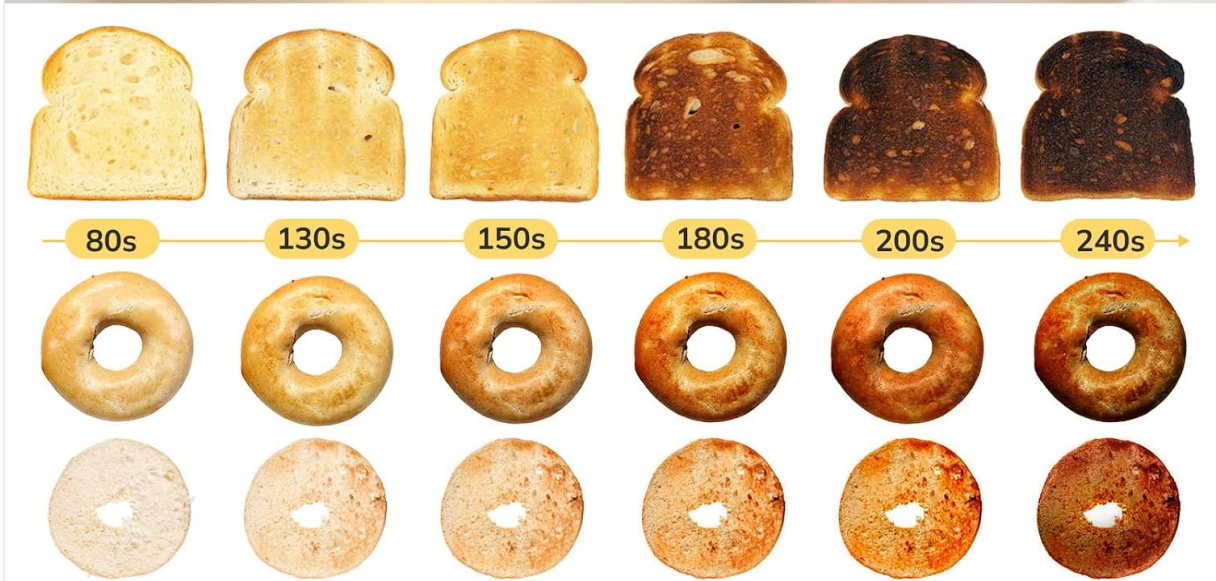


Image: A visual chart displaying the different browning results from Level 1 (lightest) to Level 6 (darkest) for both regular toast and bagels.

Product in Use Video:

Your browser does not support the video tag.

Video: A demonstration of the Keenstone 2-Slice Toaster in white, showing its features and operation in a kitchen setting.

4. MAINTENANCE

Cleaning the Crumb Tray:

1. **Unplug the Toaster:** Always ensure the toaster is unplugged from the power outlet and completely cooled before cleaning.
2. **Remove Crumb Tray:** Locate the removable crumb tray at the bottom rear of the toaster. Pull it out to remove.
3. **Discard Crumbs:** Empty the crumbs into a waste bin.
4. **Clean the Tray:** Wipe the crumb tray with a damp cloth or wash it with warm, soapy water. Rinse thoroughly and dry completely before reinserting.
5. **Reinsert Tray:** Slide the clean, dry crumb tray back into its position until it locks securely.

Simple Designs Bring Convenient Life



Flat Lever Button



Removable Crumb Tray

Image: The toaster highlighting the flat lever button and the easily removable crumb tray for convenient cleaning.

General Cleaning and Care:

- **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
- **Interior:** Never insert utensils or fingers into the toaster slots. Do not attempt to clean the interior heating elements.
- **Storage:** When not in use, ensure the toaster is unplugged and cooled. The power cord can be wrapped around the cord storage area at the bottom of the toaster for neat storage.

5. TROUBLESHOOTING

- **Toaster Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the circuit breaker has tripped.
- **Toast Not Browning Evenly:** Ensure bread slices are centered in the slots. Different types of bread may require adjusting the browning level.
- **Toast Stuck in Slots:** Unplug the toaster immediately. Allow it to cool, then carefully remove the stuck item using non-metallic tongs. Never use metal objects.
- **Smoke or Burning Smell:** This may occur during initial use due to manufacturing residues. If it persists,

unplug the toaster, allow it to cool, and clean the crumb tray. Ensure no food particles are lodged inside the slots.

- **Lever Not Staying Down:** Ensure the toaster is plugged in. The lever will not lock down if the toaster is not receiving power.

6. SPECIFICATIONS

Attribute	Detail
Brand	Keenstone
Model Number	WT-330
Color	White
Material	Stainless Steel
Product Dimensions	7.1"D x 11.6"W x 7.5"H
Item Weight	3.08 Pounds
Wattage	825 watts
Voltage	120 Volts
Slot Count	2
Number of Browning Settings	6
Special Features	Anti-Slip Base, Removable Crumb Tray, Cord Storage

7. WARRANTY AND SUPPORT

Warranty Information:

Keenstone products typically come with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or technical assistance regarding your Keenstone toaster, please contact Keenstone customer support. Contact information can usually be found on the product packaging, the official Keenstone website, or within the warranty documentation.