

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Costzon](#) /

> [Costzon Wooden Grocery Store Playset Instruction Manual \(Model: 24.5" x 35.5" x 44"\)](#)

## Costzon 24.5" x 35.5" x 44"

# Costzon Wooden Grocery Store Playset Instruction Manual

Model: 24.5" x 35.5" x 44"

## 1. SAFETY INFORMATION


Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Recommended Age:** This playset is suitable for children aged 3 to 8 years.
- **Adult Supervision:** Adult supervision is recommended during play to ensure safe use and prevent accidents.
- **Assembly:** Assembly must be performed by an adult. Ensure all parts are securely fastened before allowing children to play.
- **Choking Hazard:** The playset includes small accessories. Keep small parts away from children under 3 years of age to avoid choking hazards.
- **Stability:** Ensure the playset is placed on a flat, stable surface to prevent tipping.
- **Material Safety:** This product is made of high-quality materials and is certified with CPSIA and ASTM standards for safety.
- **Maintenance:** Regularly check for loose parts, sharp edges, or damaged components. Discontinue use if any damage is found and repair or replace as necessary.

## 2. WHAT'S IN THE BOX

Please verify that all components are present before beginning assembly.

- 1 x Kids Grocery Store Playset (main structure)
- 1 x Shopping Cart
- 13 x Accessories (including cash register, POS machine, scanner, money detector, coins, credit card)
- 1 x Instruction Manual

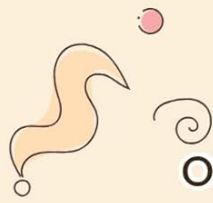

# Sweet Accessories

Offer kids real selling and buying experience



1 x Cash Register



1 x POS Machine



1 x Money Detector



6 x Coins



1 x Credit Card



Figure 2.1: Included Accessories

## 3. SETUP & ASSEMBLY

Assembly of the Costzon Wooden Grocery Store Playset requires adult attention and can take approximately 2-3 hours. Follow the detailed steps provided in the included instruction manual.

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify against the "What's in the Box" list.
- 2. Identify Hardware:** Separate and identify all screws, dowels, and other hardware components.
- 3. Assemble Main Structure:** Begin by assembling the main grocery store counter and shelving units. Pay close attention to the orientation of each wooden panel.
- 4. Attach Features:** Secure the chalkboard, cash register area, and any other integrated features according to the manual's diagrams.
- 5. Assemble Shopping Cart:** Construct the shopping cart separately, ensuring the wheels are securely attached and roll smoothly.
- 6. Final Check:** Once assembled, ensure all screws are tightened, and the structure is stable.



Figure 3.1: Assembled Playset Overview



# Dimensions

Suitable Age: 3+ Years Old

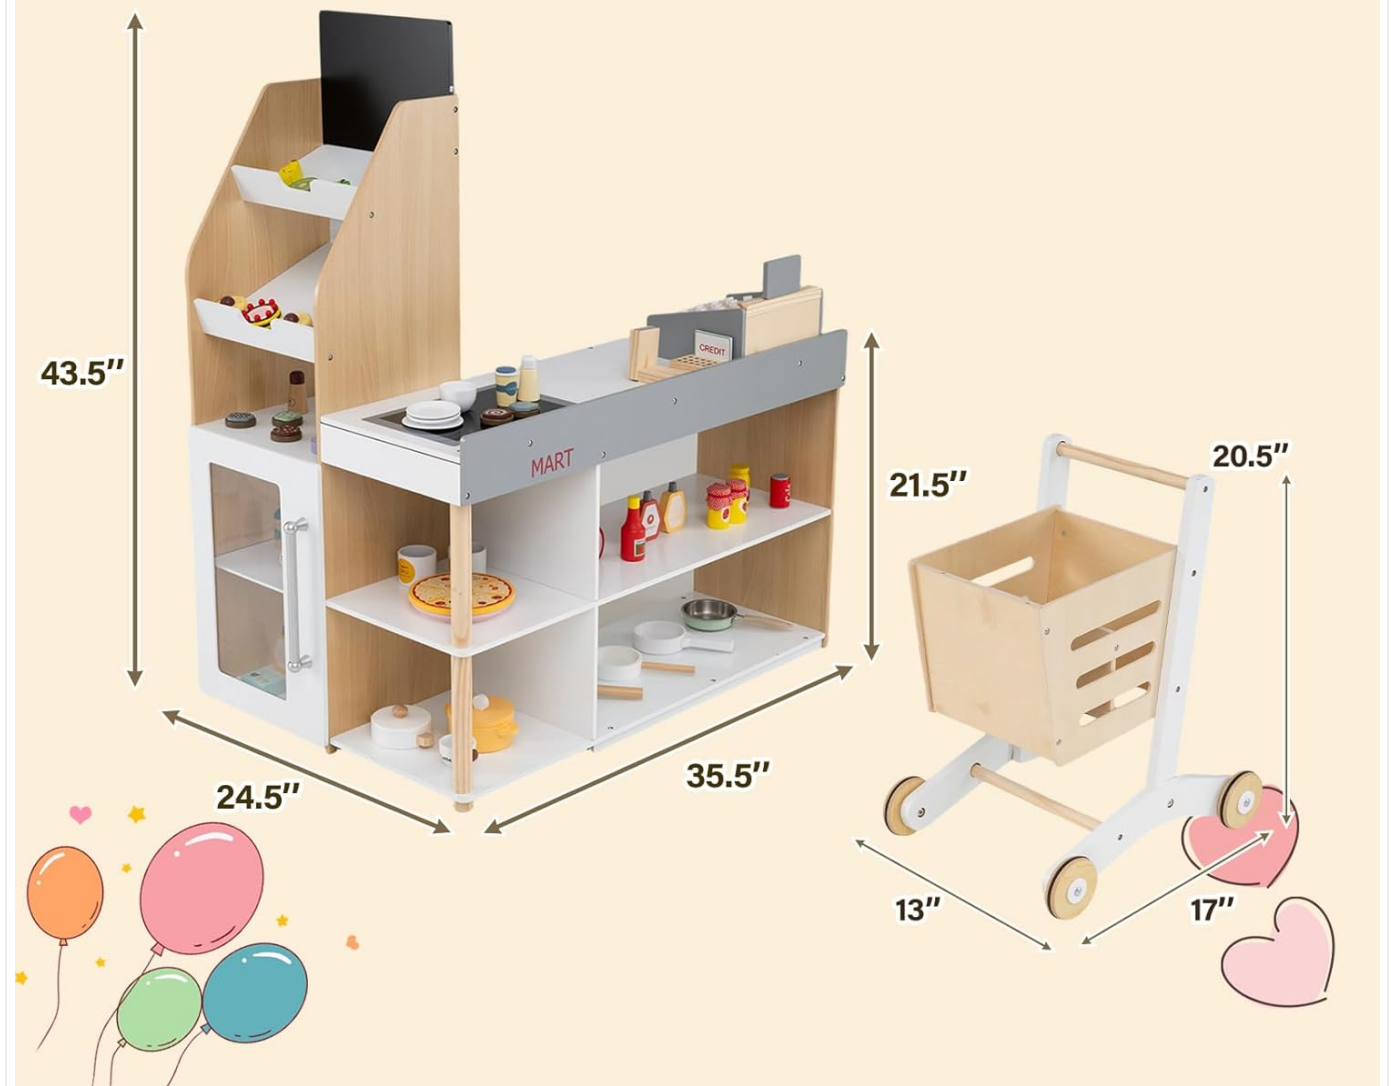


Figure 3.2: Playset Dimensions

## 4. OPERATING INSTRUCTIONS

The Costzon Wooden Grocery Store Playset offers various interactive elements for imaginative play.

### 4.1 Checkout Counter

The checkout counter features a cash register, POS machine, and scanner for realistic role-play.

- **Cash Register:** Press the colorful buttons on the cash register to simulate transactions. The drawer can be manually opened to store play money.
- **POS Machine:** Use the included credit card with the POS machine to simulate card payments.
- **Scanner:** The wooden scanner can be used to "scan" items as they are purchased.
- **Conveyor Belt:** The counter includes a designated area to simulate a conveyor belt for items.

# Checkout Counter Stand



Conveyor Belt



Scanner



Cash Register



POS Machine



Money Box



Figure 4.1: Checkout Counter Details

## 4.2 Display Shelves and Storage

The playset features multiple shelves and storage options for organizing play food and accessories.

- **Front Display Racks:** Use the open shelves at the front to display various play items.
- **Top Shelves:** Additional shelves are available for smaller items or special displays.
- **Storage Cabinet:** A cabinet with a magnetic catch door provides enclosed storage space.
- **Storage Baskets:** Two integrated storage baskets are available for holding items.

# Ample Storage Space



Front Display Racks



Top Shelves



Storage Cabinet



2 Storage Baskets

Figure 4.2: Ample Storage Space

## 4.3 Chalkboard

A functional chalkboard is integrated into the playset for writing specials or drawing.

- Use standard chalk (not included) to write or draw on the chalkboard.
- Wipe clean with a damp cloth.



# Practical Blackboard

Allow children to practice writing, drawing, and enhance imaginative play

Figure 4.3: Practical Chalkboard

## 4.4 Shopping Cart

The included shopping cart allows children to simulate shopping around the store.

- The cart features smooth rolling wheels and an easy-to-grip handle for comfortable use.
- It has a large inner space to hold various play items.

# 2-in-1 Play Options



Figure 4.4: 2-in-1 Play Options (Sales and Shopping Mode)

## 5. MAINTENANCE

Proper care will extend the life of your Costzon Wooden Grocery Store Playset.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary.
- **Storage:** Store the playset in a dry environment away from direct sunlight or extreme temperatures to prevent warping or damage to the wood.
- **Damage:** If any part becomes damaged, discontinue use immediately and contact customer support for replacement parts or repair advice.



Figure 5.1: Well-made Details for Durability

## 6. TROUBLESHOOTING

This section addresses common questions and minor issues you might encounter.

Problem	Solution
<b>Cash Register Drawer Does Not Open Automatically</b>	The cash register drawer is designed for manual operation. It does not feature an automatic spring-loaded mechanism. Gently pull the drawer open to access the coin compartments.
<b>Vending Machine / Coffee Maker Not Functional</b>	The vending machine and coffee maker components are designed for imaginative play and do not have electronic or mechanical dispensing functions. They are intended to simulate real-world items through pretend play.
<b>Playset Feels Unstable After Assembly</b>	Ensure all screws and fasteners are securely tightened. Verify that the playset is placed on a level surface. If instability persists, re-check the assembly steps in the instruction manual.

Problem	Solution
<b>Missing Parts or Damaged Components</b>	If you find any missing parts or damaged components upon unboxing or during assembly, please contact Costzon customer support immediately for assistance. Refer to the contact information in the Warranty & Support section.

## 7. SPECIFICATIONS

Feature	Detail
<b>Brand</b>	Costzon
<b>Model</b>	Wooden Grocery Store Playset (Natural)
<b>Product Dimensions</b>	24.5 x 35.5 x 44 inches (L x W x H)
<b>Item Weight</b>	50 pounds
<b>Recommended Age</b>	3 - 8 years
<b>Material</b>	High-quality wood (MDF + Pine Wood)
<b>Certifications</b>	CPSIA, ASTM

## 8. WARRANTY & SUPPORT

Costzon products are designed for quality and durability. For specific warranty details, please refer to the documentation included with your purchase or visit the official Costzon website.

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact Costzon customer support:

- **Online Support:** Visit the Costzon official website for FAQs and contact forms.
- **Email:** Refer to your purchase receipt or product packaging for customer service email address.
- **Phone:** Refer to your purchase receipt or product packaging for customer service phone number.

Please have your product model number (24.5" x 35.5" x 44") and purchase date ready when contacting support.

