

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION MD 19279 5L Digital Hot Air Fryer Instruction Manual

MEDION MD19279

MEDION MD 19279 5L Digital Hot Air Fryer Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your MEDION MD 19279 5L Digital Hot Air Fryer. Please read these instructions carefully before first use and keep them for future reference.

The MEDION MD 19279 is a 2000W hot air fryer designed for cooking with little to no oil, featuring a 5-liter capacity, digital control panel, and 8 automatic programs.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the plug, main cord, or the appliance itself is damaged.
- Place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow sufficient air circulation.
- Do not block the air inlet and outlet openings.
- The appliance features an automatic shut-off function for safety.
- The cool-touch housing ensures safe handling during and after operation.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your hot air fryer.



Figure 1: Front view of the MEDION MD 19279 Digital Hot Air Fryer.



Figure 2: Dimensions of the MEDION MD 19279 Hot Air Fryer. The appliance measures approximately 34 cm (depth) x 38 cm (width) x 31 cm (height).

Key Features:

- **Digital Control Panel:** For easy selection of programs, temperature, and time.
- **5-Liter Capacity:** Large cooking basket suitable for family meals.
- **2000W Power:** Ensures fast and efficient cooking.
- **Non-stick Coating:** For easy food release and cleaning.
- **Cool-Touch Housing:** For safe handling.
- **Automatic Shut-off:** Enhances safety during operation.

4. SETUP AND FIRST USE

-
1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport.
 2. **Cleaning:** Before first use, clean the frying basket and pan with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
 3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation.
 4. **Pre-heating (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. Ensure the area is well-ventilated during this process.

5. OPERATING INSTRUCTIONS

General Operation:

1. **Prepare Food:** Place your ingredients into the frying basket. For best results, do not overfill the basket.
2. **Insert Basket:** Slide the frying basket securely into the main unit.
3. **Power On:** Plug the appliance into a grounded electrical outlet. The digital display will illuminate.
4. **Select Program or Manual Settings:**
 - **Automatic Programs:** The air fryer features 8 pre-set programs for various food types. Use the program selection button on the digital control panel to cycle through the options. Each program has optimized time and temperature settings.
 - **Manual Settings:** Alternatively, you can manually set the desired temperature and cooking time using the dedicated control buttons on the digital display.
5. **Start Cooking:** Press the start button to begin the cooking process. The appliance will heat up and circulate hot air (360° Heat Circulation).
6. **Shaking (Optional):** For even cooking, especially with items like fries, pull out the basket halfway through the cooking time and shake its contents. Then, reinsert the basket to resume cooking.
7. **Completion:** The air fryer will beep when the cooking time is complete and automatically shut off.
8. **Remove Food:** Carefully pull out the basket using the cool-touch handle. Use tongs to remove cooked food.

Wenig bis gar kein Öl notwendig

Endlich gesund genießen



Figure 3: The digital control panel showing the 8 automatic programs for various dishes.

Herausnehmbarer Frittierkorb

Für kinderleichte Nutzung und Reinigung



Figure 4: Illustration of the 360° heat circulation technology, ensuring crispy results.

8 Automatikprogramme

Für jede Speise das richtige Programm



Figure 5: The air fryer in use, demonstrating the minimal oil required for cooking, with the basket containing fries partially removed.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Basket and Pan:** The frying basket and pan are removable for easy cleaning. Wash them with warm water, a mild detergent, and a non-abrasive sponge. The non-stick coating facilitates cleaning.
3. **Clean Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
4. **Interior Cleaning:** For the interior, gently wipe with a damp cloth. Ensure no water enters the heating element area.
5. **Drying:** Ensure all parts are thoroughly dry before reassembling and storing the appliance.

5 L XXL-Fassungsvermögen



Figure 6: The removable frying basket, designed for easy usage and cleaning.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance fault.	Ensure the plug is securely inserted. Check the power outlet with another appliance. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken.	Do not overload the basket. Shake the basket contents halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly after each use. If cooking fatty foods, this is normal.
Food is not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before cooking.

8. SPECIFICATIONS

- **Brand:** MEDION
- **Model Number:** MD19279
- **Type:** Hot Air Fryer
- **Capacity:** 5 Liters
- **Power:** 2000 Watts
- **Voltage:** 220 Volts
- **Material:** Plastic
- **Color:** White
- **Dimensions (L x W x H):** Approximately 34 cm x 38 cm x 31 cm
- **Weight:** 6.3 Kilograms
- **Special Features:** Automatic shut-off, Hot air circulation, Cool-touch housing, Digital display, Timer.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official MEDION website. Keep your proof of purchase for warranty claims.

Manufacturer: MEDION

Availability of spare parts: Information unavailable.

