

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Uniflasy](#) /

> [Uniflasy 69866 Grill Warming Rack Instruction Manual for Weber Spirit 200 Series](#)

## Uniflasy 69866

# Uniflasy 69866 Grill Warming Rack Instruction Manual

Model: 69866 | Brand: Uniflasy

## INTRODUCTION

---

This instruction manual provides essential information for the proper installation, use, and maintenance of your Uniflasy 69866 Grill Warming Rack. Designed for specific Weber Spirit grill models, this accessory enhances your grilling experience by providing additional space for warming food.

## PRODUCT OVERVIEW

---

The Uniflasy 69866 Grill Warming Rack is constructed from high-quality stainless steel, ensuring durability and resistance to corrosion. It is designed to fit seamlessly into compatible grill models, expanding your cooking area without interfering with the main grilling surface.

### Key Features:

- **Durable Construction:** Made from high-quality stainless steel for long-lasting performance and corrosion resistance.
- **Expanded Grilling Space:** Provides an elevated surface to keep food warm or toast items without overcooking.
- **Easy Installation:** Designed for quick and straightforward placement within compatible grills.
- **Simple Maintenance:** Smooth surfaces allow for easy cleaning with warm soapy water.



## Heavy Duty Stainless Steel

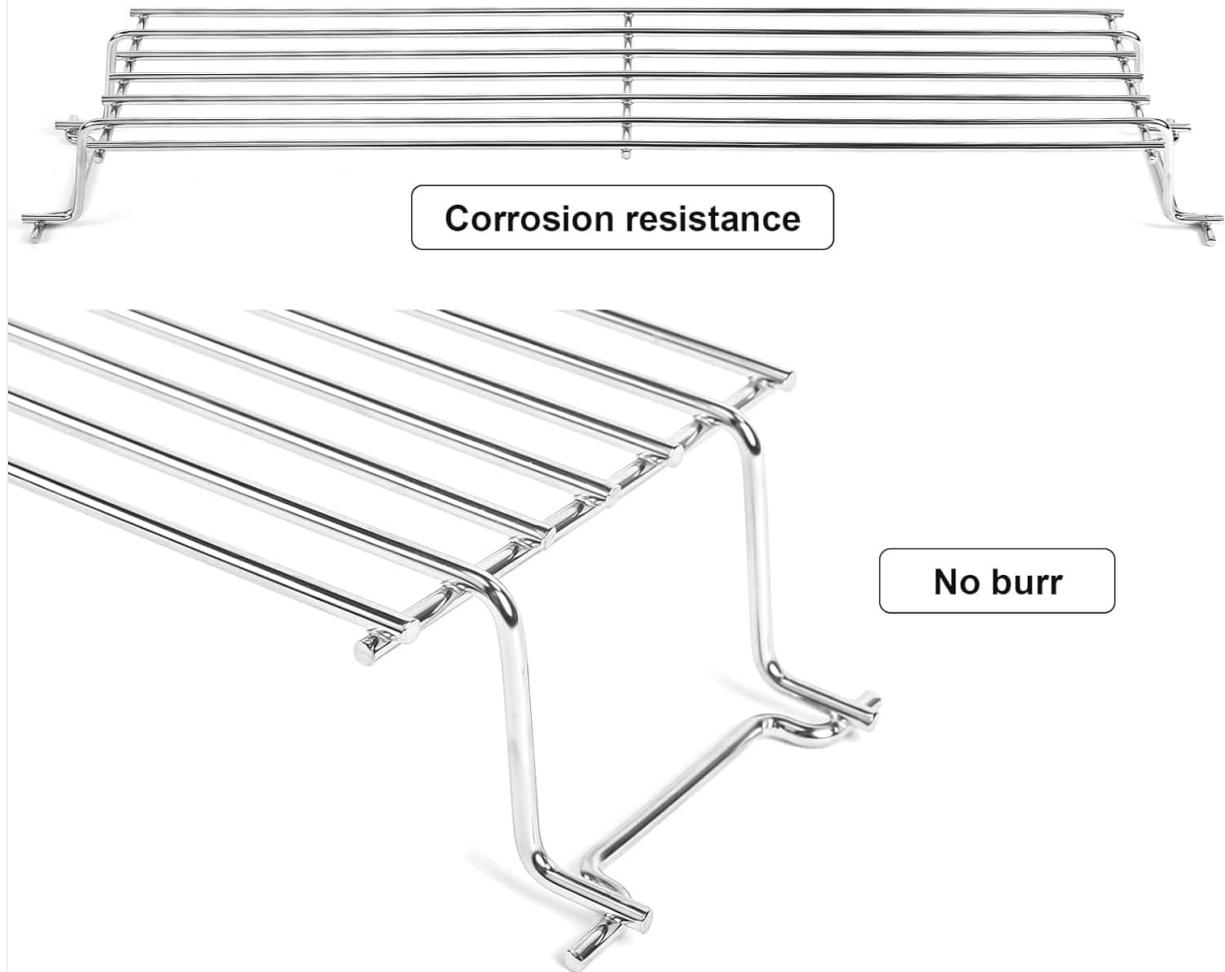


Image: Close-up view of the warming rack, highlighting its heavy-duty stainless steel construction and smooth, burr-free finish, indicating corrosion resistance.

### COMPATIBILITY

---

This warming rack is specifically designed to fit the following grill models:

- **Weber Spirit 200 Series (2-burner gas grills with up-front control panels):** Spirit E-210, S-210, E-220, S-220 (model years 2013 and newer).
- **Weber Spirit II 200 Series:** Spirit II E-210, E-220, Spirit II S-210, S-220.

It replaces original part numbers 69866, 7640, and 67026.



## Perfect fits Weber Spirit I & II 200 Series with Up Front Control



Spirit II 200 Series

Spirit I 200 Series

Image: Two Weber Spirit grills, a Spirit II 200 Series and a Spirit I 200 Series, demonstrating the types of grills this warming rack is compatible with.

## INSTALLATION

Installing the Uniflasy 69866 Warming Rack is a simple process that requires no special tools.

1. Ensure your grill is cool and turned off before beginning installation.
2. Open the grill lid to access the cooking area.
3. Locate the designated slots or brackets on the inside of your grill lid or firebox, typically above the main cooking grates.
4. Carefully align the legs of the warming rack with these slots or brackets.
5. Gently lower the warming rack into place, ensuring it sits securely and is stable.

The warming rack should rest firmly without wobbling. If it does not fit correctly, double-check your grill model against the compatibility list.

Your browser does not support the video tag.

Video: This video demonstrates the installation process of the 69866 warming rack into a compatible Weber Spirit grill, showing how to correctly position and secure the rack.

## OPERATING INSTRUCTIONS

---

The warming rack is designed to utilize the indirect heat from your grill to keep food warm or to gently cook items that require lower temperatures.

- **Warming Food:** Place cooked items such as burgers, hot dogs, or vegetables on the warming rack to keep them hot while the main course finishes grilling.
- **Toasting:** Use the rack to toast buns or bread slices, preventing them from burning on the direct heat of the main grates.
- **Gentle Cooking:** Ideal for slow-cooking delicate items like fish or vegetables that might overcook quickly on direct heat.

Always monitor food on the warming rack to prevent overcooking or drying out. The rack expands your grill's versatility for various cooking needs.



Image: Various food items, including small pizzas and grilled vegetables, placed on the warming rack to illustrate its function in keeping food warm and expanding grill space.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your warming rack and ensure optimal

performance.

1. Allow the warming rack to cool completely before cleaning.
2. Remove the rack from the grill.
3. Wash the rack with warm, soapy water using a soft cloth or sponge. For stubborn residue, a non-abrasive grill brush can be used.
4. Rinse thoroughly with clean water.
5. Dry the rack completely before storing or reinstalling to prevent water spots or potential corrosion.

Avoid using harsh chemicals or abrasive cleaning pads, as these can damage the stainless steel finish.

## TROUBLESHOOTING

---

Most issues with the warming rack are related to fit or cleaning.

- **Rack does not fit:** Verify your grill model against the compatibility list in this manual. Ensure the rack is oriented correctly.
- **Food not warming effectively:** Ensure the grill lid is closed to trap heat. Adjust the main burner settings to achieve the desired warming temperature.
- **Rust spots appear:** While made of stainless steel, prolonged exposure to moisture or harsh chemicals can cause surface discoloration. Clean thoroughly and ensure the rack is dry when stored.

For further assistance, please contact Uniflasy customer support.

## SPECIFICATIONS

---

Attribute	Detail
Model Number	69866
Material	Stainless Steel
Warming Surface Dimensions	18" (L) x 4-3/4" (W)
Overall Dimensions (with leg supports)	21-1/2" (L) x 3-7/8" (W)
Item Weight	1.45 pounds
Replaces Part Numbers	69866, 7640, 67026

## WARRANTY AND SUPPORT

---

For information regarding product warranty, returns, or technical support, please refer to the manufacturer's official website or contact Uniflasy customer service directly. Keep your purchase receipt for any warranty claims.

**Contact Information:** Please visit the [Uniflasy Store on Amazon](#) for more details or to find contact information.

