

BLACK+DECKER FSM1620

BLACK+DECKER FSM1620 1600-Watt Steam Mop User Manual

1. INTRODUCTION

Welcome to the BLACK+DECKER FSM1620 1600-Watt Steam Mop user manual. This document provides essential information for the safe and effective operation, maintenance, and troubleshooting of your steam mop. Please read this manual thoroughly before first use and retain it for future reference.

The BLACK+DECKER FSM1620 Steam Mop is designed to clean and sanitize sealed hard floor surfaces using steam, eliminating up to 99.9% of germs and bacteria without the need for harsh chemicals. Its AutoSelect Technology allows for optimal steam output based on your floor type.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Read all instructions carefully before operating the appliance.
- Do not immerse the appliance in water or other liquids.
- Do not leave the appliance unattended while plugged in or operating.
- Keep the appliance out of reach of children and pets.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup and extend the life of the appliance.
- Do not use the appliance on unsealed wooden floors, as steam may cause damage.
- Always unplug the appliance before cleaning or performing maintenance.
- The steam produced is very hot. Avoid direct contact with skin.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your BLACK+DECKER FSM1620 Steam Mop.



Figure 3.1: Main components of the FSM1620 Steam Mop.

This image displays the BLACK+DECKER FSM1620 Steam Mop with various parts labeled for identification.

Key components include the handle, top cable tidy hook, cable management clip, ON/OFF switch, removable water tank, AutoSelect dial, bottom cable tidy hook, and steam head.

Included Components:

- 1 x FSM1620 Steam Mop Unit
- 2 x Microfiber Floor Pads
- 1 x Microfiber Delta Floor Pad
- 1 x Carpet Glider



Figure 3.2: Removable Water Tank.

This image shows a close-up of the transparent, removable water tank on the steam mop, designed for easy refilling.



Figure 3.3: AutoSelect Dial.

This image provides a detailed view of the AutoSelect dial, which allows users to select different steam settings for various floor types such as Tiles, Vinyl, Stone, Marble, Wood, and Laminate.

4. SETUP

4.1 Assembly

1. Insert the handle into the main body of the steam mop until it clicks securely into place.
2. Ensure all connections are firm before proceeding.

4.2 Filling the Water Tank

1. Remove the water tank from the main unit.
2. Open the tank cap and fill with distilled or demineralized water. Do not overfill. The tank capacity is 460 ml.
3. Close the tank cap securely and reinsert the water tank into the steam mop until it locks.

4.3 Attaching the Microfiber Pad

1. Place the microfiber cleaning pad on the floor with the white side facing up.

2. Align the steam head over the pad and press down firmly to attach it using the hook and loop fasteners.

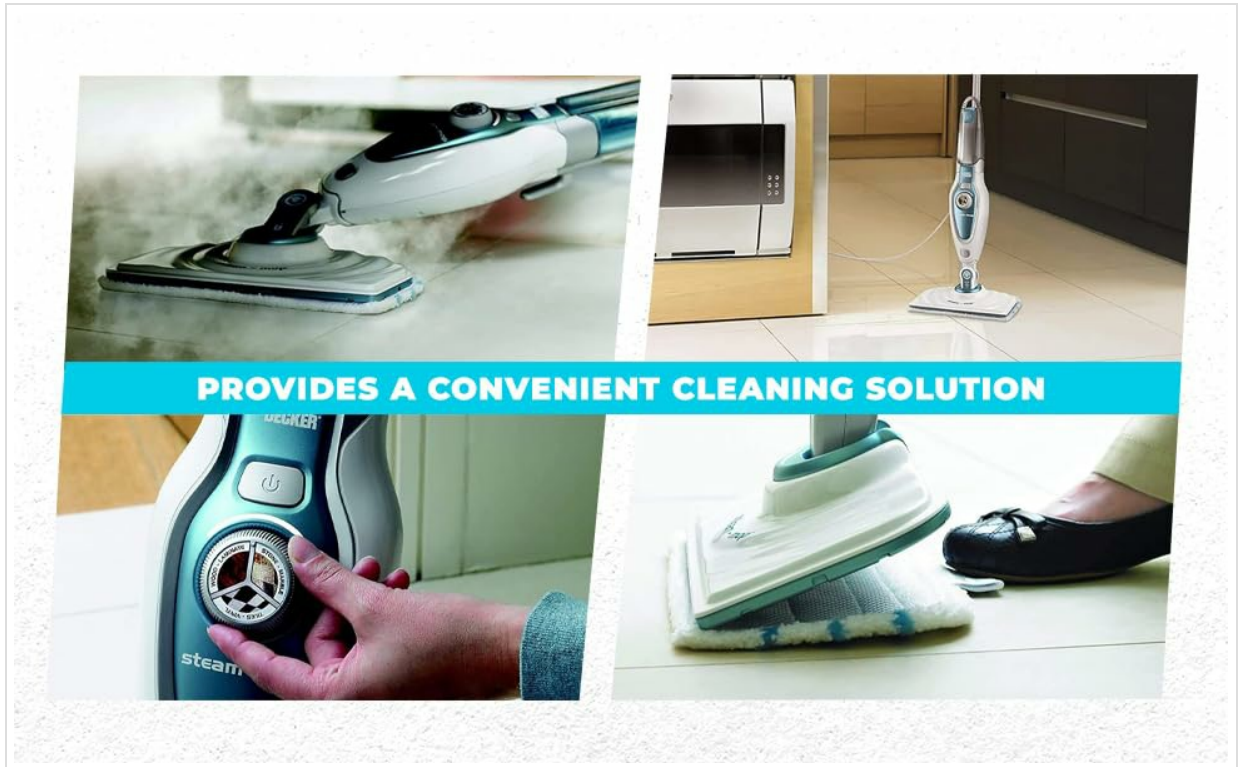


Figure 4.1: Steam Head with Cleaning Pad.

This image shows the steam head of the mop with a microfiber cleaning pad securely attached, ready for use.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Selecting Steam Level

1. Plug the power cord into a suitable electrical outlet.
2. Press the ON/OFF switch to power on the appliance.
3. Rotate the AutoSelect dial to the desired floor type (e.g., Tiles, Wood, Stone). The mop will automatically adjust the steam output for optimal cleaning.
4. Wait approximately 15-30 seconds for the steam mop to heat up and produce steam.



SALES AND AFTER
SALES SUPPORT



GREAT SERVICE
NETWORK



WARRANTY



ORIGINAL PARTS



INFORMATION



OMNICHANNEL
SUPPORT

DOORSTEP SERVICE

PHONE:

1800-203-0644

MON-SAT

09:00 AM - 06:00 PM IST
EXCEPT GOVERNMENT HOLIDAYS

EMAIL:

SBD-CUSTOMER
COMMUNICATIONS
@SBDINC.COM

NUMBER OF AUTHORIZED
SERVICE CENTER : 500+

WHATSAPP:



+91 96060 55835
SCAN THE CODE TO CONTACT US

Figure 5.1: Operating the Steam Mop.

This image illustrates a user operating the BLACK+DECKER FSM1620 Steam Mop on a hard floor surface, demonstrating its ease of use and swivel steering capability.

5.2 Cleaning Surfaces

- Move the steam mop slowly and steadily across the floor surface. The swivel steering allows for easy maneuverability around furniture and in tight spaces.
- For heavily soiled areas, hold the steam mop over the spot for a few seconds to allow the steam to penetrate and loosen dirt.
- Ensure the floor is dry before walking on it.

5.3 Using the Carpet Glider

- Attach the carpet glider over the microfiber pad and steam head.
- Use the steam mop with the carpet glider to refresh carpets and rugs. This is not intended for deep cleaning carpets, but for sanitizing and deodorizing.

6. MAINTENANCE

6.1 Cleaning Microfiber Pads

- After each use, remove the microfiber cleaning pad from the steam head.
- The pads are machine washable. Wash them with similar colors at a low temperature. Do not use bleach or fabric softener.
- Allow pads to air dry completely before reattaching or storing.

6.2 Emptying and Cleaning the Water Tank

- Always empty any remaining water from the tank after each use.
- Rinse the tank with clean water periodically to prevent residue buildup.

6.3 Descaling

To maintain optimal performance and prevent mineral buildup, especially if using tap water (though distilled water is recommended), descale the appliance every 3-6 months. Consult the manufacturer's website or customer support for specific descaling instructions.

6.4 Storage

- Ensure the appliance is unplugged, cooled down, and the water tank is empty before storage.
- Wrap the power cord around the cable tidy hooks for neat storage.
- Store the steam mop in a dry, safe place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam produced	Water tank empty Appliance not plugged in Not heated up sufficiently	Refill water tank Ensure power cord is securely plugged in Wait 15-30 seconds after turning on
Streaks on floor	Microfiber pad dirty Too much steam for surface Floor not pre-cleaned	Replace or wash microfiber pad Adjust AutoSelect dial to a lower steam setting Vacuum or sweep floor before steam cleaning
Appliance not turning on	No power supply ON/OFF switch not pressed	Check power outlet and cord Press the ON/OFF switch firmly

If you encounter issues not listed here, or if the problem persists, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	BLACK+DECKER
Model Name	FSM1620
Wattage	1600 Watts
Item Weight	3.06 kg

Feature	Specification
Tank Volume / Capacity	460 Milliliters
Voltage	230 Volts (AC)
Special Feature	Filtering
Surface Recommendation	Floor
Form Factor	Upright



Figure 8.1: Key Product Specifications.

This infographic visually summarizes the key specifications of the steam mop, including Voltage (230V), Power (1600W), Weight (3.06 KG), and Tank Capacity (460 ML).

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your BLACK+DECKER FSM1620 Steam Mop comes with a **1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use.

9.2 Customer Support

For any warranty-related issues, product feedback, or technical assistance, please contact BLACK+DECKER customer care:

- **Phone:** 1860-425-1111 (Monday to Friday, 10 AM to 5 PM, except government holidays)
- **Email:** SBD-CUSTOMERCOMMUNICATIONS@SBDINC.COM
- **WhatsApp:** +91 96060 55835



Figure 9.1: Total Care Contact Information.

This image provides comprehensive contact details for BLACK+DECKER Total Care, including phone numbers, email address, and a WhatsApp contact option with a QR code.