

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER WDBD10 Wet and Dry Vacuum Cleaner User Manual

BLACK+DECKER WDBD10-IN

BLACK+DECKER WDBD10 Wet and Dry Vacuum Cleaner User Manual

Model: WDBD10-IN

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, assembly, maintenance, and troubleshooting of your BLACK+DECKER WDBD10 10-Litre Wet and Dry Vacuum Cleaner. Designed for versatile cleaning, this appliance handles dust, water, and debris, and also features a powerful blower function. Please read this manual thoroughly before first use and retain it for future reference.



Image: The BLACK+DECKER WDBD10 Wet and Dry Vacuum Cleaner, showcasing its main unit and various accessories.

SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.

PRODUCT OVERVIEW

Key Components



Image: A visual guide to the components included with your vacuum cleaner.

Your BLACK+DECKER WDBD10 vacuum cleaner comes with the following components:

1. Vacuum Cleaner Unit
2. Carpet and Upholstery Brush
3. Wet and Dry Floor Brush
4. Sponge Filter (for wet use)
5. HEPA Filter (for dry use)
6. Washable Bag (for dry use)
7. Flexible Hose (2m)
8. Crevice Nozzle
9. Plastic Suction Tubes (2 x 47 cm)

Main Unit Features



Image: Top view of the vacuum cleaner highlighting the handle, dust LED, and on/off button.

- **Handle:** For easy carrying and transport of the unit.
- **Dust LED Indicator:** Provides information about the dust level, indicating when the dustbag may need emptying.
- **On/Off Button:** To start and stop the vacuum cleaner.



Image: Rear and side view of the vacuum cleaner showing the exhaust, snap-locks, inlet, and wheels.

- **Exhaust Base:** Connection point for the hose when using the blower function.
- **Snap-Lock:** Securely fixes the motor head to the dust tank.
- **Inlet Base:** Main connection point for the flexible hose for vacuuming.
- **Wheels:** Four wheels allow for easy movement in any direction.

SETUP

Assembly

1. Unpack all components and ensure all parts listed in the 'Key Components' section are present.
2. Attach the four wheels to the base of the vacuum cleaner unit by pushing them firmly into their designated slots until they click into place.
3. Open the snap-locks on the sides of the unit and lift off the motor head.

Filter Installation (Dry Vacuuming)

1. For dry vacuuming, ensure the HEPA filter is securely placed over the motor housing inside the tank.
2. Insert the washable dust bag into the tank, ensuring its opening aligns with the inlet port.
3. Close the motor head, aligning it correctly and securing it with the snap-locks.

Filter Installation (Wet Vacuuming)

1. For wet vacuuming, remove the washable dust bag and the HEPA filter.
2. Place the sponge filter over the motor housing inside the tank. This filter protects the motor from liquids.
3. Close the motor head, aligning it correctly and securing it with the snap-locks.

Hose and Accessory Attachment

1. Connect the flexible hose to the inlet base on the front of the vacuum cleaner unit for vacuuming. Push firmly until it is secure.
2. Attach the plastic suction tubes to the end of the flexible hose. You can use one or both tubes depending on the required reach.
3. Select the appropriate cleaning accessory (Wet and Dry Floor Brush, Carpet and Upholstery Brush, or Crevice Nozzle) and attach it to the end of the suction tubes.

OPERATING INSTRUCTIONS

Dry Vacuuming

1. Ensure the HEPA filter and washable dust bag are correctly installed.
2. Plug the power cord into a suitable electrical outlet. The 5-meter cord provides ample reach.
3. Press the On/Off button to start the vacuum cleaner.
4. Guide the chosen accessory over the surface to be cleaned. The powerful 1200W motor delivers 16KPA strong suction.
5. After use, press the On/Off button to turn off the appliance and unplug it from the outlet.

Wet Vacuuming

1. Ensure the washable dust bag and HEPA filter are removed, and the sponge filter is correctly installed.

2. Plug the power cord into a suitable electrical outlet.
3. Press the On/Off button to start the vacuum cleaner.
4. Use the Wet and Dry Floor Brush to pick up liquid spills. Do not overfill the tank; the vacuum cleaner has a 10-litre capacity.
5. After use, press the On/Off button to turn off the appliance and unplug it from the outlet. Empty and clean the tank immediately after wet use.

Blower Function

1. To use the blower function, detach the flexible hose from the inlet base.
2. Connect the flexible hose to the exhaust base located on the rear of the motor head.
3. Plug the power cord into a suitable electrical outlet.
4. Press the On/Off button to activate the blower. This function is useful for blowing away dust, leaves, or drying surfaces.
5. After use, press the On/Off button to turn off the appliance and unplug it from the outlet.



Image: Demonstrating the vacuum cleaner in action on a carpet.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Cleaning the Dustbag (Dry Use)

- When the dust LED indicator signals or suction power decreases, it's time to empty the dustbag.
- Unplug the vacuum cleaner. Open the snap-locks and remove the motor head.
- Carefully remove the washable dust bag from the tank.
- Empty the contents into a waste bin. The bag can be washed with mild soap and water, then air-dried completely before re-installation.

Cleaning the HEPA Filter (Dry Use)

- The HEPA filter captures the smallest allergen-causing particles. It should be cleaned regularly, especially after heavy use.
- Remove the HEPA filter from the motor housing.
- Tap the filter gently to dislodge dust. For a more thorough clean, rinse it under running water.
- Allow the HEPA filter to air-dry completely for at least 24 hours before re-installing. Do not use the vacuum cleaner with a wet HEPA filter.

Cleaning the Sponge Filter (Wet Use)

- After wet vacuuming, remove the sponge filter.
- Rinse the sponge filter thoroughly under running water to remove any debris or liquid residue.
- Squeeze out excess water and allow it to air-dry completely before storing or re-using.

General Care

- Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use harsh cleaners or solvents.
- Check the hose and accessories for blockages regularly. Clear any obstructions to maintain optimal suction.
- Store the vacuum cleaner in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Low suction power.	Dust bag full or filter clogged.	Empty the dust bag and clean/replace the HEPA filter or sponge filter.
Low suction power.	Hose or accessory blocked.	Check the hose, tubes, and accessories for any obstructions and clear them.
Water leaking during wet vacuuming.	Tank is full.	Empty the tank. The vacuum cleaner has a float valve that stops suction when full.
Water leaking during wet vacuuming.	Sponge filter not installed or damaged.	Ensure the sponge filter is correctly installed and not damaged. Replace if necessary.
Unusual noise during operation.	Foreign object in fan or motor.	Immediately turn off and unplug the unit. Inspect for foreign objects. If noise persists, contact customer support.

TECHNICAL SPECIFICATIONS



Image: Overview of the vacuum cleaner's main technical specifications.

Specification	Value
Brand	BLACK+DECKER
Model Name	WDBD10-IN
Special Feature	Wet/Dry, Bag, HEPA
Filter Type	HEPA Filter
Capacity	10 litres
Hose Length	2 Metres
Form Factor	Cannister
Colour	Red
Product Dimensions	11.4L x 15.2W x 11.8H Centimeters
Noise Level	80 dB
Motor Horsepower	1200 Watts
Item Weight	3 kg 100 g
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information

Your BLACK+DECKER WDBD10 Wet and Dry Vacuum Cleaner comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects and ensures reliable operation under normal use. Please retain your purchase receipt as proof of purchase for any warranty claims.

Customer Support

For any product feedback, warranty-related issues, or technical assistance, please contact BLACK+DECKER customer support:

Phone: 1860-425-1111 (Available Monday to Friday, 10 AM to 5 PM, except government holidays)

Email: SBD-CUSTOMERCOMMUNICATIONS@SBDINC.COM

WhatsApp: +91 96060 55835



SALES AND AFTER
SALES SUPPORT



GREAT SERVICE
NETWORK



WARRANTY



ORIGINAL PARTS



INFORMATION



OMNICHANNEL
SUPPORT

DOORSTEP SERVICE

PHONE:

1800-203-0644

EMAIL:

SBD-CUSTOMER
COMMUNICATIONS
@SBDINC.COM

WHATSAPP:



+91 96060 55835

SCAN THE CODE TO CONTACT US

MON-SAT
09:00 AM - 06:00 PM IST
EXCEPT GOVERNMENT HOLIDAYS

NUMBER OF AUTHORIZED
SERVICE CENTER : 500+

Image: BLACK+DECKER Total Care details for sales, after-sales support, warranty, and service network.

