

## Swan STRP1060WHTNEU

# Swan Nordic Breakfast Set Instruction Manual

Models: Kettle, 2-Slice Toaster, 20L Microwave (Set Model: STRP1060WHTNEU)

## INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Swan Nordic Breakfast Set, which includes a 1.7L Kettle, a 2-Slice Toaster, and a 20L Digital Microwave. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The complete Swan Nordic Breakfast Set, featuring a kettle, a 2-slice toaster, and a digital microwave, all in a white finish with wood-effect accents.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This includes, but is not limited to:

- Read all instructions before use.
- Do not immerse cords, plugs, or appliances in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended by the manufacturer.
- Do not use outdoors.

## SETUP AND FIRST USE

### Kettle

1. Unpack the kettle and its base. Place the base on a flat, stable surface.
2. Before first use, fill the kettle with clean water to the maximum level. Boil the water and then discard it. Repeat this process two to three times to remove any manufacturing residues.
3. Ensure the lid is securely closed before boiling.



Image: The Swan Nordic Kettle, white with a wood-effect handle, positioned on a light wooden kitchen counter.

## Toaster

1. Remove all packaging materials and labels from the toaster.
2. Ensure the crumb tray is correctly inserted at the bottom of the toaster.
3. For the first use, operate the toaster without bread on the highest setting to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.



Image: The Swan Nordic 2-slice toaster, white and stainless steel with wood-effect accents, sitting on a kitchen counter.

## Microwave

1. Remove all packing materials from inside and outside the microwave oven.
2. Install the turntable ring and glass tray inside the microwave cavity. Ensure they are properly seated.
3. Place the microwave on a flat, stable surface with adequate ventilation space around it.
4. Plug the microwave into a grounded electrical outlet.



Image: The Swan Nordic Digital Microwave, white with a wood-effect handle and control knob, placed on a kitchen counter.

## OPERATING INSTRUCTIONS

### Kettle Operation

- **Filling:** Open the lid and fill the kettle with the desired amount of water. Do not fill below the minimum mark or above the maximum mark.
- **Boiling:** Place the kettle on its power base. Press the power switch down. The indicator light will illuminate, and the kettle will begin to heat.
- **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled. The indicator light will extinguish.
- **Pouring:** Carefully lift the kettle from its base and pour the hot water.



Image: A close-up view of the Swan Nordic Kettle's base, showing the illuminated blue power indicator light, indicating the kettle is in operation.

## Toaster Operation

- **Placing Bread:** Insert up to two slices of bread into the toasting slots.

- **Browning Control:** Select your desired browning level using the browning control dial (1 for light, 6 for dark).
- **Start Toasting:** Press the carriage lever down until it latches. The toaster will begin toasting, and the indicator light will illuminate.
- **Functions:**
  - **Reheat:** Press the "Reheat" button to warm previously toasted bread without further browning.
  - **Defrost:** Press the "Defrost" button to toast frozen bread. This function automatically adjusts toasting time.
  - **Cancel:** Press the "Cancel" button at any time to stop the toasting cycle.
- **Ejection:** Once toasting is complete, the bread will automatically pop up.



Image: A close-up of the Swan Nordic Toaster's control panel, showing the browning level slider and illuminated Reheat, Defrost, and Cancel buttons.

## Microwave Operation

- **Setting the Clock:** When first plugged in, the display will show "0:00". Press "Defrost/Clock" once, then turn the "Time/Weight" knob to set the hour. Press "Defrost/Clock" again, then turn the knob to set the minutes. Press "Defrost/Clock" to confirm.

- **Microwave Cooking:**

- Place food in a microwave-safe container on the glass turntable.
- Close the microwave door securely.
- Press "Micro Power" repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80% power).
- Turn the "Time/Weight" knob to set the cooking time.
- Press "Instant/Start" to begin cooking.

- **Defrost by Weight:**

- Place frozen food on the turntable.
- Press "Defrost/Clock" twice. The display will show "dEF1".
- Turn the "Time/Weight" knob to select the food weight (e.g., 200g to 2000g).
- Press "Instant/Start" to begin defrosting.

- **Express Cooking:** Press "Express" repeatedly to select quick cooking times (e.g., 30 seconds, 1 minute, 1 minute 30 seconds). Press "Instant/Start" to begin.

- **Pause/Cancel:** Press "Pause/Cancel" once to pause cooking, or twice to cancel the program.



Image: A detailed view of the Swan Nordic Microwave's digital control panel, featuring buttons for power, express cooking,

defrost/clock, auto cooking, and a central time/weight knob.

## MAINTENANCE AND CLEANING

### General Cleaning Tips

- Always unplug the appliance from the power outlet before cleaning.
- Do not use abrasive cleaners or harsh chemicals.
- Wipe exterior surfaces with a damp cloth and mild detergent, then dry thoroughly.

### Kettle Cleaning

- **Exterior:** Wipe with a damp cloth.
- **Interior/Descaling:** Over time, mineral deposits (limescale) may build up. To descale, fill the kettle with a mixture of equal parts water and white vinegar, or use a commercial descaling solution. Bring to a boil and let it stand for an hour (or as per descaler instructions). Empty and rinse thoroughly several times with fresh water.
- **Filter:** The removable anti-limescale filter can be rinsed under running water.



Image: A hand demonstrating the removal of the anti-limescale filter from the spout of the Swan Nordic Kettle for cleaning.

### Toaster Cleaning

- **Crumb Tray:** Regularly slide out the crumb tray from the bottom of the toaster and empty crumbs. Wipe the tray with a damp cloth and dry before reinserting.
- **Exterior:** Wipe with a damp cloth. Do not use metal scouring pads.



Image: The Swan Nordic Toaster with its removable crumb tray partially pulled out, showing accumulated bread crumbs, indicating ease of cleaning.

## Microwave Cleaning

- **Interior:** Wipe the inside of the oven with a damp cloth after each use. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen food particles.
- **Turtable:** The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher.
- **Door Seals:** Clean the door seals and adjacent parts carefully with a damp cloth to ensure proper sealing.



Image: A white bowl containing soup placed on the glass turntable inside the Swan Nordic Microwave, demonstrating the interior space.

## TROUBLESHOOTING

### Kettle

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch not pressed; dry boil protection activated.	Ensure kettle is plugged in and switch is on. If dry boil protection activated, allow to cool before refilling.
Water tastes metallic.	New appliance residue.	Perform initial cleaning steps (boil and discard water several times).

### Toaster

Problem	Possible Cause	Solution
Bread does not toast.	Not plugged in; carriage lever not fully depressed.	Ensure toaster is plugged in. Push carriage lever down until it latches.
Uneven toasting.	Crumb buildup; inconsistent bread thickness.	Empty crumb tray. Ensure bread slices are of uniform thickness.

### Microwave

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; not plugged in; incorrect settings.	Ensure door is firmly closed. Check power connection. Verify cooking settings.
Food not heating evenly.	Food not stirred/rotated; turntable not rotating.	Stir or rearrange food during cooking. Check if turntable and ring are correctly placed and clean.

## SPECIFICATIONS

Feature	Value
Brand	Swan
Model Number (Set)	STRP1060WHTNEU
Color	White, Cotton
Material	Stainless Steel
Kettle Capacity	1.7 Litres
Kettle Power	2200 W
Toaster Slots	2 (wide slots)
Toaster Power	900 W
Microwave Capacity	20 Litres
Microwave Power	800 W
Voltage	220 Volts
Special Features	Automatic shut-off, Rotative base (kettle), Removable filter (kettle), Anti-limescale filter (kettle), Overheat protection (kettle), Dry-boil protection (kettle), Cordless (kettle)
Dimensions (Package)	55.5 x 55 x 39 cm
Item Weight (Total)	16.4 Kilograms

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Swan website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Swan customer service through their official channels. Information regarding spare parts availability is not provided in this manual.

[Visit the Swan Store on Amazon](#)

© 2023 Swan. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

## Related Documents - STRP1060WHTNEU

<p>User Manual of Product 1: Swan 20L Nordic Digital LED Microwave, 8 Power Levels, Black Effect Handle, Soft Touch Housing and Metal Finish, 800W, Green, SM22036LGREN</p> <p>User Manual of Product 2: Swan Nordic 2 Slice Toaster, Green, 800W, Soft Touch and Metal Frame, 8 (Browns) Levels, ST14610GREN</p>	<h2><a href="#">Swan Nordic Microwave and Toaster User Manuals</a></h2> <p>User manuals for the Swan 20L Nordic Digital LED Microwave (SM22036LGREN) and the Swan Nordic 2 Slice Toaster (ST14610GREN), detailing features, operation, safety precautions, and maintenance.</p>
<p><b>FAQ and Troubleshooting Guide</b></p> <p>The Swan Nordic Jug Kettle (ST14610GREN) is a high-quality kettle designed to meet the needs of modern kitchens. This guide provides answers to frequently asked questions and troubleshooting tips for common issues.</p> <p><b>FAQ</b></p> <ul style="list-style-type: none"> <li>How do I clean my Jug Kettle?</li> <li>What is the power rating of the Jug Kettle?</li> <li>How long does it take to boil water?</li> <li>Can I use the Jug Kettle on a campsite?</li> <li>What is the capacity of the Jug Kettle?</li> <li>How do I replace the filter?</li> <li>What is the warranty period for the Jug Kettle?</li> <li>How do I troubleshoot common issues?</li> </ul>	<h2><a href="#">Swan Nordic Jug Kettle FAQ and Troubleshooting Guide</a></h2> <p>A comprehensive FAQ and troubleshooting guide for the Swan Nordic Jug Kettle, covering common issues like warranty, manual replacement, BPA content, weight, filter availability, product range, unpleasant taste, leaking, tripping electrics, auto shut-off problems, and outer body peeling.</p>
<p><b>FAQ and Troubleshooting Guide for B09Q95SLXK</b></p> <p>The Swan 20L Nordic Digital LED Microwave (B09Q95SLXK) is a high-end microwave oven designed for modern kitchens. This guide provides answers to frequently asked questions and troubleshooting tips for common issues.</p> <p><b>FAQ</b></p> <ul style="list-style-type: none"> <li>How do I clean the microwave?</li> <li>What is the power rating of the microwave?</li> <li>How long does it take to heat up?</li> <li>Can I use the microwave on a campsite?</li> <li>What is the capacity of the microwave?</li> <li>How do I replace the filter?</li> <li>What is the warranty period for the microwave?</li> <li>How do I troubleshoot common issues?</li> </ul>	<h2><a href="#">Swan 20L Nordic Digital LED Microwave: FAQ &amp; Troubleshooting Guide (B09Q95SLXK)</a></h2> <p>Comprehensive FAQ and troubleshooting guide for the Swan 20L Nordic Digital LED Microwave (Model B09Q95SLXK, SKU SM22036LGRYN). Find solutions for common issues, warranty information, product specifications, and more.</p>
<p><b>Troubleshooting guide</b></p> <p><b>Crumb jamming</b></p> <p>Crumb jamming is a common issue that can occur when the toaster is not properly cleaned. To prevent this, it is recommended to clean the toaster after each use. If the crumb tray is not being cleaned regularly, it can become clogged with debris, causing crumb jamming. To clean the crumb tray, remove it from the toaster and wash it with warm, soapy water. Make sure to dry it completely before reinserting it into the toaster.</p> <p><b>Overheating</b></p> <p>Overheating is a common issue that can occur if the toaster is not properly cleaned or if the heating element is damaged. To prevent overheating, it is recommended to clean the toaster after each use. If the heating element is damaged, it will need to be replaced by a professional technician.</p> <p><b>Levers not working</b></p> <p>Levers not working is a common issue that can occur if the lever assembly is damaged or if the lever is not properly aligned. To prevent this, it is recommended to clean the lever assembly after each use. If the lever is damaged, it will need to be replaced by a professional technician.</p> <p><b>Electrical tripping</b></p> <p>Electrical tripping is a common issue that can occur if the toaster is not properly cleaned or if the electrical cord is damaged. To prevent this, it is recommended to clean the toaster after each use. If the electrical cord is damaged, it will need to be replaced by a professional technician.</p> <p><b>Toasting inconsistencies</b></p> <p>Toasting inconsistencies is a common issue that can occur if the toaster is not properly cleaned or if the heating element is damaged. To prevent this, it is recommended to clean the toaster after each use. If the heating element is damaged, it will need to be replaced by a professional technician.</p> <p><b>Dents</b></p> <p>Dents are a common issue that can occur if the toaster is not properly cleaned or if the toaster is not properly stored. To prevent this, it is recommended to clean the toaster after each use. If the toaster is stored in a place where it is exposed to extreme temperatures, it may develop dents. To prevent this, it is recommended to store the toaster in a cool, dry place.</p> <p><b>Heating element performance</b></p> <p>Heating element performance is a common issue that can occur if the toaster is not properly cleaned or if the heating element is damaged. To prevent this, it is recommended to clean the toaster after each use. If the heating element is damaged, it will need to be replaced by a professional technician.</p> <p><b>Heating element replacement</b></p> <p>Heating element replacement is a common issue that can occur if the heating element is damaged. To replace the heating element, it is recommended to contact a professional technician.</p>	<h2><a href="#">Troubleshooting Guide for Swan Nordic 4-Slice Toaster (ST14620WHTN)</a></h2> <p>Comprehensive troubleshooting guide for the Swan Nordic 4-Slice Toaster (ST14620WHTN), addressing common issues like crumb jamming, lever problems, electrical tripping, toasting inconsistencies, and dents. Includes maintenance tips and information on heating element performance.</p>

