

BANDAI 82844

BANDAI Pomsies Lulu Interactive Puppy Instruction Manual

Model: 82844

1. INTRODUCTION

The BANDAI Pomsies Lulu Interactive Puppy is a soft, plush interactive toy designed to react to touch and sound. Lulu features light-up eyes that change color to express its mood, purrs, and makes over 50 different sounds. Its flexible tail allows it to be attached to various items, making it a portable companion. This manual provides essential information for setting up, operating, and maintaining your Pomsies Lulu.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 36 months (3 years). Contains small elements that may be swallowed. Adult supervision is recommended.

- Keep away from open flames or direct heat sources.
- Do not immerse in water.
- Ensure battery compartment is securely closed to prevent ingestion of batteries.

3. PRODUCT OVERVIEW

Pomsies Lulu is an interactive plush puppy with a soft, blue and white fur body, pink glitter ears, and large, expressive eyes. Its long, flexible tail allows it to wrap around wrists, backpacks, or other objects.



Image 1: Front view of the BANDAI Pomsies Lulu Interactive Puppy.

Key Features:

- **Interactive Touch:** Responds to petting and interaction.
- **Expressive Eyes:** LED eyes change color to indicate mood (e.g., happy, hungry, sleepy).
- **Over 50 Sounds:** Purrs, sings, and makes various other sounds.
- **Two Play Modes:** Companion Mode and Dance Mode.
- **Wearable Design:** Flexible tail allows attachment to clothing, bags, or wrists.



Image 2: Pomsies Lulu in its retail packaging.

4. SETUP

Battery Installation:

Your Pomsies Lulu requires 1 AAA battery (included). Follow these steps to install or replace batteries:

1. Locate the battery compartment on the back or underside of your Pomsies Lulu.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 1 new AAA battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and tighten the screw to secure it.

Note: Always use fresh batteries and dispose of old batteries responsibly. Do not mix old and new batteries or different types of batteries.

5. OPERATING INSTRUCTIONS

Turning On/Off:

- To turn on, press the small button located on Lulu's nose.
- To turn off, press and hold the nose button for a few seconds until Lulu powers down. Lulu will also enter sleep mode after a period of inactivity.

Interaction and Moods:

Pomsies Lulu reacts to petting and touch. Its eyes will light up and change color to communicate its mood and needs:

- **Green Eyes:** Lulu is hungry. Pet its mouth to feed it.
- **Blue Eyes:** Lulu is cold. Pet its back to warm it up.
- **Pink Eyes:** Lulu is happy and wants to play.
- **Yellow Eyes:** Lulu is sleepy. Pet it gently to help it rest.
- **Rainbow Eyes:** Lulu is super happy!



Image 3: Pomsies Lulu being held, demonstrating interaction.

Play Modes:

Pomsies Lulu features two distinct play modes:

- **Companion Mode:** In this mode, Lulu will react to your touch, purr, and express its moods through its eyes and sounds. Continue to pet and interact with it to keep it happy.
- **Dance Mode:** To activate Dance Mode, press and hold Lulu's nose until you hear a specific sound or music starts. In this mode, Lulu will play music and encourage you to dance along. Its eyes will flash to the beat.

Attaching Lulu:

Lulu's flexible tail can be wrapped around various objects. Gently bend the tail to secure it around your wrist, backpack strap, or other suitable items. Ensure it is securely fastened to prevent it from falling.

6. MAINTENANCE

Cleaning:

- To clean your Pomsies Lulu, gently wipe the surface with a damp cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Do not submerge Lulu in water, as this can damage the electronic components.
- Allow to air dry completely before further use.

Storage:

When not in use, store Pomsies Lulu in a clean, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the battery to prevent leakage.

7. TROUBLESHOOTING

- **Lulu is not responding:** Check if the battery is correctly installed and has sufficient charge. Replace the battery if necessary. Ensure Lulu is turned on by pressing its nose.
- **Sounds are distorted or too low:** Replace the battery. If the issue persists, contact customer support.
- **Eyes are not lighting up:** Check the battery. If the battery is new and correctly installed, and the toy is on, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	BANDAI
Model Number	82844
Product Type Name	Pomsies - Lulu - White and Blue Puppy - Interactive Plush that attaches everywhere
Animal Theme	Dog
Color	Blue
Batteries Required	Yes
Number of Batteries	1 AAA (included)
Minimum Recommended Age	36 Months (3 years)
Item Dimensions	15.4 x 8 x 22 centimeters

9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty of 1 year from the invoice date. For warranty claims, technical support, or any questions regarding your Pomsies Lulu, please contact BANDAI customer service through their official website or the retailer where the product was purchased.