

Panda PAN356HB

Panda PAN356HB 1.34 Cu.Ft. Portable Washing Machine User Manual

Model: PAN356HB

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Panda PAN356HB 1.34 Cu.Ft. Portable Washing Machine. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: Panda PAN356HB Portable Washing Machine. This image displays the washing machine from an angled front view, highlighting its compact design and blue transparent lid.

2. SAFETY INFORMATION

Observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Ensure the washing machine is connected to a grounded 110-volt power outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Keep the area around the washing machine clear of flammable materials.
- Do not allow children to play on or in the appliance.
- Always unplug the machine before cleaning or performing maintenance.
- Do not wash items that are soiled with cooking oils, gasoline, or other flammable substances.
- Ensure the water inlet and drain hoses are securely connected to prevent leaks.

3. PRODUCT FEATURES

The Panda PAN356HB portable washing machine offers several features for efficient laundry care:

- **Multifunctional Operation:** Includes Soak, Wash, Rinse, and Spin functions.
- **Capacity:** 1.34 Cu.Ft. capacity, accommodating up to 10 lbs. of laundry.
- **Durable Construction:** Features a stainless steel tub.
- **Program Options:** 10 wash programs and 5 adjustable water levels.
- **User-Friendly Controls:** Easy-to-operate control panel with LED display.
- **Safety Features:** Child lock protection and auto unbalance detection.
- **Portability:** Equipped with two wheels at the back bottom for easier movement.

Control Panel

EASY-OPERATED CONTROL PANEL

10 Programs, 5 Water Levels



Image 3.1: Close-up of the Panda PAN356HB control panel. This image shows the buttons for Water Level, Function, Program, Delay, Start/Pause, and Power, along with the LED display and indicators for 10 wash programs and 5 water levels.

Transparent Lid

TRANSPARENT & FOLDABLE LID

Can see the clothes inside when the machine is running.



Image 3.2: View of the Panda PAN356HB's transparent lid. The lid is shown open, allowing visibility into the washing machine's tub.

Stainless Steel Tub

STAINLESS STEEL TUB



Image 3.3: Interior view of the Panda PAN356HB's stainless steel tub. The image highlights the textured surface of the tub and the central pulsator.

4. SETUP GUIDE

Follow these steps to set up your portable washing machine:

4.1 Water Connection

1. Locate the inlet hose and quick adapter.

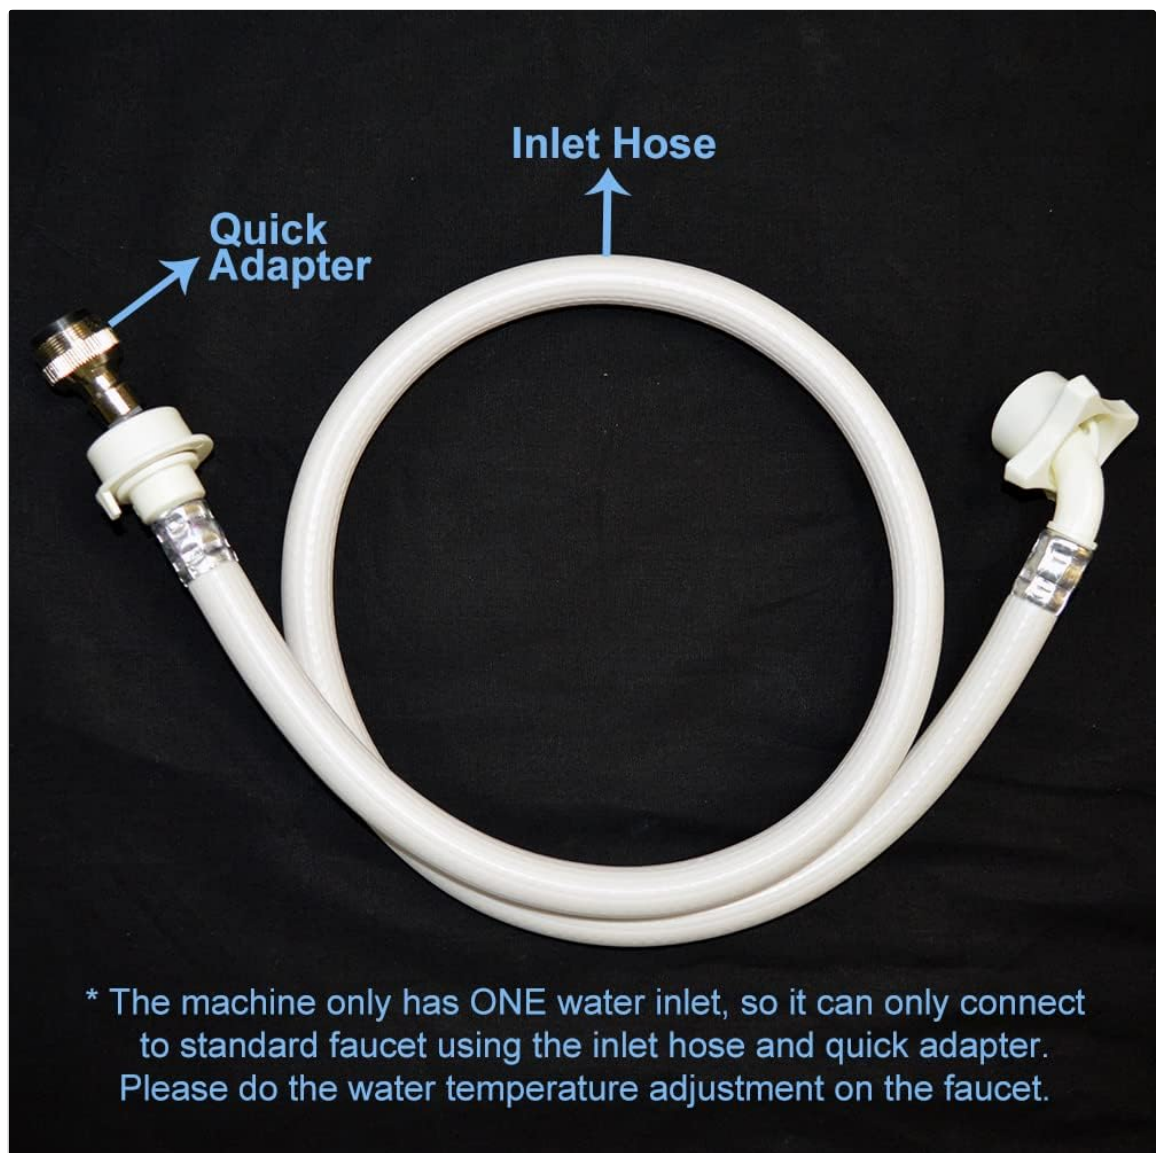 


Image 4.1: Inlet hose with quick adapter. This image shows the white inlet hose with a metal quick adapter on one end and a plastic connector on the other.

2. Connect the plastic end of the inlet hose to the water inlet on the back of the washing machine.



Image 4.2: Close-up of the inlet hose connected to the washing machine's water inlet.

3. Attach the quick adapter to a standard faucet. Ensure a tight connection to prevent leaks.



Image 4.3: Close-up of the quick adapter connected to a standard kitchen faucet.

4. Adjust water temperature at the faucet as the machine has only one water inlet.

4.2 Drain Hose Setup

1. Position the drain hose to hang into a sink or wash basin.

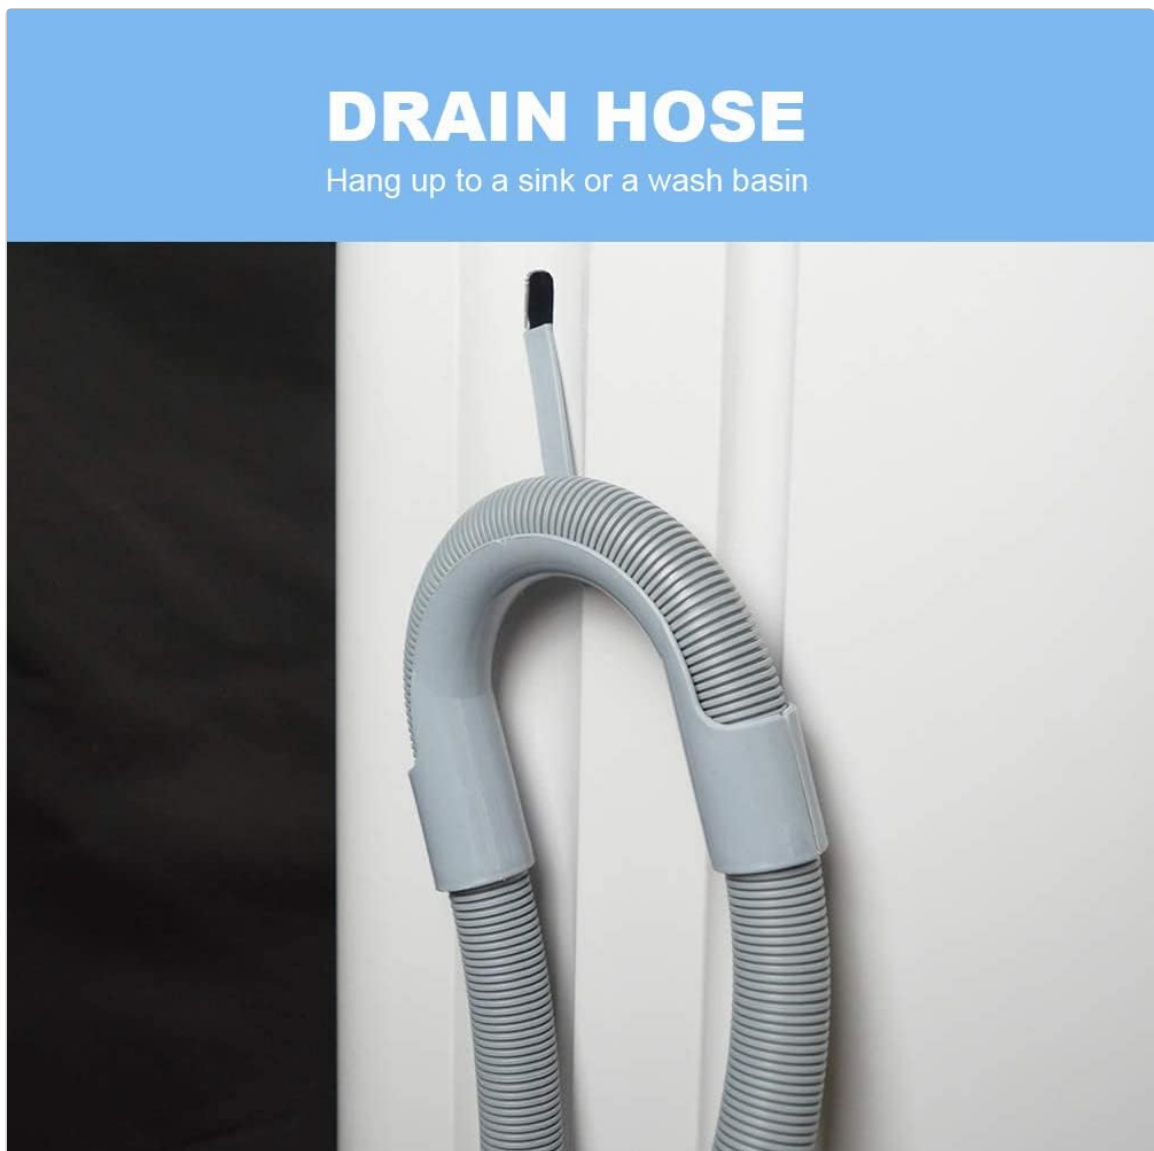 


Image 4.4: Drain hose positioned to hang into a sink. The corrugated grey drain hose is shown with its curved end hooked over the edge of a basin.

4.3 Power Connection

1. Plug the regular 3-prong power cord into a grounded 110V electrical outlet.

4.4 Moving the Machine

The machine is equipped with two wheels at the back bottom for easier movement.



Image 4.5: Close-up of the two wheels located at the back bottom of the washing machine. These wheels facilitate tilting and moving the unit.

To move, tilt the machine back at a 45-degree angle and roll it to the desired location.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and follow these steps for operation:

5.1 Loading Laundry

- Open the transparent lid.
- Load clothes into the stainless steel tub, ensuring not to exceed the 10 lbs. capacity.
- Add appropriate detergent.
- Close the lid securely.

5.2 Selecting a Wash Program

The machine offers 10 wash programs:

1. Press the 'Power' button to turn on the machine.
2. Press the 'Program' button repeatedly to cycle through the available programs (Normal, Quick Wash, Heavy Duty, Soak & Wash, Wash, Wash & Rinse, Rinse & Spin, Spin, Air Dry). The selected program

will be indicated on the LED display.

- Adjust the water level by pressing the 'Water Level/Spin' button. There are 5 water levels (1/22L to 5/33L).
- Press 'Start/Pause' to begin the wash cycle.

5.3 Delay Start Function

To use the delay start function:

- Select your desired wash program and water level.
- Press the 'Delay' button to set the delay time in hours.
- Press 'Start/Pause'. The machine will start the cycle after the set delay time.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your washing machine.

6.1 Cleaning the Tub

- Periodically run a 'Tub Clean' cycle (if available) or a 'Normal' cycle with hot water and a washing machine cleaner.
- Wipe down the interior of the tub with a damp cloth after each use to prevent residue buildup.

6.2 Cleaning the Filter

- Locate the lint filter, typically inside the tub or near the top rim.
- Remove and clean the filter regularly to ensure efficient lint removal. Rinse under running water and reinsert.

6.3 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; No water supply.	Check power connection; Ensure lid is fully closed; Check water inlet hose and faucet.
Water leakage	Loose hose connections; Damaged hose.	Tighten all hose connections; Inspect hoses for damage and replace if necessary.
Excessive vibration/noise	Uneven load; Machine not level.	Redistribute laundry evenly; Adjust leveling feet to ensure stability.
Clothes not spinning dry	Overloaded; Drain hose blocked.	Reduce load size; Check drain hose for kinks or blockages.

8. SPECIFICATIONS

Key technical specifications for the Panda PAN356HB Portable Washing Machine:

Feature	Detail
Model Number	PAN356HB
Capacity	1.34 Cubic Feet (approx. 10 lbs)
Product Dimensions (D x W x H)	19 x 20 x 34 inches
Item Weight	50 pounds
Voltage	110 Volts
Sound Level	74 dB
Finish Type	Stainless Steel
Access Location	Top Load
Included Components	Inlet hose with standard size faucet adaptor, Regular 3 prongs Power Cord



Image 8.1: Diagram showing the dimensions of the Panda PAN356HB washing machine: 19 inches deep, 20 inches wide, and 34 inches high.

9. WARRANTY AND SUPPORT



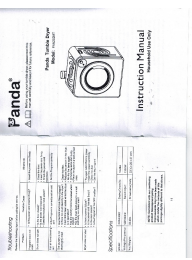
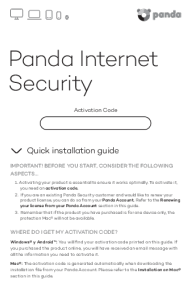
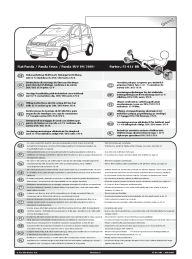
9.1 Warranty Information

This product comes with a 1-Year Manufacturer Warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Panda customer support. Refer to your product packaging or the manufacturer's website for current contact information.

Related Documents - PAN356HB

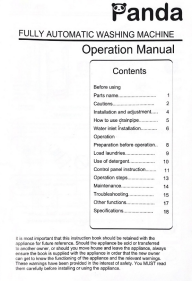	<p>Panda PAN356HB Fully Automatic Washing Machine Operation Manual</p> <p>This operation manual provides comprehensive instructions for the Panda PAN356HB Fully Automatic Washing Machine, covering installation, operation, maintenance, troubleshooting, and specifications. Learn how to safely and effectively use your Panda washing machine.</p>
	<p>Panda 1.6 cu. ft. Portable Washing Machine User Manual</p> <p>This user manual provides essential information for the Panda 1.6 cu. ft. portable washing machine, Model PAN50SWF2. It guides users through safe installation, efficient operation, routine maintenance, and troubleshooting steps to ensure optimal performance and longevity of the appliance. Discover how to get the most out of your compact washing machine with clear instructions and helpful tips.</p>
	<p>Panda PAN202MT Tumble Dryer: User Manual and Safety Guide</p> <p>Comprehensive user manual for the Panda PAN202MT compact electric tumble dryer, covering operation, safety instructions, maintenance, and troubleshooting.</p>
	<p>Panda Internet Security Quick Installation Guide</p> <p>A concise guide to activating and installing Panda Internet Security on Windows, Android, Mac, and iOS devices. Includes information on obtaining activation codes and managing your Panda Account.</p>
	<p>Fiat Panda (2003-) Tow Bar Wiring Kit Installation Guide (FI-011-BB)</p> <p>Comprehensive installation guide for the ECS Electronics FI-011-BB tow bar wiring kit for Fiat Panda, Panda Cross, and Panda SUV models (2003 onwards). Includes component list, wire color codes, wiring diagrams, and testing procedures.</p>



РУКОВОДСТВО
ПОЛЬЗОВАТЕЛЯ
PANDA CLEVER X1

[PANDA CLEVER X1 Robot Vacuum Cleaner User Manual](#)

Comprehensive user manual for the PANDA CLEVER X1 robot vacuum cleaner. Find detailed instructions on setup, operation, maintenance, troubleshooting, and specifications to maximize your cleaning experience.