

CrossBeats CB-EDGE

CrossBeats Edge Truly Wireless Earbuds

USER MANUAL

Model: CB-EDGE

Introduction

Thank you for choosing the CrossBeats Edge Truly Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds. Please read it carefully before use to ensure optimal performance and longevity of your device.

What's in the Box

- CrossBeats Edge Truly Wireless Earbuds
- Charging Case
- Ear Cushions (various sizes)
- USB Type-C Charging Cable
- User Manual

Product Overview

The CrossBeats Edge earbuds are designed for comfort and high-quality audio. They feature smart touch controls, long battery life, and a lightweight, water-resistant design.

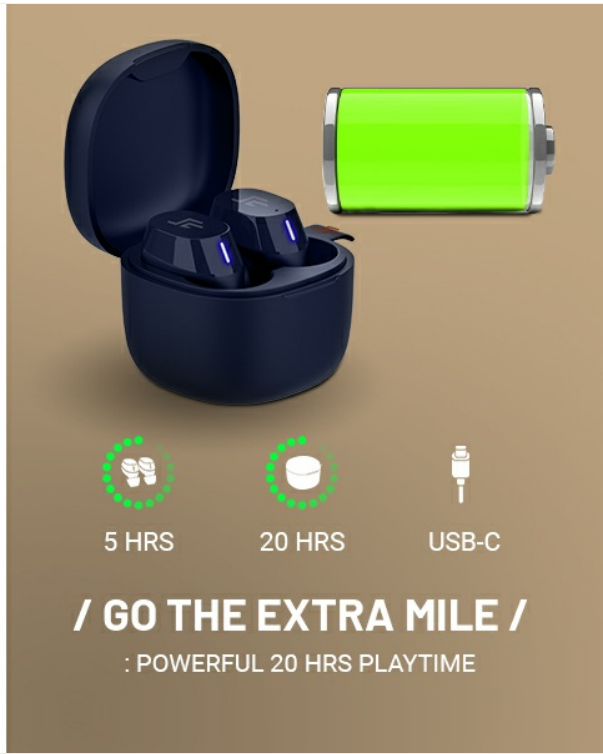 
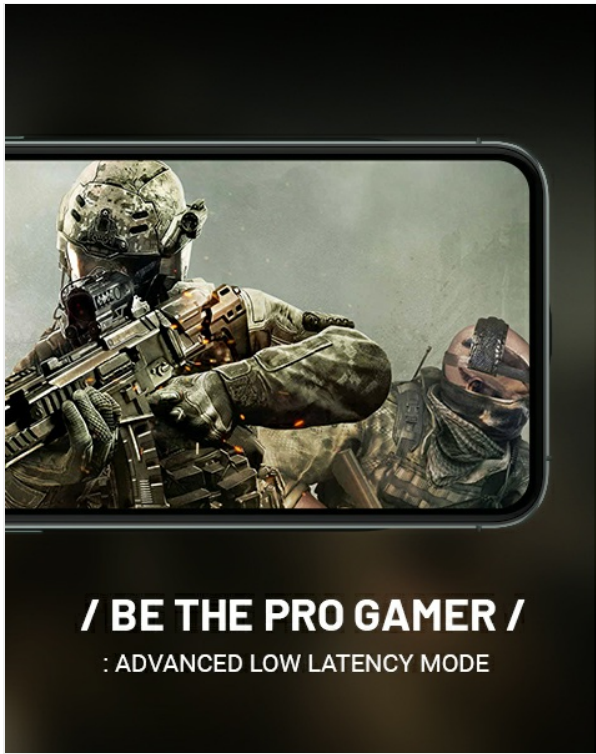 


Figure 1: Ultra-compact and lightweight design for a comfortable fit.

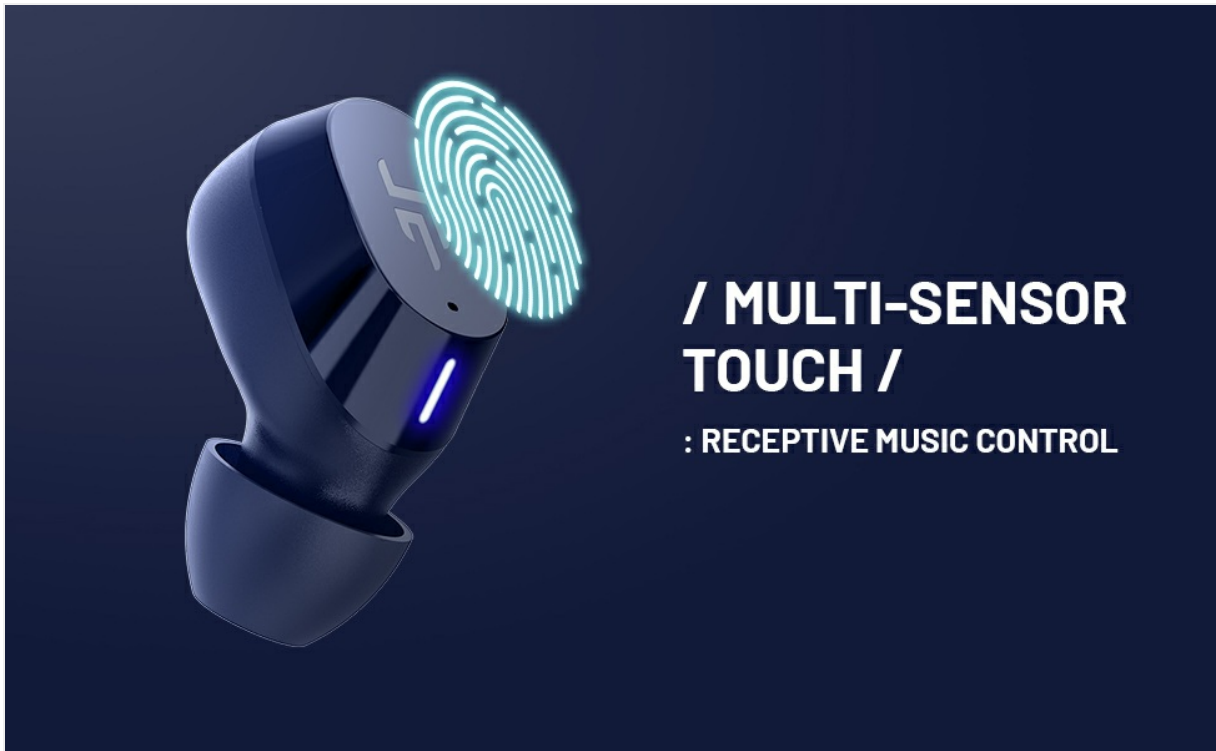 


Figure 2: Up to 20 hours of total playtime with the charging case, featuring Type-C charging.

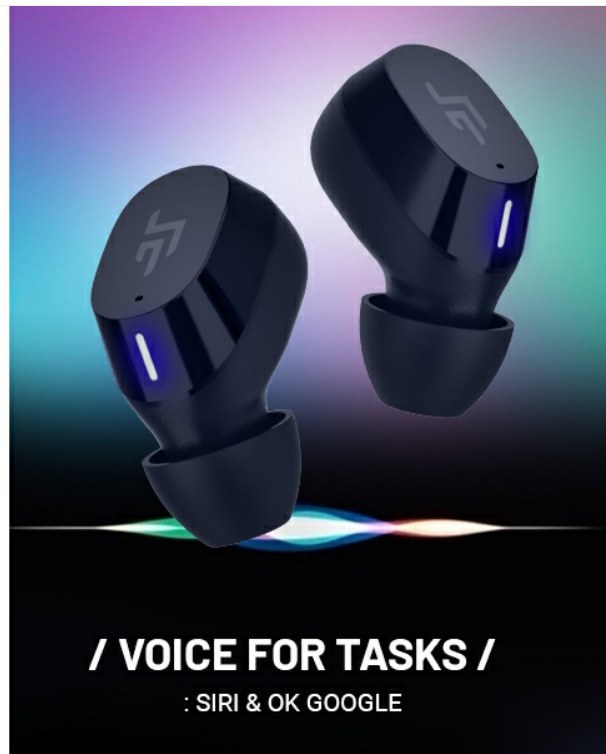 
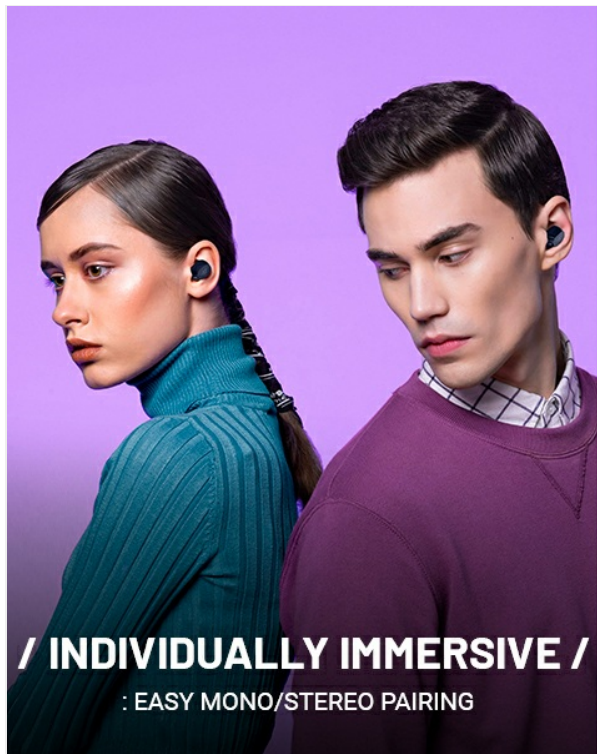 


Figure 3: Quad Core Sound with digital noise reduction for clear audio.



Figure 4: Dual microphones with CVC 8th generation technology for clear calls.



Figure 5: Smart touch controls for easy management of music and calls.



Figure 6: IPX6 water resistance, suitable for workouts and outdoor activities.

Setup

1. Charging the Earbuds and Case

1. Place the earbuds into the charging case.
2. Connect the USB Type-C charging cable to the charging port on the case and to a power source.
3. The indicator lights on the case will show charging status. Ensure the case is fully charged before first use.

2. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode (indicator lights will flash).
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for "CrossBeats Edge" in the list of available Bluetooth devices.
4. Select "CrossBeats Edge" to connect. Once connected, the indicator lights on the earbuds will stop flashing.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case.

Operating Instructions

The CrossBeats Edge earbuds feature intuitive touch controls on each earbud.

Function	Action
Play/Pause Music	Single tap on either earbud.
Next Track	Double tap on the right earbud.
Previous Track	Double tap on the left earbud.
Answer/End Call	Single tap on either earbud during an incoming call or active call.
Reject Call	Press and hold either earbud for 2 seconds during an incoming call.
Volume Up	Triple tap on the right earbud.
Volume Down	Triple tap on the left earbud.
Activate Voice Assistant	Press and hold either earbud for 2 seconds (when not on a call).

Your browser does not support the video tag.

Video 1: A brief overview of the CrossBeats Edge Truly Wireless Earbuds, showcasing key features and design. This video is a short preview.

Maintenance

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Tips:** Remove ear tips and clean them with water and mild soap if necessary. Ensure they are completely dry before reattaching.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them

charged.

- **Water Resistance:** While IPX6 rated, avoid submerging the earbuds in water. Dry them thoroughly if they get wet.

Troubleshooting

Earbuds not pairing:

Ensure both earbuds are charged. Place them back in the case, close it, then open it again to re-enter pairing mode. Check your device's Bluetooth settings and try reconnecting.

Only one earbud working:

Try resetting the earbuds. Place both earbuds in the charging case, then remove them. If the issue persists, refer to the full reset instructions (if available in the physical manual).

No sound or low volume:

Check the volume levels on both your device and the earbuds. Ensure the earbuds are properly seated in your ears. Try cleaning the earbud mesh for any obstructions.

Charging issues:

Verify the charging cable and adapter are working. Ensure the charging contacts on both the earbuds and case are clean and free of debris.

Specifications

Feature	Detail
Brand	CrossBeats
Model Number	CB-EDGE
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	Active Noise Cancellation
Control Method	Touch
Wireless Technology Type	Bluetooth
Water Resistance Level	IPX6 Water Resistant
Material	Plastic
Playtime	Up to 20 hours (with charging case)

Warranty and Support

The CrossBeats Edge earbuds come with a **12-month warranty** for any manufacturing defects. To activate your warranty, the product needs to be registered on the CrossBeats website within 10 days of receipt. For further assistance, troubleshooting, or warranty claims, please visit the official CrossBeats support website or contact their customer service.

Online Support: [CrossBeats Official Store on Amazon](#)

