

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Cosmic Plus Sonic Electric Toothbrush User Manual

AGARO 33438

AGARO Cosmic Plus Sonic Electric Toothbrush User Manual

Model: 33438

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your AGARO Cosmic Plus Sonic Electric Toothbrush. Please read this manual thoroughly before first use and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x AGARO Cosmic Plus Sonic Electric Toothbrush Handle
- 5 x Standard Brush Heads
- 1 x Interdental Brush Head
- 1 x USB Charging Cable
- 1 x Travel Case
- 1 x User Manual (this document)

Sonic vibrations provide
40,000
strokes/min



Image: The AGARO Cosmic Plus Sonic Electric Toothbrush handle, multiple brush heads, charging cable, and travel case are displayed, illustrating the complete package contents.

3. SETUP

3.1 Charging the Toothbrush

1. Before first use, fully charge the toothbrush.
2. Connect the USB charging cable to the charging port at the bottom of the toothbrush handle.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
4. The charging indicator light will illuminate. A full charge typically takes approximately 4 hours.
5. Once fully charged, the toothbrush can last up to 25 days with typical use (2 minutes, twice daily).

Enjoy up to
25-days*
battery life
with just 4 hours
of charge



*With 2 minutes of use twice daily.

Image: The AGARO Cosmic Plus Sonic Electric Toothbrush highlighting its long battery life of up to 25 days on a 4-hour charge.

3.2 Attaching a Brush Head

1. Align the brush head with the metal shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place.
3. To remove, pull the brush head straight up from the handle.

4. OPERATING INSTRUCTIONS

4.1 Brushing Your Teeth

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gum line.
3. Press the power button to turn on the toothbrush.
4. Gently move the brush head slowly across each tooth surface. Do not scrub vigorously.

5. The toothbrush features a **2-minute smart timer**, which automatically turns off the brush after 2 minutes of brushing. It also has a **30-second interval timer** that pauses briefly to indicate when to move to the next quadrant of your mouth.
6. After brushing, rinse your mouth and the brush head thoroughly.



Image: The AGARO Cosmic Plus Sonic Electric Toothbrush highlighting its W-Shape DuPont Bristles and the 2-minute smart timer feature, which guides users through brushing all four quadrants of the mouth.

4.2 Cleaning Modes

The AGARO Cosmic Plus offers 5 distinct cleaning modes for various oral care needs. Press the power button repeatedly to cycle through the modes:

- **White:** Designed to effectively remove surface stains.
- **Clean:** Standard mode for daily comprehensive cleaning.
- **Sensitive:** Gentle care for delicate gums and sensitive teeth.
- **Polish:** Enhances tooth shine for a brighter appearance.
- **Massage:** Provides a gentle massage to soothe and comfort sensitive gums.

5 Cleaning Modes

For different conditions of teeth and gums



White

Effectively removes surface stains



Clean

Daily use for spotless teeth



Sensitive

Gentle care for delicate gums



Polish

Enhances shine for a bright smile



Massage

Soothes and comforts sensitive gums



Image: The AGARO Cosmic Plus Sonic Electric Toothbrush displaying its five cleaning modes: White, Clean, Sensitive, Polish, and Massage, each with a brief description of its function.

5. MAINTENANCE

5.1 Cleaning the Toothbrush

- After each use, rinse the brush head thoroughly under running water.
- Wipe the handle with a damp cloth. Do not immerse the handle in water, although it is IPX7 waterproof, prolonged immersion is not recommended.
- Ensure the charging port is dry before charging.

Interdental Brush Head

For in between teeth & hard to reach areas

up to **99%**
Plaque Removal*

IPX7
Waterproof

*vs manual toothbrush

An illustration of a black electric toothbrush with a white interdental brush head. The brush head is shown cleaning between a row of white teeth. Water splashes around the brush head, and white arrows indicate the cleaning motion. The background is a dark blue with concentric circles and water droplets.

Image: The AGARO Cosmic Plus Sonic Electric Toothbrush demonstrating its interdental brush head for cleaning between teeth and highlighting its IPX7 waterproof rating, indicating resistance to water immersion.

5.2 Replacing Brush Heads

Dentists recommend replacing brush heads every 3 months, or sooner if the bristles become frayed. Replacement brush heads are available from AGARO.

6. TROUBLESHOOTING

- **Toothbrush does not turn on:** Ensure the toothbrush is charged. If the battery is low, connect it to the charger.
- **Reduced vibration:** This may indicate a low battery. Charge the toothbrush fully.
- **Brush head feels loose:** Ensure the brush head is pushed down firmly onto the metal shaft until it clicks.

7. SPECIFICATIONS

Model Number	33438
Product Dimensions	6.69 x 0.55 x 9.45 inches; 2.65 ounces
Power Source	Battery Powered (1 Lithium Ion battery included)
Special Feature	Electric Rechargeable
Waterproof Rating	IPX7
Sonic Vibrations	Up to 40,000 strokes/min
Battery Life	Up to 25 days (4 hours charge)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The AGARO Cosmic Plus Sonic Electric Toothbrush comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use.

8.2 Customer Support

For any questions, concerns, or support needs regarding your AGARO product, please refer to the contact information provided on the product packaging or the official AGARO website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question