

## KODAK 32HDX7XPRO

# Kodak 32HDX7XPRO 32-inch HD Ready Android LED TV User Manual

Model: 32HDX7XPRO

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Kodak 32HDX7XPRO 32-inch HD Ready Android LED TV. Please read this manual thoroughly before using your television and retain it for future reference.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions to prevent electric shock, fire, or damage to the television:

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Keep the TV away from direct sunlight, heat sources, and strong magnetic fields.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the packaging:

- 1 x Kodak 32HDX7XPRO TV Unit
- 1 x Remote Controller
- 2 x AAA Batteries
- 1 x User Manual (this document)
- 1 x Table Top Stand



Image: Front view of the Kodak 32HDX7XPRO TV displaying its smart interface with various streaming apps.

## 4. SETUP

---

### 4.1 Unpacking

Carefully remove the TV and all accessories from the packaging. Place the TV face down on a soft, flat surface to prevent screen damage during stand installation.

### 4.2 Stand Installation (Table Top)

Attach the provided table top stand to the bottom of the TV using the screws included in the package. Ensure the stand is securely fastened before placing the TV upright.

### 4.3 Wall Mounting

If you intend to wall mount the TV, ensure you use a VESA-compatible wall mount kit (not included) that supports the TV's weight and dimensions. Follow the instructions provided with your wall mount kit. The TV supports wall mounting.

### 4.4 Connecting Peripherals

Your Kodak TV offers multiple connectivity options:

- **HDMI Ports:** Connect set-top boxes, Blu-ray players, gaming consoles, or other HDMI-enabled devices to the 3 HDMI ports.
- **USB Ports:** Connect USB storage devices for media playback or software updates to the 2 USB ports.
- **Audio Out:** Use the optical or auxiliary audio output for external sound systems.
- **Power:** Connect the power cord to the TV and then to a suitable power outlet.



Image: Rear view of the TV highlighting the location of HDMI, USB, and other connectivity ports.

## 4.5 Initial Power On & Setup Wizard

After connecting all necessary cables, plug in the TV. Press the power button on the remote control or TV. The initial setup wizard will guide you through language selection, network connection (Wi-Fi), Google account sign-in, and channel scanning.

## 5. OPERATING THE TV

---

### 5.1 Remote Control Overview

The smart remote control features dedicated hotkeys for quick access to popular streaming services and Google Voice Assistant. Insert the two AAA batteries into the remote control.

# SMART REMOTE

- Dedicated Hotkeys
- Voice Assistant



Image: The smart remote control, illustrating its dedicated hotkeys for streaming services and the Google Assistant button for voice commands.

## 5.2 Basic Functions


- **Power:** Press the power button to turn the TV on or off.
- **Volume:** Use the volume up/down buttons to adjust the sound level.
- **Input:** Press the input button to select between connected devices (HDMI 1, HDMI 2, USB, etc.).

## 5.3 Smart TV Features (Android TV)

Your TV runs on Android TV, providing access to a wide range of features:

- **Google Play:** Download thousands of apps and games from the Google Play Store.
- **Voice Search:** Use the Google Assistant button on your remote to search for content, control smart home devices, and get information using your voice.
- **Chromecast Built-in:** Cast content from your compatible smartphone, tablet, or computer directly to your TV.
- **Pre-installed Apps:** Enjoy popular streaming services like Prime Video, YouTube, and more.

# 5000+ APPS & GAMES

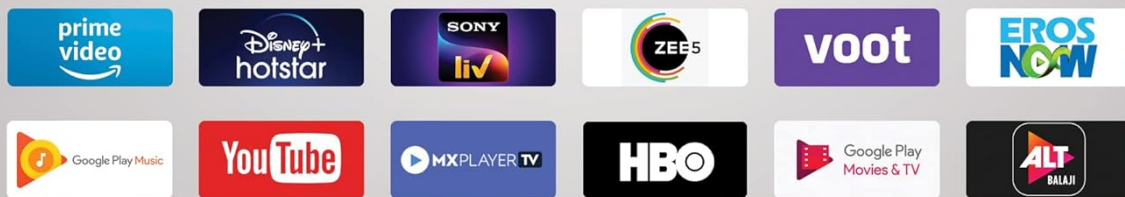

AND MORE...

Image: The TV's home screen displaying a selection of available applications and games.

## 6. MAINTENANCE

### 6.1 Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of screen cleaner. Do not spray cleaner directly onto the screen. Clean the TV casing with a soft, dry cloth.

### 6.2 Storage

If storing the TV for an extended period, disconnect it from the power outlet and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

## 7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord disconnected, no power from outlet	Check power cord connection, test outlet with another device.
No picture, but sound is present	Incorrect input source, faulty cable	Verify correct input source, check HDMI/AV cable connections.
No sound, but picture is present	Volume muted or too low, external audio system issue	Unmute volume, increase volume, check external audio connections.
Remote control not working	Batteries depleted or incorrectly inserted, obstruction	Replace batteries, ensure correct polarity, remove obstructions between remote and TV.
Smart features not working	No internet connection	Check Wi-Fi connection, restart router.

## 8. SPECIFICATIONS

---

Key technical specifications for the Kodak 32HDX7XPRO TV:

- **Model:** 32HDX7XPRO
- **Screen Size:** 32 Inches (80 cm)
- **Display Technology:** LED
- **Resolution:** HD Ready (1366 x 768 pixels)
- **Refresh Rate:** 60 Hz
- **Operating System:** Android TV
- **Sound Output:** 24 Watts
- **Connectivity:** 3 x HDMI, 2 x USB, Wi-Fi, Bluetooth
- **RAM:** 1 GB
- **Storage:** 8 GB
- **Graphics Coprocessor:** Mali-450MP3
- **Viewing Angle:** 178 Degrees
- **Product Dimensions (LxWxH):** 73.5 x 11 x 44 cm
- **Item Weight:** 5.8 kg

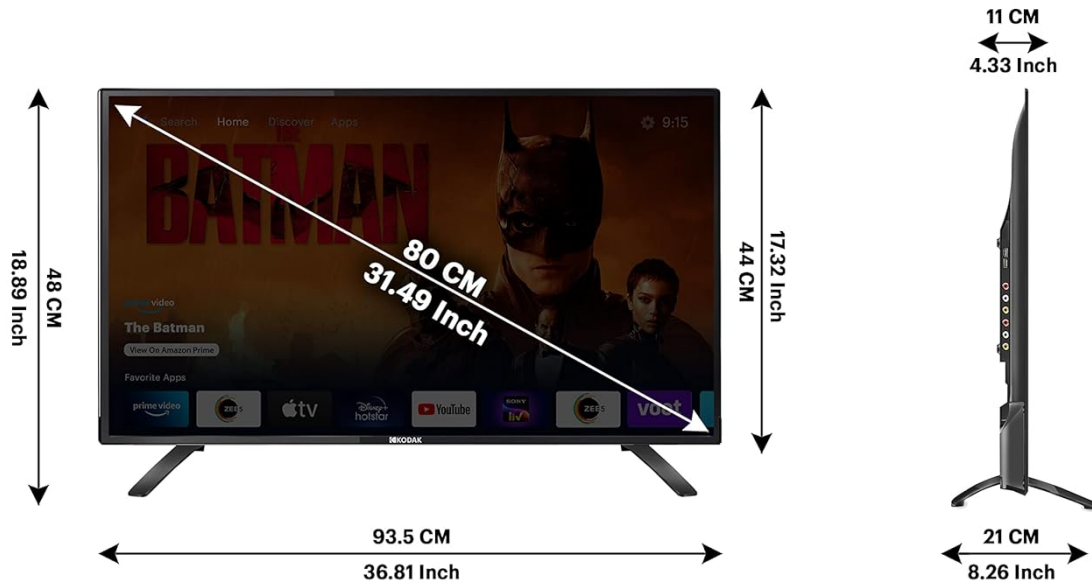


Image: Dimensional diagram of the TV, indicating width, height, and depth.

## 9. WARRANTY AND SUPPORT

---

Your Kodak 32HDX7XPRO TV comes with a **1-year standard manufacturer warranty** from the date of purchase. For warranty claims, technical support, or service inquiries, please contact:

- **Manufacturer:** Super Plastronics Pvt Ltd (SPPL)
- **Address:** B-30 & 31, Phase -2, Sector 81, Noida, Uttar Pradesh 201305
- **Customer Care:** 1800-103-3036
- **Email:** [consumercare@kodaktv.in](mailto:consumercare@kodaktv.in)