

[Manuals.plus](#) /

› [CHiQ](#) /

› CHiQ FCF98D Freezer Instruction Manual

CHiQ FCF98D


CHiQ FCF98D Freezer Instruction Manual

Model: FCF98D

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CHiQ FCF98D chest freezer. Please read these instructions carefully before using the appliance and keep them for future reference.

The CHiQ FCF98D freezer is designed for optimal food storage with a compact footprint and large capacity. It features energy-efficient operation, consuming less than one kilowatt-hour over two days. The mechanical temperature control is simple to use, offering a wide temperature range to meet various storage needs. Its design includes a suspended basket for convenient storage and an embossed aluminum inner wall for easy cleaning.

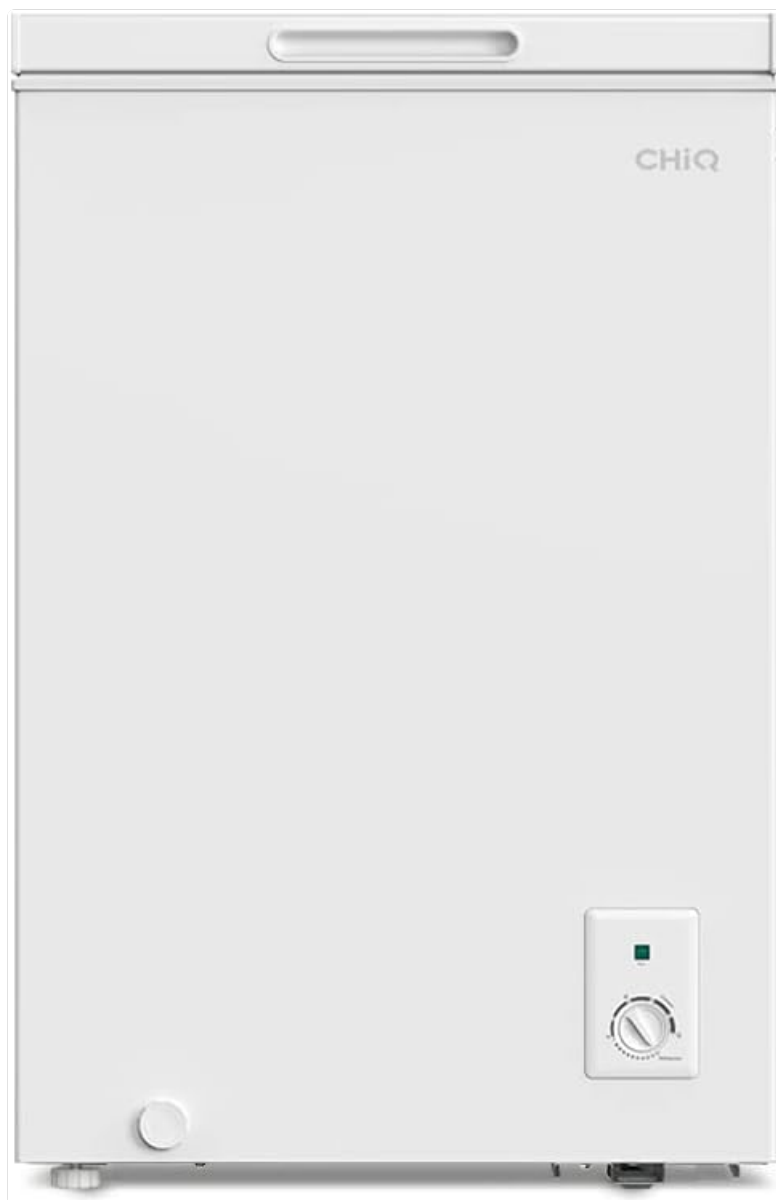

Front view of the CHiQ FCF98D chest freezer, showing its compact white design and external temperature control dial.



The CHI Q FCF98D freezer with its lid open, revealing the spacious interior and a suspended storage basket.

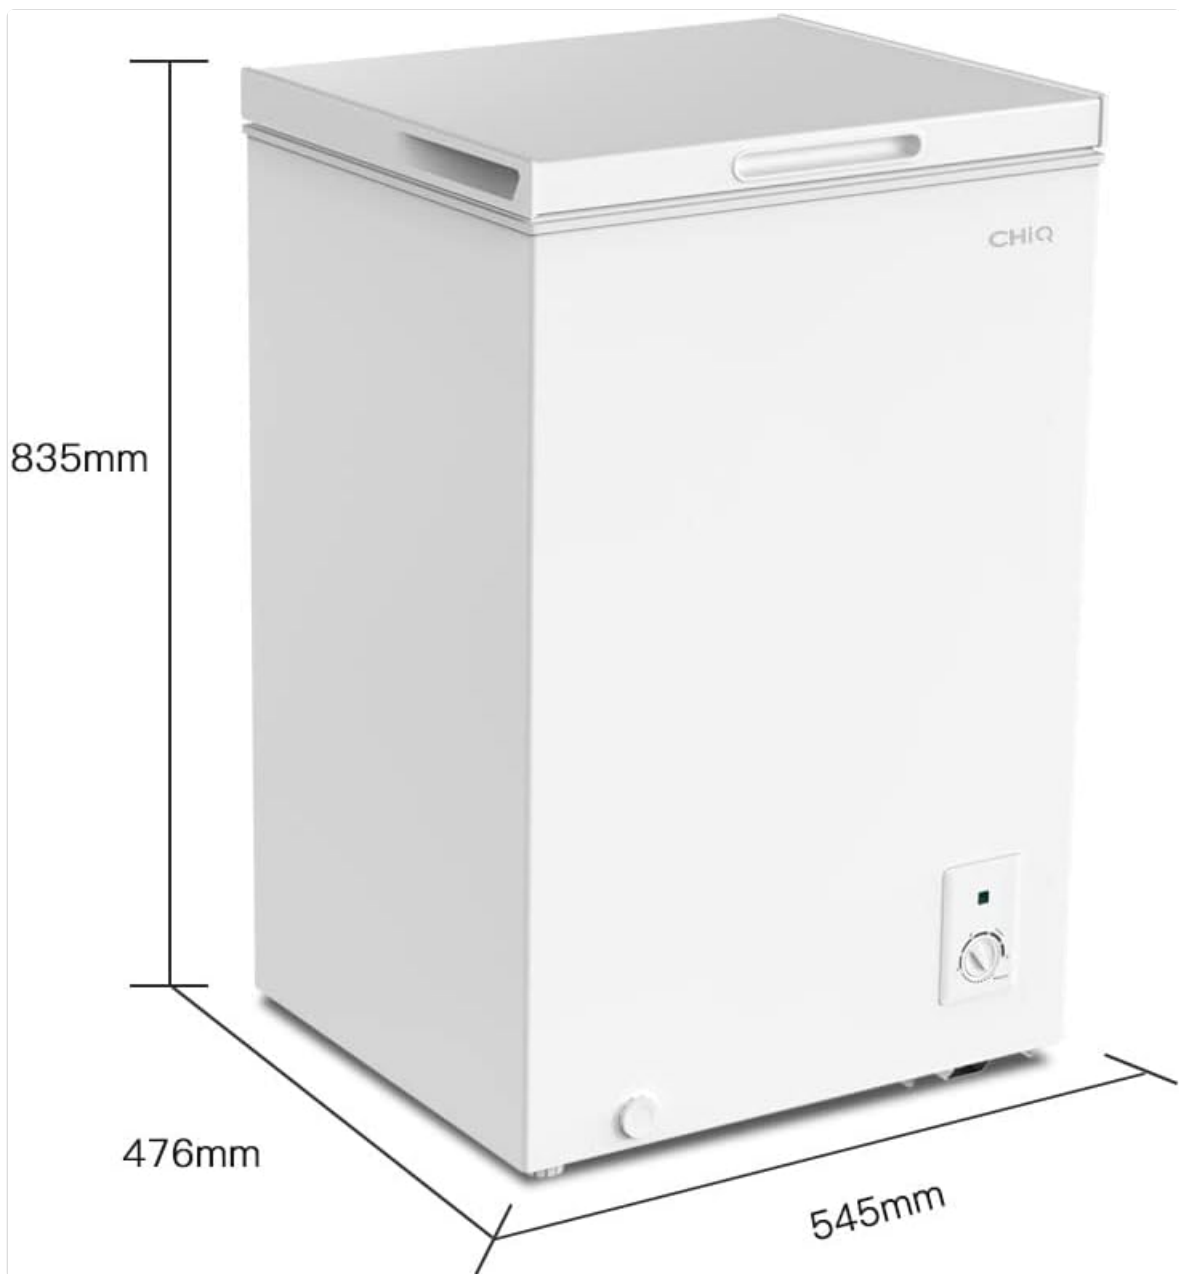


Diagram illustrating the dimensions of the CHI Q FCF98D freezer: 835mm height, 476mm depth, and 545mm width.

SETUP AND INSTALLATION

Unpacking

- Carefully remove all packaging materials.
- Inspect the freezer for any shipping damage. Report any damage to your retailer immediately.
- Remove all internal packing, including the suspended basket and any protective films.

Placement

- Place the freezer on a firm, level surface away from direct sunlight and heat sources (e.g., stoves, radiators).
- Ensure adequate ventilation. Leave at least 5-10 cm (2-4 inches) of space around the sides and back of the appliance to allow for proper air circulation and heat dissipation. This is crucial for efficient operation and to prevent overheating of the external surfaces.
- Avoid placing the freezer in excessively damp or cold environments.

Initial Cleaning

- Before first use, clean the interior and exterior of the freezer with a soft cloth and a mild detergent. Rinse with clean water and dry thoroughly.
- Do not use abrasive cleaners or solvents.

Power Connection


- Ensure the voltage and frequency of your power supply match the ratings on the appliance's rating label (220 Volts AC).
- Plug the freezer into a dedicated, properly grounded wall outlet. Do not use extension cords or adapter plugs.
- After plugging in, allow the freezer to stand for at least 2-4 hours before loading food to allow the refrigerant to settle.

OPERATING INSTRUCTIONS

Temperature Control

The CHiQ FCF98D freezer features a mechanical temperature control dial located on the front of the unit. This dial allows you to adjust the internal temperature according to your storage needs.

Ultra wide temperature range UPG

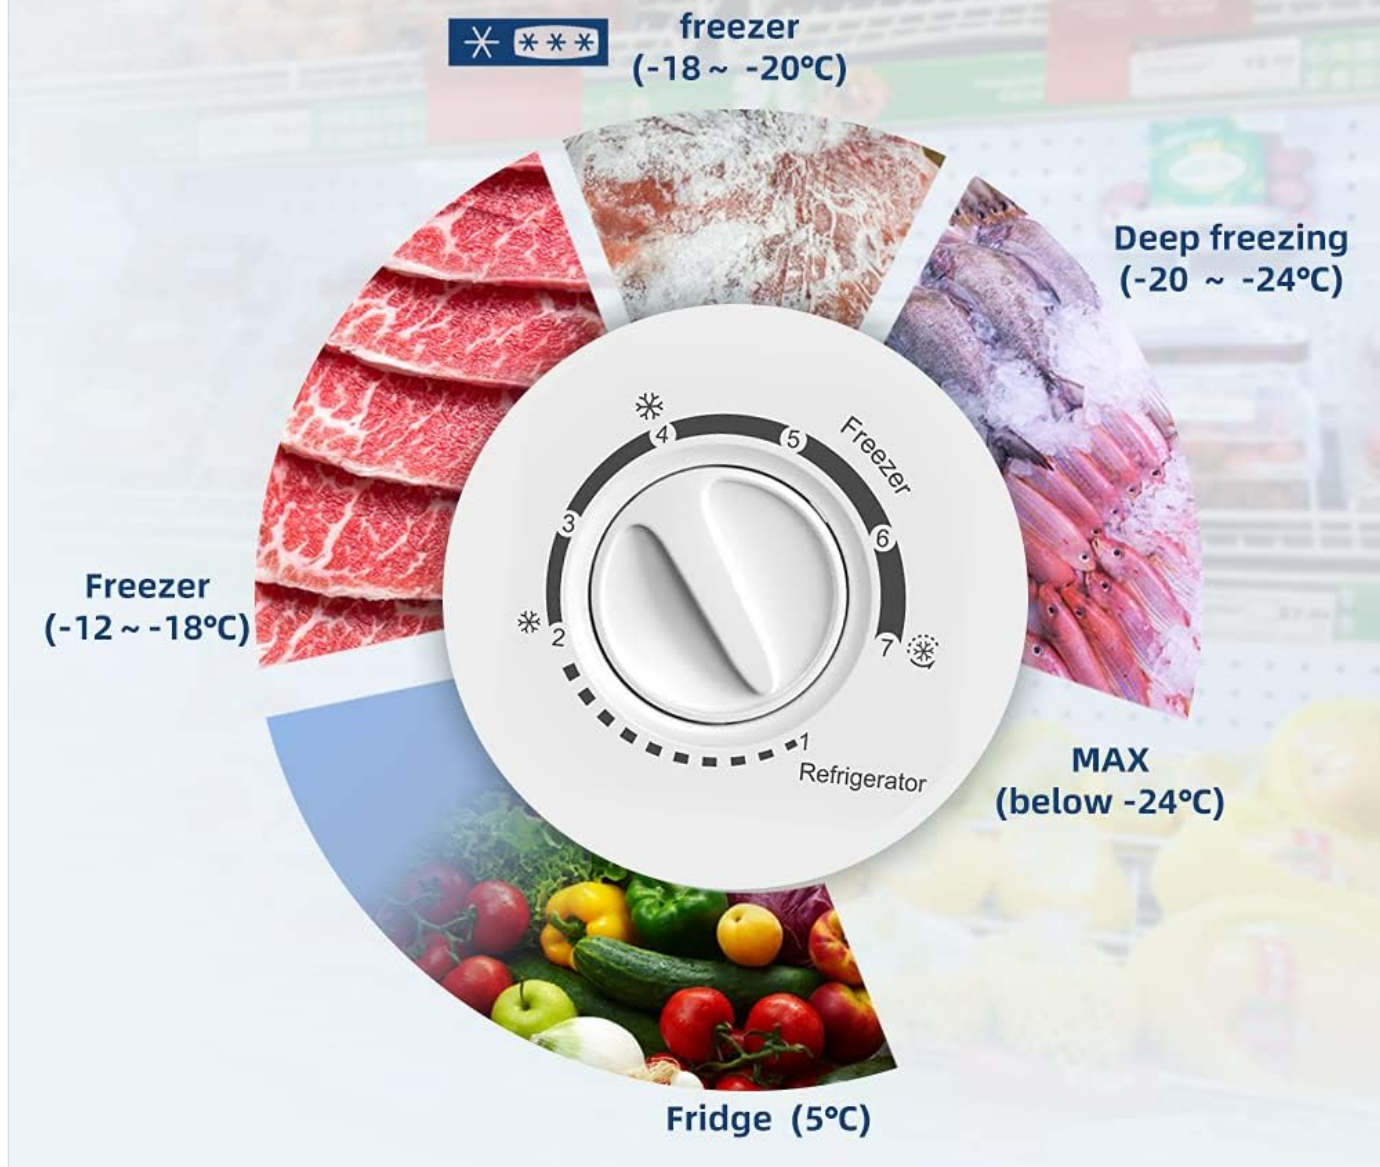

The mechanical temperature control dial, showing settings from 1 to 7, including options for refrigerator mode (Fridge) and various freezer levels (Freezer, Deep Freezing, MAX).

- **Settings 1-7:** Rotate the dial to select the desired temperature. Higher numbers generally indicate colder temperatures.
- **Refrigerator Mode (Fridge):** Setting '1' typically corresponds to refrigerator temperatures (around 5°C). This allows the unit to function as a chiller.
- **Freezer Mode:** Settings '2' through '7' are for freezing.
 - **Freezer (-12°C to -18°C):** Settings '2' and '3' are suitable for general freezing.
 - **Freezer (-18°C to -20°C):** Settings '4' and '5' provide standard freezing temperatures.
 - **Deep Freezing (-20°C to -24°C):** Setting '6' is for deeper freezing.
 - **MAX (below -24°C):** Setting '7' provides the coldest temperature for rapid freezing or long-term storage of highly perishable items.
- For initial startup or rapid freezing, set the dial to 'MAX' for a few hours, then adjust to your desired regular setting.


Loading Food

- Allow the freezer to reach the desired temperature before loading food.
- Do not overload the freezer. Leave some space for air circulation.
- For best results, freeze small quantities of food at a time.
- Utilize the suspended basket for frequently accessed items or smaller packages.

MAINTENANCE AND CARE

Cleaning

- Always unplug the freezer before cleaning.
- Clean the interior regularly with a solution of mild detergent and warm water. The embossed aluminum inner wall is designed for easy cleaning.
- Wipe down the exterior with a soft, damp cloth.
- Ensure the door seal is clean and free of debris to maintain an airtight seal.

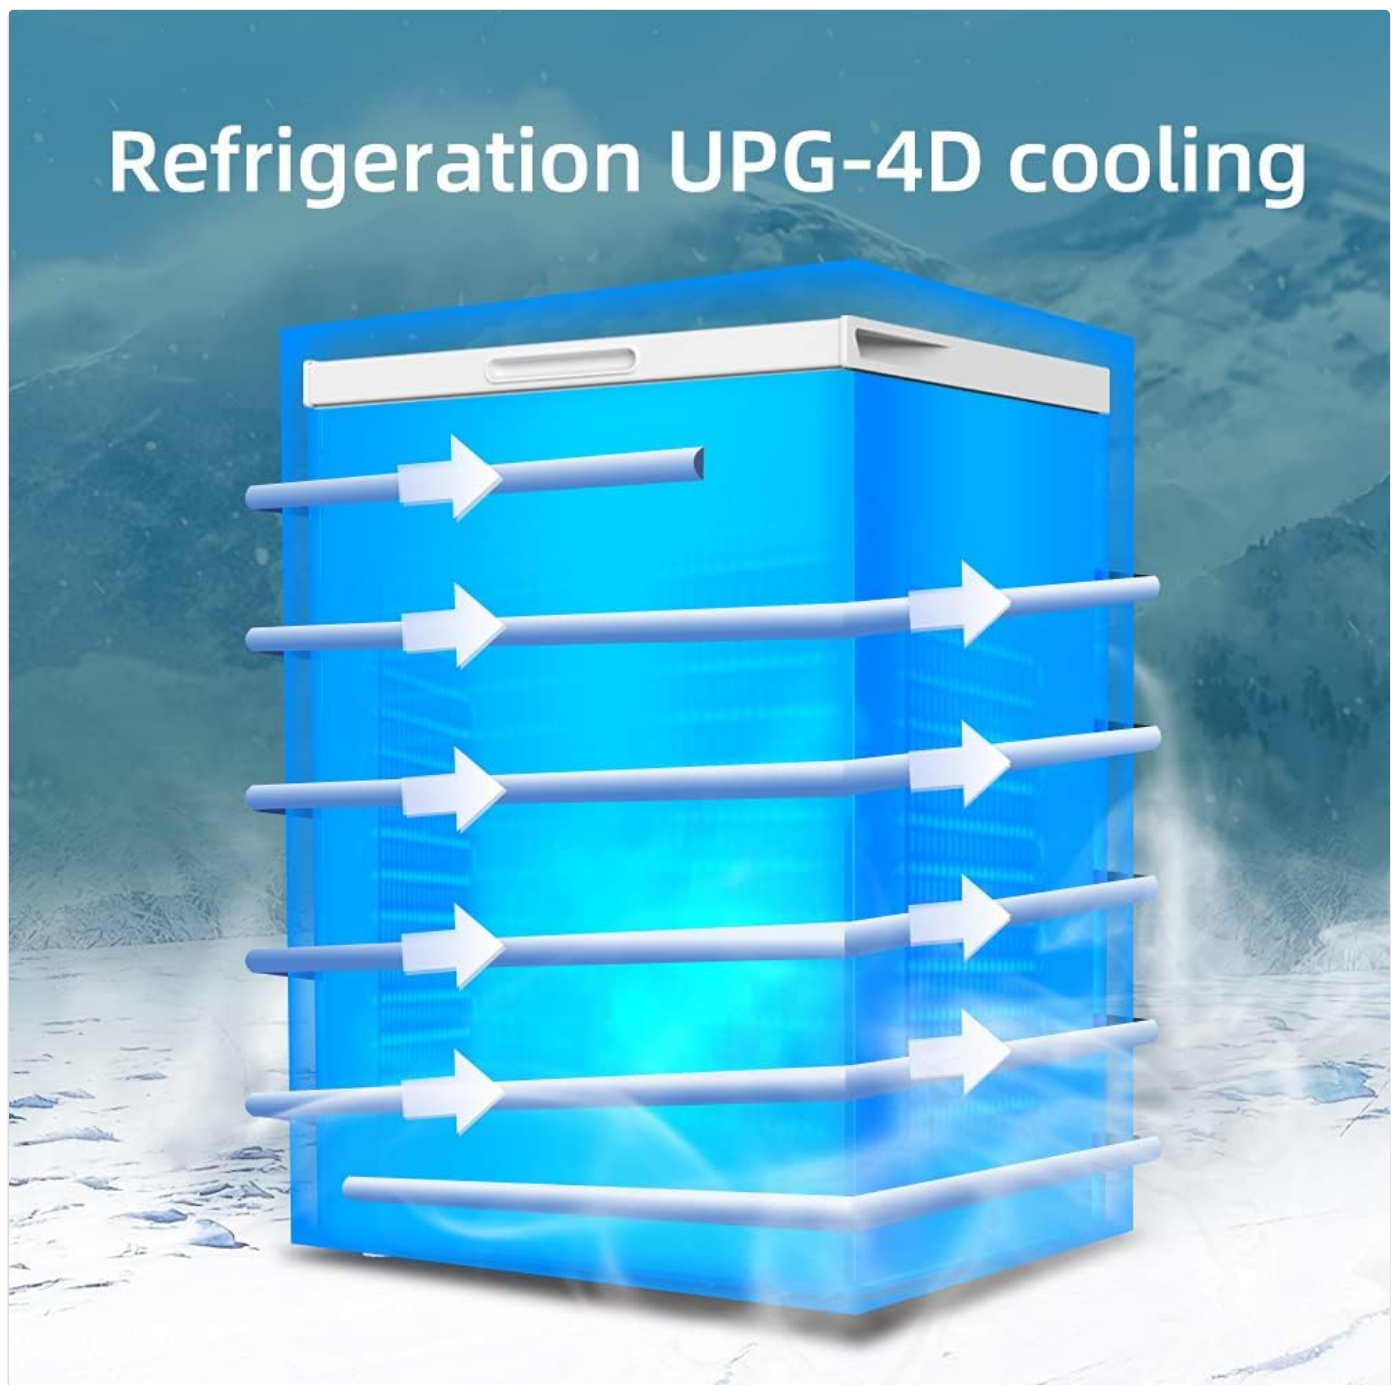

A close-up view of the freezer's door seal, highlighting its importance for maintaining internal temperature and energy efficiency.

Defrosting

This freezer is a manual defrost model. Frost buildup on the interior walls is normal and should be removed periodically to maintain efficiency.

- Defrost the freezer when the frost layer reaches about 5-10 mm (0.2-0.4 inches) thick.
- Unplug the freezer and remove all food items. Store frozen food in another freezer or insulated container.
- Leave the lid open to allow the frost to melt naturally. You can place towels at the bottom to absorb water.
- Do not use sharp objects or heating devices to remove frost, as this can damage the interior.
- Once defrosted, clean and dry the interior thoroughly before plugging it back in and reloading food.

Energy Saving Tips

- Ensure the freezer is placed in a well-ventilated area, away from direct sunlight and heat sources.
- Avoid opening the lid too frequently or for extended periods.
- Ensure the door seal is clean and intact.
- Defrost regularly to prevent excessive frost buildup.
- Allow hot food to cool down before placing it in the freezer.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues that you might be able to resolve yourself.

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power outlet; ensure plug is firmly inserted; reset circuit breaker.
Freezer is not cold enough.	Temperature setting too high; lid not closed properly; excessive frost buildup; placed near heat source.	Adjust temperature dial to a colder setting; ensure lid is fully closed; defrost the unit; relocate freezer away from heat.
Excessive noise.	Freezer not level; objects vibrating against the unit; normal compressor operation.	Ensure freezer is level; remove any objects touching the unit; slight humming from the compressor is normal.
Water on the floor.	Drain plug not properly sealed (during defrost); excessive humidity.	Ensure drain plug is sealed after defrosting; reduce humidity in the room if possible.

If the problem persists after checking these points, please contact CHiQ customer support.

SPECIFICATIONS

Feature	Detail
Brand	CHiQ
Model Number	FCF98D
Product Dimensions (L x W x H)	47.6 x 54.51 x 83.49 cm

Feature	Detail
Weight	21 Kilograms
Capacity	99 Liters
Energy Efficiency Class	F
Annual Energy Consumption	210 Kilowatt-hours
Noise Level	41 dB
Installation Type	Freestanding
Color	White
Voltage	220 Volts (AC)
Power	210 KW
Door Orientation	Right
Door Finish Material	Stainless steel, Plastic

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2016 DER KOMMISSION zur Energieverbrauchskennzeichnung von Kühlgeräten

Name oder Handelsmarke des Lieferanten: CHIQ

Anschrift des Lieferanten: Changhong Europe Electric s.r.o., Dělnická 213/12, 17000 Holešovice Praha 7, CZ

Modellkennung: FCF98D

Art des Kühlgeräts:

Geräuscharmes Gerät:	Nein	Bauart:	freistehend
Weinlagerschrank:	Nein	Anderes Kühlgerät:	Ja

Allgemeine Produktparameter:

Parameter	Wert	Parameter	Wert
Gesamtabmessungen (in Millimeter)	Höhe 835	Gesamtrauminhalt (in dm³ oder l)	99
	Breite 545		
	Tiefe 476		
EEL	125	Energieeffizienzklasse	F
Luftschallemissionen (in dB(A) re 1 pW)	41	Luftschallemissionsklasse	C
Jährlicher Energieverbrauch (in kWh/a)	210	Klimaklasse:	erweiterte gemäßigte Zone, gemäßigte Zone, subtropische Zone, tropische Zone
Mindestumgebungstemperatur (in °C), für die das Kühlgerät geeignet ist	10	Höchstumgebungstemperatur (in °C), für die das Kühlgerät geeignet ist	43
Winterschaltung	Nein		

Fachparameter:

Fachtyp	Fachparameter und #werte			
	Rauminhalt des Fachs (in dm³ oder l)	Empfohlene Temperatureinstellung für eine optimierte Lebensmittellagerung (in °C) Diese Einstellungen dürfen nicht im Widerspruch zu den Lagerbedingungen	Gefrierermögen (in kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)

Seite 1 / 2

		gen nach Anhang IV Tabelle 3 stehen			
Speisekammerfach	Nein	-	-	-	-
Weinlagerfach	Nein	-	-	-	-
Kellerfach	Nein	-	-	-	-
Lagerfach für frische Lebensmittel	Nein	-	-	-	-
Kaltlagerfach	Nein	-	-	-	-
Null-Sterne- oder Eis- bereiterfach	Nein	-	-	-	-
Ein-Stern-Fach	Nein	-	-	-	-
Zwei-Sterne-Fach	Nein	-	-	-	-
Drei-Sterne-Fach	Nein	-	-	-	-
Vier-Sterne-Fach	Ja	99,0	-20	-	M
Zwei-Sterne-Abteil	Nein	-	-	-	-
Fach mit variabler Temperatur	-	-	-	-	-
Für Vier-Sterne-Fächer					
Schnelleinfrierfunktion			Nein		
Lichtquellenparameter:					
Art der Lichtquelle			-		
Energieeffizienzklasse			-		
Mindestlaufzeit der vom Hersteller angebotenen Garantie: 84 Monate					
Weitere Angaben:					
Weblink zur Website des Herstellers, auf der die Informationen gemäß Nummer 4 Buchstabe a des Anhangs der Verordnung (EU) 2019/2019 der Kommission zu finden sind: no					

Seite 2 / 2

The energy efficiency label for the CHIQ FCF98D freezer, indicating an F rating, 210 kWh/annum consumption, 99L capacity, and 41 dB noise level.



WARRANTY AND SUPPORT

CHiQ is committed to providing reliable products and excellent customer service. Please refer to the following information regarding warranty and support.



An image detailing CHiQ's service regulations, including return policy, warranty periods, and online assistance.

- **Warranty:** All CHiQ products come with a 2-year warranty.
- **Compressor Replacement:** Replacement of the compressor is covered for 12 years.
- **Motor Replacement:** Replacement of motors is covered for 12 years.
- **Online Assistance:** Professional support teams are available online during working days to answer your questions.
- **Returns:** Products can be returned via Amazon within 30 days without justification.

For further assistance or to report an issue, please visit the official CHiQ website or contact their customer support directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08CS9B5G5>

More documents and user manuals: <https://manuals.plus/>