



Manuals.plus /

› Cutex /

› Cutex Foot Control Pedal FC-YUK3S User Manual

## Cutex FC-YUK3S

# Cutex Foot Control Pedal FC-YUK3S User Manual

Model: FC-YUK3S

## INTRODUCTION

---

This manual provides essential information for the proper installation, operation, and maintenance of your Cutex Foot Control Pedal, model FC-YUK3S. This pedal is designed to provide variable speed control for compatible sewing machines, allowing for precise stitching.

## SAFETY INFORMATION

---

- Always disconnect the sewing machine from the power outlet before connecting or disconnecting the foot control pedal.
- Ensure the pedal is placed on a stable, flat surface during use to prevent accidental movement.
- Do not expose the pedal to moisture or extreme temperatures.
- Do not attempt to open or repair the pedal yourself. Refer to qualified service personnel.
- Keep the cord away from hot surfaces and sharp edges.

## SETUP AND INSTALLATION

---

Before connecting the foot control pedal, ensure your sewing machine is turned off and unplugged from the power source.

1. **Verify Compatibility:** Carefully examine the receptacle on your sewing machine where the foot control pedal connects. Compare it with the connector on the FC-YUK3S pedal to ensure a precise match. The FC-YUK3S pedal features a three-hole female connector.



This close-up image displays the three-hole female connector of the foot control pedal's cord, essential for matching with your sewing machine's receptacle. A ruler indicates the connector is approximately 1 inch wide.

2. **Connect the Pedal:** Align the pedal's connector with the corresponding receptacle on your sewing machine. Gently push the connector firmly into place until it is fully seated. Do not force the connection.
3. **Position the Pedal:** Place the foot control pedal on the floor in a comfortable and stable position, ensuring the cord is not tangled or obstructing your workspace.
4. **Power On:** Once the pedal is securely connected, you may plug your sewing machine into a power outlet and turn it on.



This image shows the black foot control pedal and its attached power cord, coiled neatly. The pedal has a textured surface for foot grip.

## OPERATING INSTRUCTIONS

---

The Cutex Foot Control Pedal provides variable speed control for your sewing machine. The harder you press the pedal, the faster the machine will sew.

1. Ensure your sewing machine is properly threaded and ready for operation.
2. Place your foot on the pedal.
3. Gently press down on the pedal to start sewing. The machine will begin to operate at a slow speed.
4. Increase pressure on the pedal to increase the sewing speed.
5. Release pressure on the pedal to slow down or stop the machine.

## COMPATIBILITY

---

The Cutex Foot Control Pedal FC-YUK3S is compatible with a wide range of sewing machine models. Please verify your machine's receptacle matches the pedal's connector before purchase and installation.

**Part # :** FC-YUK3S

**Alternate part numbers :** FC-Z, 317353-001, 369263-003, EZ-168A, YUK3SR1, 4C316B, 369263003, 772, 796, 988216-001

### Compatible Models:

- **Babylock:** 5106, BL1000, BL1400, BL1506, BL1750, BL2000, BL2300, BL2500
- **Bernette:** 440, 705, 705A, 715
- **Elna:** 110, 120, 130, 140, 149, 150, 200, 220, 225, 225-1, 225L, 230, 240, 244I, 245, 245I, 245L, 250, 255, 255I, T34D, L3, T3, T33, T34, T34D

- **Euro-Pro:** 1260DX, 375, 380, 415, 440DX, 50-375, 605D, 6130
- **Husqvarna Viking:** 140, 160, 1610
- **Necchi:** 4575, 4595, 469FA, 4795, 521, 525, 531FA, 535FA, 537FA, 575FA, 6800, 534 Italy
- **Pfaff:** 756
- **Riccar:** 149, 200, 220, 225, 225i Elnita, 230, 240, 244, 244I, 245, 245I, 250, 255
- **Serge Mate:** 300, 430, 432, 4350D, 5030, 5040, 5040L, ST600L
- **Simplicity:** PRO4D, 117 Featherweight, 117 Plume, 14U444, 14U444B, 14U454
- **White:** 1410, 1415, 1500, 1600, 1730, 1810, 1911 Quilter's Friend, 2037, 221, 310, 3900B, 415, 423R, 447, 505, 510, 693FA, 710, 734, 972

## MAINTENANCE

The Cutex Foot Control Pedal requires minimal maintenance.

- Keep the pedal clean by wiping it with a dry, soft cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Store the pedal in a dry place when not in use.
- Regularly inspect the cord for any signs of damage, fraying, or exposed wires. If damage is found, discontinue use immediately and replace the pedal.

## TROUBLESHOOTING

| Problem                          | Possible Cause   | Solution   |
|----------------------------------|--|--|
| Pedal does not respond.          | Pedal not fully connected.<br>Sewing machine not powered on.<br>Power outlet issue.<br>Incompatible pedal. | Ensure pedal connector is fully seated in the machine's receptacle.<br>Check if the sewing machine's power switch is ON.<br>Test the power outlet with another appliance.<br>Verify your machine model is listed in the compatibility section. |
| Machine runs at full speed only. | Internal pedal malfunction.  | The pedal may be faulty. Consider replacement.   |
| Intermittent operation.          | Loose connection.<br>Damaged cord.   | Ensure connection is secure.<br>Inspect the cord for damage. If damaged, replace the pedal.  |

## SPECIFICATIONS

- **Model Number:** FC-YUK3S
- **Part Number:** FC-YUK3S
- **Manufacturer:** Cutex Sewing Supplies
- **Connector Type:** 3-hole female connector (as pictured)
- **ASIN:** B08CSDFSRN
- **UPC:** 850010940564
- **First Available:** July 11, 2020

## WARRANTY AND SUPPORT

For warranty information or technical support regarding your Cutex Foot Control Pedal, please contact Cutex Sewing Supplies directly. Refer to the product packaging or the seller's information for contact details.

**Manufacturer:** Cutex Sewing Supplies

For additional assistance, you may visit the [Cutex Store on Amazon](#).

