

Aesfee AF-809

Aesfee AF-809 Electric Shaver User Manual

1. INTRODUCTION

Thank you for choosing the Aesfee AF-809 Electric Shaver. This device is designed to provide a comfortable and efficient shaving experience. Please read this manual thoroughly before using the shaver to ensure proper operation, maintenance, and safety.

2. IMPORTANT SAFETY INFORMATION

- Do not immerse the charging cable or adapter in water.
- Keep the shaver away from children.
- Ensure the shaver is fully dry before connecting it to the charger.
- Do not use the shaver if the blades are damaged, as this may cause injury.
- Only use the provided USB charging cable.

3. PRODUCT OVERVIEW

The Aesfee AF-809 Electric Shaver features advanced technology for a close and comfortable shave.

3.1. 3D Floating Rotary Heads

The shaver is equipped with high-performance 3D floating heads that adapt to the contours of your face and neck, ensuring a smooth and close shave.

EFFICIENT 3D FLOATING HEADS

A Smooth and Close Shave Every Time



Ultra Thin
Double-track Cutter Net



Precision Steel Blades



Close and Efficient Shaving
with The Precise Blade Combination



Image: Close-up of the shaver's 3D floating heads, highlighting the ultra-thin double-track cutter net and precision steel blades for efficient shaving.

3.2. Wet and Dry Shaving

This shaver is IPX7 waterproof, allowing for both wet and dry shaving. You can use it with foam or gel, or even in the shower, for a refreshing experience.

Shave Wet or Dry

Dry Shave



Wet Shave with Foam or Gels



Wet Shave in The Shower



Image: Demonstrates the shaver's versatility for dry shaving, wet shaving with foam, and use in the shower.

3.3. Pop-up Trimmer

An integrated pop-up trimmer allows for precise shaping of sideburns and facial hair styles.

POP-UP TRIMMER

Easy Sideburns and Moustache Shaping



Image: The shaver with its pop-up trimmer engaged, illustrating its function for detailed grooming.

3.4. LCD Battery Indicator and Reminders

The shaver features an LCD display that shows the remaining shaving time in minutes. It also provides cleaning and blocking reminders to help maintain optimal performance.



Image: The shaver in use, with its LCD screen visible, indicating battery life and other operational statuses.

3.5. USB Cable Charging

The shaver charges conveniently via a USB cable, allowing you to power it from various sources like wall chargers, car chargers, power banks, or computers.

USB CABLE FOR CHARGING

One hour fast charge up to 60 minutes of shaving time

Any Standard DC 5V Output to Charge



Wall Charger



Car Charger



Powerbank



Laptop/PC



*Built-in 800mAh
lithium battery*

Image: Illustrates the USB charging capability of the shaver, compatible with multiple power sources.

4. SETUP

4.1. Initial Charging

1. Connect the provided USB charging cable to the shaver's charging port.
2. Plug the other end of the USB cable into a compatible 5V/1A USB power source (e.g., a wall adapter, computer USB port, or power bank).
3. The LCD display will show the charging status. A full charge takes approximately 1 hour and provides up to 60 minutes of shaving time.

4.2. Travel Lock Feature

To prevent accidental activation during travel or storage, the shaver includes a travel lock.

- **To enable:** Press and hold the On/Off switch for 3 seconds. The lock icon will appear on the LCD display.
- **To disable:** Press and hold the On/Off switch again for 3 seconds. The lock icon will disappear, and the shaver will be ready for use.

5. OPERATING INSTRUCTIONS

5.1. Basic Shaving

1. Ensure the shaver is charged and unlocked.
2. Press the On/Off switch to turn on the shaver.
3. For a dry shave, move the shaver in small, circular motions over your skin.
4. For a wet shave, apply shaving foam or gel to your face before shaving. Move the shaver in small, circular motions.
5. After shaving, press the On/Off switch to turn off the shaver.

5.2. Using the Pop-up Trimmer

1. Turn on the shaver.
2. Slide the trimmer release button (usually located on the back or side of the shaver) upwards to extend the pop-up trimmer.
3. Use the trimmer to shape sideburns, moustaches, or trim longer hairs before shaving.
4. Once finished, push the trimmer back into its housing until it clicks into place.

6. MAINTENANCE

6.1. Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. The shaver is IPX7 waterproof and can be rinsed under running water.

1. Turn off the shaver and disconnect it from the charger.
2. Press the release button to open the shaver head unit.
3. Rinse the shaver head unit thoroughly under warm running water. You can also use the included cleaning brush to remove stubborn hair particles.
4. Shake off excess water and allow the shaver head unit to air dry completely before closing it.
5. Periodically, you may wish to remove the individual rotary blades for a deeper clean. Refer to the diagrams on the shaver head for proper reassembly.

6.2. Storage

Store the shaver in a cool, dry place when not in use. Ensure it is clean and dry before storing. Use the protective cap to cover the shaver heads.

7. TROUBLESHOOTING

If you encounter any issues with your Aesfee AF-809 Electric Shaver, please refer to the following table:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted; Travel lock is engaged.	Charge the shaver; Disable the travel lock by pressing and holding the On/Off button for 3 seconds.

Problem	Possible Cause	Solution
Poor shaving performance.	Shaver heads are dirty or worn; Battery is low.	Clean the shaver heads thoroughly; Charge the shaver; Consider replacing shaver heads if they are old.
Shaver is not charging.	USB cable or adapter is faulty; Shaver is not properly connected.	Check the USB cable and adapter; Ensure the cable is securely connected to both the shaver and the power source.
Cleaning reminder icon is on.	Shaver heads need cleaning.	Clean the shaver heads as described in Section 6.1.

8. SPECIFICATIONS

Feature	Detail
Model Number	AF-809
Battery Capacity	800mAh Lithium Ion
Charge Time	1 hour
Running Time	60 minutes
Input	DC 5V/1A
Operating Temperature	0 ~ 40 degrees Celsius
Waterproof Rating	IPX7 (Whole body washable)
Special Features	Rechargeable, Fast Charging, Cordless, Waterproof
Included Components	Shaver, Battery (included), Charger (USB cable), Cleaning Brush
Item Weight	286 Grams

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Aesfee customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.