

OZMI Kids Digital Camera

OZMI Kids Digital Camera Instruction Manual

Model: Kids Digital Camera

Brand: OZMI

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your new OZMI Kids Digital Camera. This camera is designed for children aged 3 and up, offering features such as 20MP photo capture, 1080P video recording, and built-in games. It comes with a 32GB SD card for ample storage and is constructed from durable, shockproof materials.



Image 1.1: Overview of the OZMI Kids Digital Camera and its key functions.

2. PACKAGE CONTENTS

Please ensure all items are present in the package:

- OZMI Kids Digital Camera
- 32GB Micro SD Card (pre-installed)
- USB Charging Cable
- Lanyard
- User Manual
- Colorful Stickers



Image 2.1: Included accessories with the camera.

3. SETUP

3.1 Charging the Camera

The camera has a built-in 850mAh rechargeable battery. Connect the camera to a USB power source using the provided USB cable. Charging typically takes 1-2 hours. A full charge provides 2-4 hours of operation.

3.2 Inserting/Removing the SD Card

The 32GB Micro SD card is typically pre-installed. To remove or insert the card, locate the SD card slot on the side of the camera. Gently push the card until it clicks into place for insertion, or push again to eject it. Ensure the camera is powered off before inserting or removing the SD card.

USB Charging

Support connect to computer



If it freezes, please reset it with a thin pin(not included).



Mini camera easy to carry

Image 3.1: USB Charging and SD Card Slot.

4. OPERATING INSTRUCTIONS

4.1 Camera Layout and Controls

Familiarize yourself with the camera's buttons and ports:



Button Instruction

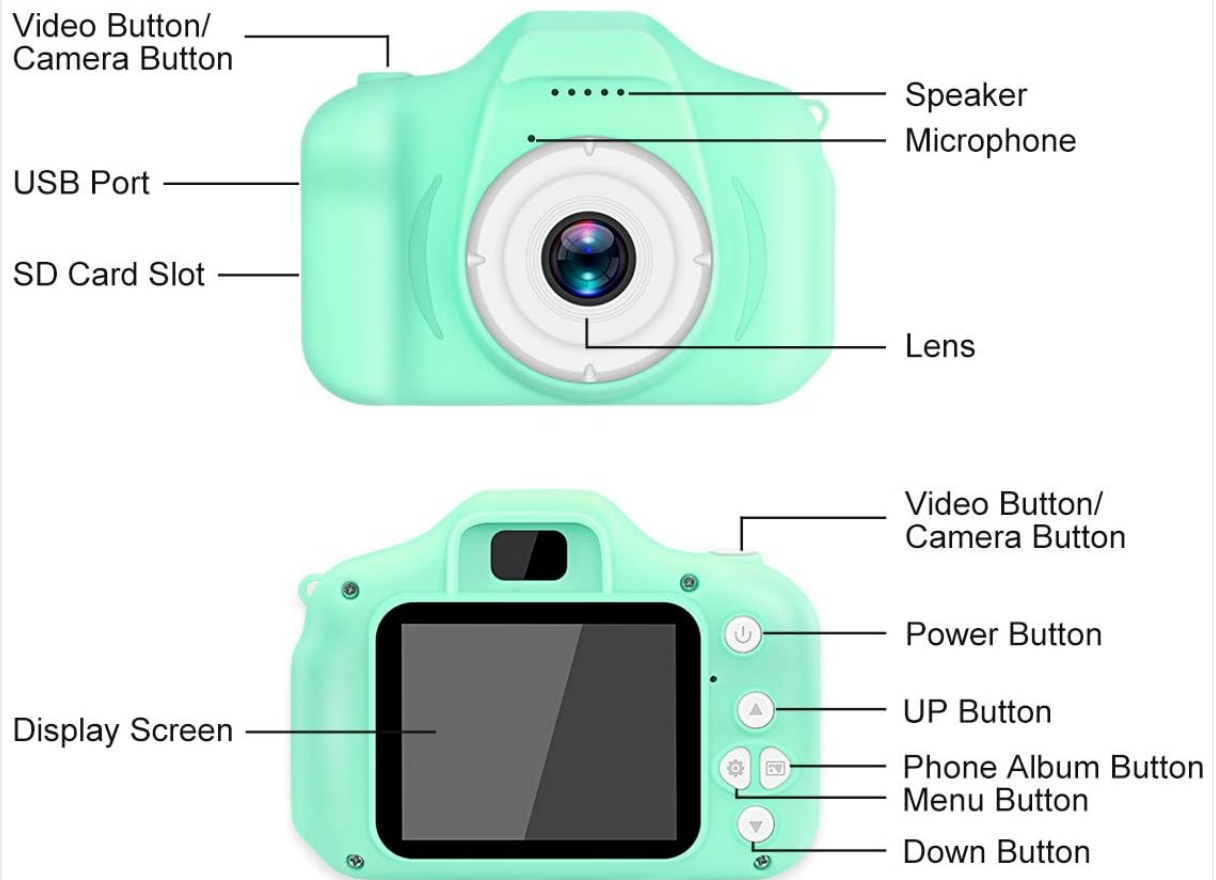


Image 4.1: Front and back view of the camera with labeled buttons and ports.

- **Power Button:** Press and hold to turn the camera on or off.
- **Video Button/Camera Button:** Press to switch between photo and video modes, or to capture a photo/start/stop video recording.
- **UP/DOWN Buttons:** Navigate through menus or zoom in/out in camera mode.
- **Phone Album Button/Menu Button:** Access the photo/video album or camera settings menu.

4.2 Taking Photos and Recording Videos

From the main screen, select the camera icon for photos or the video camera icon for videos. Press the shutter button to capture. The camera features 20 million pixels for photos and 1080P resolution for videos.



OZMI Camera

Other Camera



20 Mega Pixels



8 Mega Pixels

Image 4.2: Photo clarity comparison.

4.3 Selfie Function and Timed Shooting

The camera includes a dual front and rear camera for selfies. Activate the selfie function through the menu. Timed shooting options (1, 3, or 5 seconds) are available for self-portraits or group photos.

**This dual camera will bring
you an excellent photo grapher**

**2.5*3.4*1.9in
Easy to carry**



Image 4.3: Dual camera for selfies and portability.

4.4 Games

The camera includes three pre-installed games: Snaker, PushBox, and Tetris. Navigate to the game icon on the main screen to select and play.



MORE FUN THAN EVER

Three funny games make
OZMI digital kids camera perfect.



Image 4.4: Built-in games for entertainment.

4.5 Viewing and Deleting Media

Access your captured photos and videos through the playback icon on the main screen. Use the navigation buttons to browse. To delete specific pictures or videos, navigate to the desired media and press the UP button. To delete all media, press the DOWN button when prompted.

Your browser does not support the video tag.

Video 4.5.1: Official OZMI video demonstrating how to delete pictures and videos from the camera.

Multiple Funny Frames



Image 4.5: Multiple fun frames for photos.

5. MAINTENANCE

The camera is made of high-grade, eco-friendly, non-toxic, and shockproof materials designed to withstand drops. To clean, wipe with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

To conserve battery life, the camera features an automatic shutdown function, which can be set to 1, 3, or 5 minutes of inactivity.

6. TROUBLESHOOTING

- **Camera is frozen:** If the camera becomes unresponsive, use a thin pin to press the reset button located near the SD card slot.
- **Poor photo quality:** Ensure adequate lighting conditions. The camera performs best in well-lit environments.
- **Video playback issues:** If videos are not playing correctly on a computer, they may need to be converted to a compatible format like MP4.

7. SPECIFICATIONS

Photo Resolution	Up to 20 Million Pixels
Video Resolution	1080P (1920x1080)
Screen	2-inch IPS Screen
Digital Zoom	8x
Battery Capacity	850mAh Lithium Ion
Charging Time	1-2 hours
Operating Time	2-4 hours
Storage	32GB Micro SD Card (included)
Recommended Age	3 years and up
Dimensions	5.55 x 3.54 x 2.24 inches
Weight	5.9 ounces

8. WARRANTY AND SUPPORT

This OZMI product is manufactured with quality and care. For any product-related inquiries or support, please contact OZMI customer service. Specific warranty details may vary; please refer to the product packaging or the official OZMI website for the most current warranty information.

Your browser does not support the video tag.

Video 8.1.1: Official OZMI video showcasing the camera's features and suitability as a gift for children.