

[Manuals.plus](#) /

> [Bestway](#) /

> Bestway Flowclear Filter Pump User Manual

Bestway 1058389XXX21

Bestway Flowclear Filter Pump User Manual

Model: 1058389XXX21

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bestway Flowclear Filter Pump. Please read this manual thoroughly before installation and use, and keep it for future reference. This filter pump is designed to keep your pool water clean and clear by circulating and filtering the water.



Image: The Bestway Flowclear Filter Pump, a grey cylindrical unit with a dark base, featuring two hose connections and a power cord.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when installing and using this electrical equipment.

- **Adult Supervision:** This product should only be operated under competent adult supervision.
- **Electrical Requirements:** Ensure the pump is connected to a properly grounded outlet. The pump operates on 240 Volts. Do not use extension cords.
- **Water and Electricity:** Never operate the pump when people are in the pool. Keep the pump away from the pool edge to prevent accidental submersion.
- **Maintenance Safety:** Always unplug the pump from the power source before performing any maintenance, cleaning, or servicing.
- **Damage Inspection:** Regularly inspect the power cord and pump for any signs of damage. Do not use if damaged.

SETUP

Follow these steps to properly set up your Bestway Flowclear Filter Pump:

1. **Positioning:** Place the filter pump on a solid, level surface, at least 2 meters (6.5 feet) away from the pool. Ensure it is lower than the pool's water level.
2. **Hose Connection:** Connect the two hoses to the pump. One hose connects to the pump's inlet (marked with an arrow pointing towards the pump) and the pool's outlet valve. The other hose connects to the pump's outlet (marked with an arrow pointing away from the pump) and the pool's inlet valve. Use the provided adapters for 1.25"/32mm or 1.5"/38mm threaded valves.



Image: Hands connecting a white corrugated hose to the grey filter pump's inlet/outlet.

3. **Secure Connections:** Tighten all hose clamps to ensure a watertight seal.
4. **Air Purge:** Open the air purge valve on top of the filter housing. Once water starts flowing out, close the valve. This removes air from the system.
5. **Power Connection:** Plug the pump into a grounded 240V electrical outlet. Do not turn on the pump until all connections are secure and the pump is primed with water.



Image: The filter pump set up on green grass, connected to an above-ground pool with white hoses.

OPERATION

Once the pump is set up and primed, you can begin operation:

- **Starting the Pump:** Turn on the power switch. The pump will begin circulating water.
- **Filtration Cycle:** Run the pump for several hours each day to ensure proper water filtration. The recommended run time depends on pool size and usage. For pools with a capacity of 1,100 to 31,800 liters, this pump (5,678 L/h or 1500 gal/h flow rate) is highly effective.
- **Monitoring:** Periodically check the water clarity. If the water remains cloudy, increase the filtration time or check the filter cartridge.

MAINTENANCE

Regular maintenance is crucial for the longevity and efficiency of your filter pump:

- **Filter Cartridge Cleaning/Replacement:** The filter cartridge (Type III, ref. 58012) should be cleaned every few days and replaced every 2-4 weeks, depending on pool usage and water quality.
- **Steps for Cartridge Replacement:**
 - a. Unplug the pump from the power source.
 - b. Close the inlet and outlet valves of the pool to prevent water flow.
 - c. Unscrew the filter housing cap.
 - d. Remove the old filter cartridge.
 - e. Rinse the cartridge with a garden hose if cleaning, or insert a new one.
 - f. Replace the filter housing cap and tighten securely.
 - g. Open the pool valves and plug in the pump.



Image: A man kneeling, removing a blue and white filter cartridge from the top of the filter pump.



Image: Two hands securing the black lid onto the top of the grey filter pump.

- **Winterization:** Before winter, drain the pump and hoses completely. Store the pump in a dry, frost-free location.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Pump not starting	No power; clogged impeller; airlock	Check power connection; unplug and clear impeller; open air purge valve to release air.
Low water flow	Dirty filter cartridge; clogged hoses; air in system	Clean or replace filter cartridge; check hoses for blockages; purge air from pump.
Water leaking from connections	Loose hose clamps; worn O-rings	Tighten hose clamps; inspect and replace O-rings if necessary.
Unusual noise from pump	Air in system; debris in impeller; pump not level	Purge air; unplug and clear impeller; ensure pump is on a stable, level surface.

SPECIFICATIONS

Key technical specifications for the Bestway Flowclear Filter Pump:

Feature	Specification
Model Number	1058389XXX21
Pump Water Flow Rate	5,678 L/h (1500 gal/h)
Voltage	240 Volts
Power Source	AC, AC/DC
Item Weight	5.88 Kilograms (12.94 pounds)
Product Dimensions	13.78 x 8.07 x 12.01 inches
Compatible Cartridge	58012 (Type III)
Compatible Valve Sizes	1.25"/32mm (with adapters), 1.5"/38mm (threaded valves)
Recommended Pool Capacity	1,100 to 31,800 liters
Material	Plastic
Color	Multicoloured

WARRANTY AND SUPPORT

For product support, troubleshooting assistance, or information regarding warranty claims, please contact Bestway customer service. Keep your purchase receipt as proof of purchase.

- **Protection Plans:** Additional protection plans may be available for purchase, offering extended coverage beyond the standard manufacturer's warranty. Please refer to your retailer for details on available 3-Year or 4-Year Protection Plans.
- **Contact Information:** Visit the official Bestway website or refer to the contact details provided with your product packaging for direct support.

