

DICKIE TOYS 203716015008

DICKIE TOYS Rescue Station Instruction Manual

Model: 203716015008

Brand: DICKIE TOYS

INTRODUCTION

The DICKIE TOYS Rescue Station is an interactive playset designed for children aged 3 years and up. This comprehensive set includes a rescue station, a police car, a fire engine, and an ambulance. It features light and sound effects, a functional microphone with a loudspeaker, and individual garages for each vehicle. This manual provides detailed instructions for setup, operation, and maintenance to ensure a safe and enjoyable play experience.

WHAT'S INCLUDED

- 1 x Rescue Station Playset
- 1 x Police Car
- 1 x Fire Engine
- 1 x Ambulance
- Batteries (pre-installed or included for initial use)

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure all listed items are present. This product requires no assembly.

2. Battery Installation (for Light and Sound Features)

The Rescue Station and individual vehicles require batteries for their light and sound functions. Batteries are typically included for initial use. To replace batteries:

1. Locate the battery compartment on the underside of the Rescue Station and each vehicle.

2. Using a small Phillips screwdriver, open the battery compartment cover.
3. Insert the required LR44 button cell batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover with the screw.

Note: The vehicles also feature friction-powered movement, which does not require batteries.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power switch on the Rescue Station. Slide the switch to the 'ON' position to activate the station's electronic features. Slide to 'OFF' when not in use to conserve battery life.

2. Light and Sound Effects

Press the various buttons on the top of the Rescue Station to activate different light and sound effects, including sirens and radio chatter. Each button may trigger a unique sound or light pattern.



Image: Hand pressing a button on the top of the Rescue Station, activating flashing lights.

3. Microphone Function

The Rescue Station is equipped with a wired microphone. To use:

1. Hold the microphone to your mouth.
2. Press and hold the red button on the side of the microphone.
3. Speak into the microphone. Your voice will be amplified through the station's loudspeaker.

4. Vehicle Ejection

Each garage bay has a corresponding button on the station's control panel. Pressing these buttons will automatically open the garage door and eject the vehicle stored inside, simulating a rapid deployment for rescue missions.

Your browser does not support the video tag.

Video: Demonstrates the Rescue Station's features, including power switch, music, lighting, walkie-talkie, and vehicle ejection from garage bays.

5. Vehicle Operation

The included police car, fire engine, and ambulance are free-wheeling and friction-powered. Simply push them forward or backward to make them move. Some vehicles may also have individual light and sound buttons on their roofs.



Image: Close-up of the included police car.



Image: Close-up of the included fire engine.



Image: Close-up of the included ambulance.

1. Cleaning

Wipe the Rescue Station and vehicles with a soft, damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.

2. Battery Care

Remove batteries from the Rescue Station and vehicles if they will not be used for an extended period. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

1. No Sound or Lights

- Ensure the power switch is in the 'ON' position.
- Check if the batteries are correctly installed with the proper polarity.
- Replace old or depleted batteries with new LR44 button cell batteries.

2. Microphone Not Working

- Ensure the microphone cable is securely plugged into the Rescue Station.
- Press and hold the red button on the microphone while speaking.

SPECIFICATIONS

Product Dimensions	6.5 x 12.2 x 8.65 inches
Item Weight	2.2 pounds
Model Number	203716015008
Recommended Age	3 years and up
Battery Type	LR44 Button Cell (for lights and sounds)

SAFETY INFORMATION

- Not suitable for children under 3 years due to small parts.
- Adult supervision is recommended during play.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your DICKIE TOYS Rescue Station, please contact the manufacturer directly. Please retain your proof of purchase for warranty claims.

Your browser does not support the video tag.

Video: A detailed overview of the SOS Station, showcasing its vehicles, microphone, and various light and sound functions.

