

[Manuals.plus](#) /

› [Midea](#) /

› Midea 7KG Front Load Washing Machine MFN70 User Manual

Midea MFN70

Midea 7KG Front Load Washing Machine MFN70 User Manual

Model: MFN70 | Brand: Midea

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Midea 7KG Front Load Washing Machine, model MFN70. Please read this manual thoroughly before using the appliance and retain it for future reference.

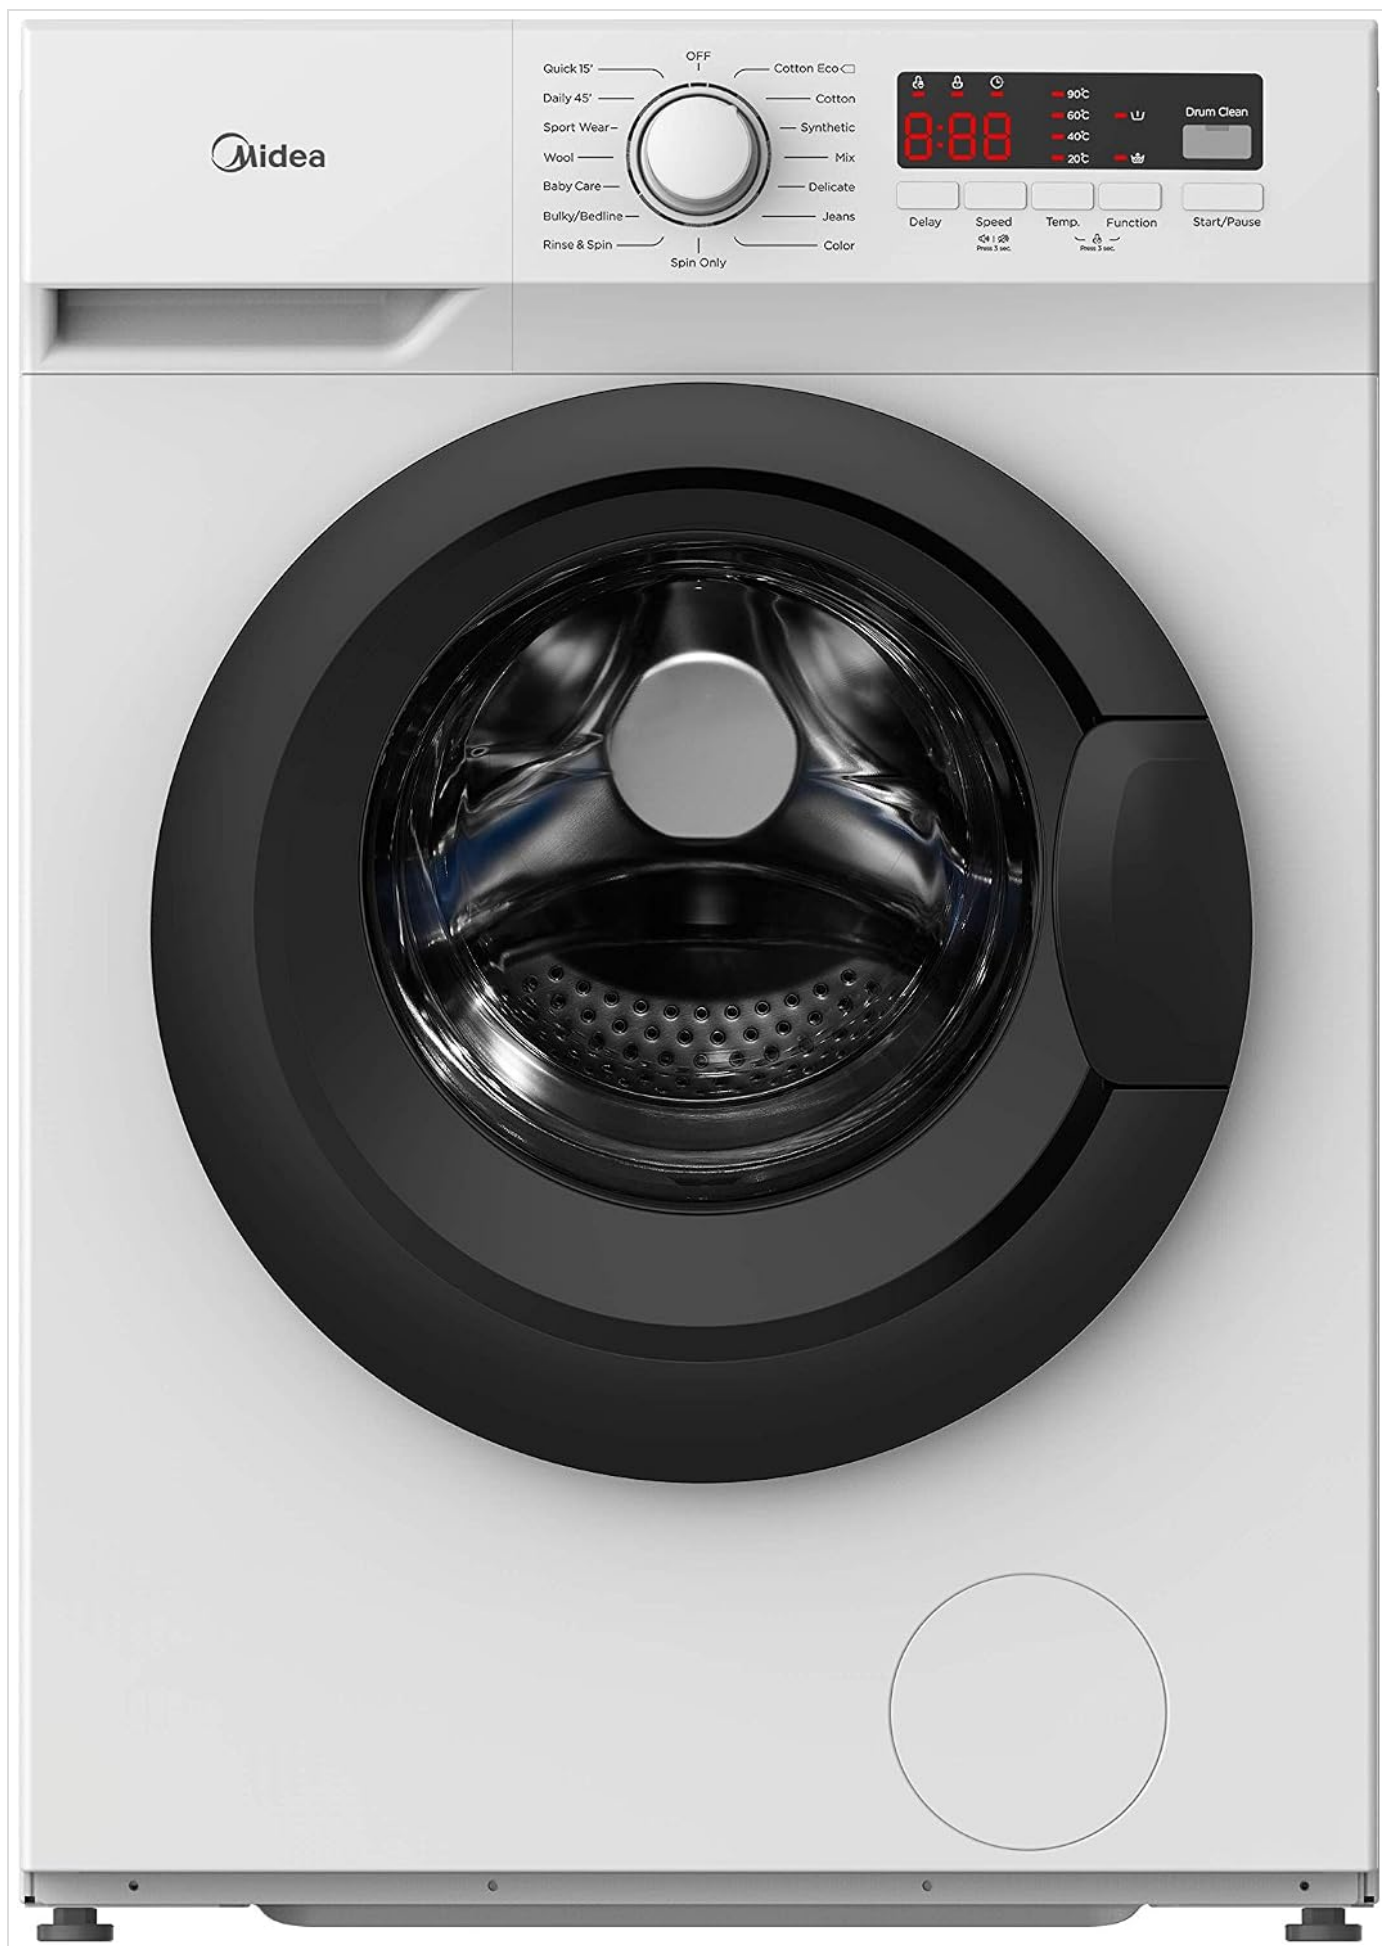 


Figure 1: Front view of the Midea 7KG Front Load Washing Machine, model MFN70.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation. The Child Lock feature can be activated to prevent accidental operation.
- Do not wash items that are soiled with flammable liquids.
- Always unplug the appliance before cleaning or performing maintenance.

SETUP AND INSTALLATION

Unpacking and Transport Bolt Removal

 
Before using the washing machine, it is crucial to remove the transport bolts. These bolts secure the drum during transit and must be removed to prevent vibration and damage during operation.

1. Locate the four transport bolts at the rear of the machine.
2. Using a spanner, loosen and remove all four bolts.
3. Stop the holes with the provided cover caps.
4. Retain the transport bolts and spanner for future use, especially if you need to move the appliance again.

Remove The Transport Bolts

Please take the following steps to avoid vibration.

- **Loosen and remove** 4 bolts with spanner.
- **Stop** the holes with Cover Caps.
- **Keep** the bolts properly for future use.

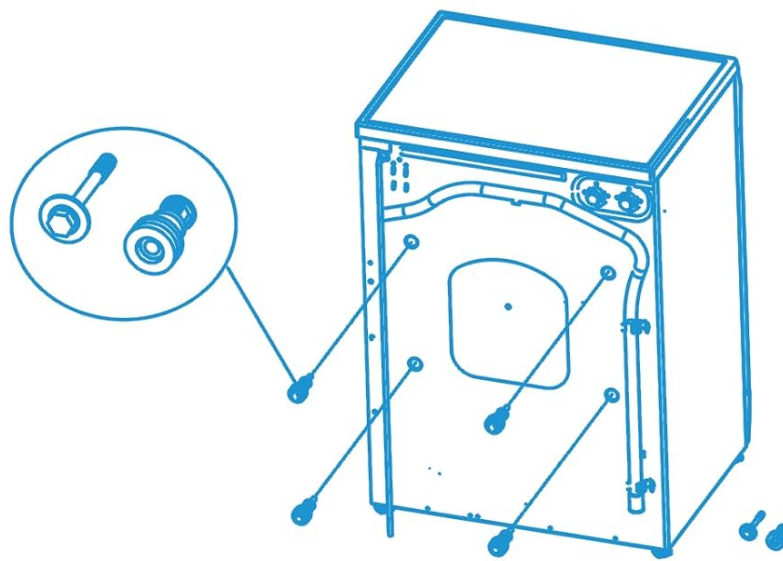

* You'll need the transport bolts again if you move the product, so make sure keep them in a safe place.

Figure 2: Illustration of transport bolt removal process. Ensure all four bolts are removed before operation.

Leveling the Appliance

Proper leveling is essential to prevent excessive vibration and noise during operation. Adjust the adjustable feet at the bottom of the machine until it is stable and level on the floor. Use a spirit level to verify.

Water and Power Connection

- Connect the water inlet hose to a cold water tap and to the designated inlet on the washing machine. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable drain or sink, ensuring it is securely fixed and not kinked.
- Plug the power cord into a grounded electrical outlet (240 Volts, 2050 Watts).

OPERATING INSTRUCTIONS

Control Panel Overview

CONVENIENT RANGE OF PROGRAMS TO SUIT DIFFERENT FABRICS



15 programs



Quick Wash



Hygiene Pro



Figure 3: The washing machine's control panel features a program dial, digital LED display, and function buttons.

Loading Laundry

Open the front load door (480mm Big Door) and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely.

Adding Detergent and Softener

Add appropriate amounts of detergent and fabric softener to their respective compartments in the dispenser drawer. Refer to detergent packaging for recommended dosages.

Program Selection

The MFN70 offers 15 pre-set programs to suit various fabric types and washing needs. Turn the program dial to select your desired cycle.

- **Quick Wash (15 Min):** Ideal for lightly soiled items or when you need clothes cleaned quickly.
- **Hygiene Pro:** Activates a self-clean function during the wash cycle for enhanced hygiene.

- **Baby Care:** Increases water inflow during rinsing stages to thoroughly remove detergent residue from baby clothes.
- **Water Magic Cube:** Utilizes a unique inner water flow to simulate traditional hand-wash methods for effective cleaning.
- Other standard cycles include Cotton, Synthetics, Wool, Delicates, and more.

Additional Functions

- **Delay Start:** Set a delayed start time for your wash cycle, allowing the machine to begin operation at a more convenient time.
- **Child Lock:** Press and hold the designated buttons (refer to control panel diagram) to activate Child Lock. This disables all buttons except the power button, preventing accidental changes to settings.
- **Spin Speed:** Adjust the spin speed up to 1400 RPM for optimal water extraction.



Figure 4: The MFN70 features a Child Lock and Baby Care function for enhanced safety and hygiene.

Starting a Wash Cycle

After selecting the program and any desired functions, press the Start/Pause button to begin the wash cycle. The digital

LED display will show the remaining time.

MAINTENANCE AND CARE

Drum Clean Function

The MFN70 includes a Drum Clean option and a Drum Clean Reminder Function. The indicator will alert you when it's time to run a drum cleaning cycle. This self-clean function helps maintain hygiene and prevents odor buildup.

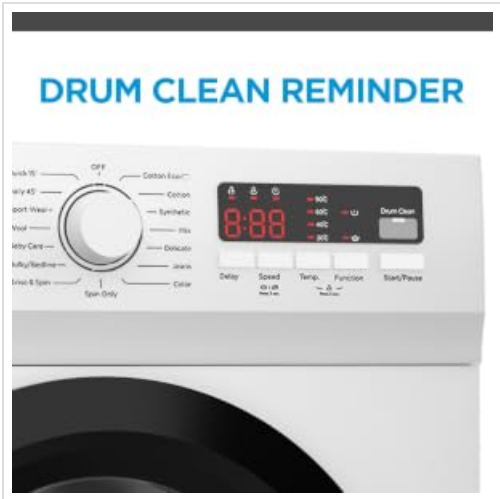 


Figure 5: The Drum Clean Reminder indicates when a cleaning cycle is recommended.

Cleaning the Detergent Dispenser

Regularly clean the detergent dispenser drawer to remove any residue buildup. Pull out the drawer, rinse it under warm water, and use a brush if necessary. Dry thoroughly before reinserting.

Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

Filter Cleaning

Periodically check and clean the drain pump filter, usually located at the bottom front of the machine. Refer to the full user manual for detailed instructions on accessing and cleaning this filter.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is securely latched; Select a wash program and press Start.
Excessive vibration or noise	Transport bolts not removed; Machine not level; Uneven load.	Ensure all transport bolts are removed; Adjust leveling feet; Redistribute laundry evenly in the drum.

Problem	Possible Cause	Solution
Water leakage	Hoses not connected tightly; Drain hose kinked or blocked; Detergent overdose.	Check and tighten all hose connections; Clear any kinks or blockages in the drain hose; Use recommended detergent amount.
Clothes not clean	Incorrect program selected; Insufficient detergent; Overloading.	Select appropriate wash program; Use correct detergent dosage; Do not overload the machine.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Midea
Model	MFN70
Type	Front Load Washing Machine
Capacity	7 Kilograms
Max Spin Speed	1400 RPM
Number of Programs	15 Pre-set Programs
Control Console	Push Button with Digital LED Display
Product Dimensions (D x W x H)	49.5 x 59.5 x 85 cm
Item Weight	59 Kilograms
Voltage	240 Volts
Wattage	2050 Watts
Annual Energy Consumption	97 Kilowatt Hours Per Year
Special Features	Drum Clean option, 480mm Big Door, Child Lock, Baby Care, Water Magic Cube, Delay Start
Color	White
Material Type	Fiberglass



POWERFUL AND DURABLE MOTOR



1400 RPM



10 Years Motor Warranty



Figure 6: The MFN70 features a powerful motor with a 10-year warranty and a maximum spin speed of 1400 RPM.

WARRANTY AND SUPPORT

Warranty Information

The Midea 7KG Front Load Washing Machine, model MFN70, comes with a **10-year motor warranty**. For specific terms and conditions, please refer to the warranty card included with your purchase or contact Midea customer service.

Customer Support

For technical assistance, service requests, or inquiries regarding your Midea washing machine, please contact Midea customer support. Contact details can typically be found on the Midea official website or in the documentation provided with your appliance.

When contacting support, please have your model number (MFN70) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question