

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ceenwes](#) /

› [Ceenwes Low Noise Pet Clippers Instruction Manual](#)

Ceenwes B08CVGWSS9

Ceenwes Low Noise Pet Clippers Instruction Manual

Model: B08CVGWSS9

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your Ceenwes Low Noise Pet Clippers. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- This appliance is cordless and rechargeable. Exercise caution around electricity and during charging.
- Keep the clippers and all accessories away from water sources. Do not use in wet conditions.
- Always ensure the clipper is turned off before cleaning or performing maintenance.
- If your pet has long or thick hair, it is recommended to use scissors to trim the hair first before using the clippers to prevent snagging and ensure smooth operation.
- Keep out of reach of children and pets when not in use.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- Monitor the clipper for overheating during prolonged use. If it becomes excessively hot, turn it off and allow it to cool before resuming.

PRODUCT OVERVIEW

The Ceenwes Pet Clippers are designed for efficient and quiet pet grooming. The complete kit includes:

- 1 x Pet Clipper (with included battery)
- 1 x AC Power Adapter
- 1 x Cleaning Brush
- 4 x Comb Attachments (3mm, 6mm, 9mm, 12mm)
- 1 x Stainless Steel Scissor
- 1 x Stainless Steel Comb
- 1 x Nail Clipper
- 1 x Nail File
- 1 x Instruction Manual

Key features include a precision motor for low noise and vibration (approximately 60 dB), a cordless design for ease of use, and a sharp titanium acute-angle blade combined with a ceramic movable blade for effective cutting.



Image 1: Complete Ceenwes Pet Grooming Kit, including the clipper, comb guides, scissors, nail clipper, nail file, cleaning brush, and power adapter.

Image 2: Overview of Ceenwes Professional Pet Clippers highlighting low noise, low vibration, powerful motor, skin-friendly design, ease of trimming, and one-button operation.

SETUP

1. Charging the Clipper

Before first use, fully charge the clipper. Connect the AC power adapter to the clipper and plug it into a standard electrical outlet. Charging for approximately five hours provides up to 70 minutes of cordless use. The clipper can also be used while corded.

2. Blade Adjustment

The fine-tuning knob on the clipper offers five levels of length adjustment (0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm) for precise hair length control.

3. Attaching Guide Combs

Select the desired comb attachment (3mm, 6mm, 9mm, or 12mm) based on the desired hair length. Align the comb with the clipper blade and snap it into place securely. Ensure it is firmly attached before use.



Image 3: Visual guide for disassembling and assembling the clipper blade for cleaning or replacement. To disassemble, adjust the gear to 2.0 and push the blade down. To assemble, align the blade with the slot, push it in the direction of the arrow until it clicks, and then snap the guide comb into place.

OPERATING INSTRUCTIONS

Follow these steps for effective pet grooming:

- 1. Prepare Your Pet:** Ensure your pet's hair is clean and dry. For pets with long or thick hair, use the included stainless steel scissors to trim any matted or excessively long hair before using the clippers.
- 2. Comb the Hair:** Use the stainless steel comb to remove tangles and ensure the hair is smooth and ready for clipping.
- 3. Select Blade Length:** Choose the appropriate guide comb and/or adjust the fine-tuning knob on the clipper for the desired hair length.
- 4. Begin Clipping:** Turn on the clipper. Hold the clipper firmly and move it gently against the direction of hair growth. Use smooth, even strokes.
- 5. Monitor Your Pet:** Pay attention to your pet's comfort level. The low noise and vibration design helps reduce stress, but always ensure your pet remains calm.
- 6. Clean During Use:** Periodically use the cleaning brush to remove accumulated hair from the blade

during grooming to maintain cutting efficiency.



Image 4: Illustrated steps for grooming your pet: 1. Bathing first to keep hair clean and dry. 2. Working with a stainless steel comb to detangle. 3. Using scissors to trim knotted hair. 4. Shaving dog hair with Ceenwes grooming clippers.



Image 5: The Ceenwes Pet Clipper demonstrating both cordless operation and the option to use it with the power cord attached.



Image 6: A dog and cat sleeping, symbolizing the low noise and low vibration design of the clippers, which helps pets remain calm during grooming.

Low Noise & Low Vibration

Make Your Pets Enjoy Grooming



Image 7: Display of various grooming tools included in the kit, such as 3mm, 6mm, 9mm, 12mm comb guides, stainless steel scissors, a stainless steel comb, a nail clipper, and a nail file, catering to different pet grooming needs.

MAINTENANCE

1. Cleaning the Blade

After each use, turn off the clipper and remove the guide comb. Use the provided cleaning brush to remove any hair trapped in the blade. For thorough cleaning, you can disassemble the blade as shown in Image 3.

2. Oiling the Blade

Regularly apply a few drops of lubricating oil (pet clipper oil, not included) to the blades to maintain their sharpness and ensure smooth operation. Apply oil to the moving parts of the blade after cleaning.

3. Storage

Store the clipper and all accessories in the provided storage case in a dry, cool place, away from direct sunlight and moisture. Ensure the clipper is fully charged before storing for extended periods to prolong battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on	Low battery; Power switch off	Charge the clipper; Ensure power switch is in the 'on' position
Clipper not cutting effectively	Blades are dull or clogged with hair; Pet's hair is matted or too long	Clean and oil the blades; Trim matted/long hair with scissors first; Consider blade replacement if dull
Clipper is overheating	Prolonged use; Blades are dirty or not lubricated	Turn off and allow to cool; Clean and oil the blades; Take breaks during long grooming sessions
Excessive noise or vibration	Blades are loose or damaged; Internal issue	Check blade assembly; Contact customer support if problem persists

SPECIFICATIONS

- **Model:** B08CVGWSS9
- **Brand:** Ceenwes
- **Power Source:** Battery Powered (Cordless/Corded operation)
- **Battery Type:** 1 Lithium Ion battery (included)
- **Charging Time:** Approximately 5 hours
- **Operating Time:** Up to 70 minutes (cordless)
- **Blade Material:** Titanium acute-angle blade with ceramic movable blade
- **Adjustable Blade Length:** 0.8mm - 2.0mm (5 levels)
- **Comb Attachments:** 3mm, 6mm, 9mm, 12mm
- **Noise Level:** Approximately 60 dB
- **Item Weight:** 1.3 pounds
- **Package Dimensions:** 8.27 x 5.94 x 3.03 inches

WARRANTY AND SUPPORT

Ceenwes offers a 2-year after-sale service for this pet trimmer. If you encounter any issues or require assistance with your product, please contact Ceenwes customer support. Refer to the product packaging or the official Ceenwes website for contact information.

For more information or to explore other Ceenwes products, visit the [Ceenwes Store on Amazon](#).