

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Wireless Express](#) /

> [Wireless Express Sing-Along Bling Bluetooth Karaoke Microphone \(Pink Bling\) User Manual](#)

Wireless Express WE-BLING-MIC

Wireless Express Sing-Along Bling Bluetooth Karaoke Microphone (Pink Bling) User Manual

Model: WE-BLING-MIC

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance
Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

INTRODUCTION

Thank you for choosing the Wireless Express Sing-Along Bling Bluetooth Karaoke Microphone. This all-in-one device combines a microphone and a Bluetooth stereo speaker, designed for portable entertainment. This manual provides essential information for safe and efficient use of your new karaoke microphone.







Image: The Sing-Along Bling Bluetooth Karaoke Microphone in Pink Bling, showcasing its sparkling design and integrated speaker.

SETUP

1. Charging the Microphone

Before first use, fully charge the microphone. Connect the included charging cable to the Micro USB port at the bottom of the microphone and to a compatible USB power source. The LED indicator will show charging status.

2. Power On/Off

Press and hold the Power button (M/POWER) on the control panel to turn the microphone on or off. A voice prompt will indicate the power status and Bluetooth pairing mode.

3. Bluetooth Pairing

1. Turn on the microphone. It will automatically enter Bluetooth pairing mode, indicated by a voice prompt.
2. Enable Bluetooth on your smartphone, tablet, or computer.
3. Search for available devices and select "Sing-Along Bling" from the list.
4. Once connected, a voice prompt will confirm successful pairing.

4. Using SD Card and Earphone Jack

- **SD Card Slot:** Insert a compatible SD card into the designated slot at the bottom of the microphone to play music directly from the card.
- **Earphone Jack:** Connect earphones to the 3.5mm earphone jack for private listening.

Karaoke

MICROPHONE, WIRELESS SPEAKER
& COLOR CHANGING LIGHTS



Blink Edition



Bluetooth



Voice Changer



LED Lights



Skip and Play
back tracks



Portable



Rechargeable Battery



Charging Cord included



Image: A detailed view of the microphone's control buttons, including mic volume, echo volume, power, track controls, and LED button.

OPERATING INSTRUCTIONS

1. Volume Control

- **Microphone Volume:** Use the "MIC VOL +/-" buttons to adjust your voice volume.
- **Echo Volume:** Use the "ECHO VOL +/-" buttons to add or reduce the echo effect for your voice.
- **Music Volume:** Use the "V +/-" buttons to adjust the volume of the connected music source.

2. LED Lights

Press the "LED" button to cycle through different LED light patterns or to turn the lights off. The integrated LED lights add a dynamic visual element to your performance.

3. Track Control

- **Play/Pause:** Press the "PLAY/PAUSE" button to start or pause music playback.
- **Skip Tracks:** Use the "M/V+" and "M/V-" buttons to skip to the next or previous track.

4. Voice Changer (V-CTR)

Press the "V-CTR" button to activate the voice changer feature. Cycle through different voice effects to add a fun twist to your singing.

5. Karaoke App Compatibility

The microphone is compatible with all karaoke applications on Android and Apple operating systems. Simply connect via Bluetooth and use your preferred app for lyrics and backing tracks.



Image: The Sing-Along Bling microphone with its vibrant LED lights illuminated, demonstrating its visual appeal during use.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the microphone. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

- **Handle with Care:** The microphone features a decorative bling design. Avoid dropping or subjecting the device to strong impacts to prevent damage to the rhinestones.

TROUBLESHOOTING

- **No Sound from Microphone:**

- Ensure the microphone is powered on.
- Check the microphone volume (MIC VOL) and increase if necessary.
- Verify Bluetooth connection to your device.

- **Bluetooth Connection Issues:**

- Make sure the microphone is in pairing mode.
- Turn off and on your device's Bluetooth, then try re-pairing.
- Ensure the microphone is within the effective Bluetooth range (typically 10 meters).

- **LED Lights Not Working:**

- Press the "LED" button to ensure they are not turned off or stuck on a specific pattern.
- Check battery level; low battery might affect LED functionality.

- **Poor Sound Quality:**

- Ensure the microphone is fully charged.
- Adjust the echo volume (ECHO VOL) to your preference.
- Move closer to the microphone for clearer voice pickup.

SPECIFICATIONS

Brand	Wireless Express
Model Number	WE-BLING-MIC
Microphone Form Factor	Handheld
Product Dimensions (L x W x H)	4 x 4 x 11 inches
Item Weight	1 Pound
Power Source	Corded Electric (Rechargeable Lithium Ion Battery)
Material	Plastic
Hardware Platform	PC, Smartphone, Tablet
Connectivity Technology	Bluetooth
Connector Type	Micro USB
Special Feature	Volume Control, Echo Function, LED Lights, Voice Changer
Included Components	Charging Cable

WARRANTY & SUPPORT

Return Policy

This product is eligible for a 30-day refund or replacement return policy from the date of purchase. Please refer to your retailer's specific return guidelines for more details.

Customer Support

For any questions, technical assistance, or support regarding your Wireless Express Sing-Along Bling Bluetooth Karaoke Microphone, please visit the [Wireless Express Store on Amazon](#) or contact their customer service directly.