

[Manuals.plus](#) /

› [Haute Decor](#) /

› Haute Decor 7 Foot Pre-lit Asheville Slim Artificial Fir Christmas Tree User Manual

Haute Decor Asheville Slim

Haute Decor 7 Foot Pre-lit Asheville Slim Artificial Fir Christmas Tree User Manual

Model: Asheville Slim | Brand: Haute Decor

INTRODUCTION

Thank you for choosing the Haute Decor 7 Foot Pre-lit Asheville Slim Artificial Fir Christmas Tree. This manual provides essential instructions for the safe and proper assembly, operation, and care of your new Christmas tree. Please read all instructions carefully before setup and retain this manual for future reference.



Image: The Haute Decor Asheville Slim Christmas Tree, fully decorated and illuminated, showcasing its elegant profile.

Your browser does not support the video tag.

Video: An overview of the Haute Decor 7 Foot Slim Pre-Lit Christmas Tree, highlighting its features and design.

SAFETY INFORMATION

- For indoor use only. Do not use this product outdoors.
- Keep away from heat sources, open flames, and direct sunlight.
- Ensure all electrical connections are secure and the adapter is UL/CUL listed.
- Do not overload electrical outlets.
- Unplug the tree when leaving the house, going to bed, or when not in use for extended periods.
- This product is not a toy. Keep out of reach of children and pets.

PACKAGE CONTENTS

Before assembly, ensure all parts are present:

- Tree Sections (typically 3 sections for a 7-foot tree)
- Folding Metal Stand
- UL/CUL Listed Adapter
- Foot Pedal (for light control)

SETUP INSTRUCTIONS

1. **Assemble the Stand:** Unfold the metal stand and place it on a flat, stable surface. Tighten the eyebolt on the stand to secure the tree trunk.





Image: The artificial Christmas tree with its metal stand, ready for assembly.

2. **Insert Bottom Section:** Carefully insert the bottom section of the tree into the assembled stand. Ensure it is firmly seated and the eyebolt is tightened.
3. **Connect Middle and Top Sections:** Insert the middle section into the bottom section, aligning the poles. Then, insert the top section into the middle section. Ensure all sections are securely connected. The hinged branches will fall into place.
4. **Connect Electrical Plugs:** Locate the electrical plugs between each tree section. Connect them securely. Ensure the collar connecting the plugs is fully tightened.
5. **Shape the Branches (Fluffing):** Begin at the bottom of the tree and work your way up. Gently spread out each branch and individual tip to fill any gaps and create a full, natural appearance. Separate outer branches into a 'Y' or starburst formation. Lift up each branch so you can bend some branches down. This process is crucial for the tree's aesthetic.



Image: Detailed view of the tree's branches, illustrating the PE/PVC tips for a realistic look.

Your browser does not support the video tag.

Video: An instructional guide on how to properly shape and fluff the branches of your Christmas tree for a fuller appearance.

6. **Plug In:** Connect the UL/CUL listed adapter to the tree's main power cord, then plug the adapter into a standard wall outlet.

OPERATING INSTRUCTIONS

Your Haute Decor Christmas tree features pre-installed warm white LED cluster lights and a convenient foot pedal for control.

- **Power On/Off:** Use the included foot pedal to easily turn the lights on or off. Press once to turn on, press again to turn off.
- **Light Function:** The tree is equipped with 1800 warm white low voltage LED cluster lights. These lights are energy-efficient and remain cool to the touch.

MAINTENANCE AND STORAGE

Cleaning

- Before cleaning, ensure the tree is unplugged from the power outlet.

- Wipe branches and lights gently with a soft, dry cloth to remove dust. Do not use liquid cleaners or solvents.

Disassembly and Storage

1. Unplug the tree from the wall outlet and disconnect all internal electrical connections between sections.
2. Remove all ornaments and decorations.
3. Starting from the top, carefully lift and remove each tree section. Gently compress the branches of each section.
4. Disassemble the metal stand.
5. Store the tree sections and stand in their original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not illuminate.	Tree not plugged in. Loose electrical connection between sections. Foot pedal not activated. Damaged adapter or lights.	Ensure the adapter is securely plugged into a working wall outlet. Check all internal electrical connections between tree sections and ensure they are fully tightened. Press the foot pedal to activate the lights. If lights still do not work, contact customer support. Do not attempt to repair damaged wiring or lights yourself.
Tree appears sparse or not full.	Insufficient branch shaping (fluffing).	Refer to the "Shape the Branches (Fluffing)" step in the Setup Instructions. Dedicate time to individually spread out each branch tip to achieve a full appearance.
Tree is unstable.	Stand not fully assembled or tightened. Tree sections not properly seated.	Ensure the metal stand is fully unfolded and the eyebolt is securely tightened around the tree pole. Verify that all tree sections are firmly inserted into each other and into the stand.

SPECIFICATIONS

Feature	Detail
Model	Asheville Slim
Height	7 Feet (84 inches / 213.4 cm)
Diameter	39 inches (99.1 cm)
Weight	20 Pounds (approx. 9.07 kg)
Tips Count	2300 PE/PVC Tips (35% PE / 65% PVC)
Lights Type	Pre-lit with 1800 Warm White LED Cluster Lights
Power Source	UL/CUL Listed Adapter
Included Components	Pre-Lit Christmas Tree, Folding Metal Stand, Foot Pedal

Feature	Detail
Material	Polyethylene, Polyvinyl Chloride
UPC	667233023628



Image: Dimensional diagram of the Asheville Slim tree, indicating its 84-inch height and 39-inch diameter.

WARRANTY INFORMATION

This Haute Decor Christmas tree comes with a **1-Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific details regarding warranty coverage and claims, please refer to the manufacturer's official warranty documentation or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please contact Haute Decor customer support. Contact information can typically be found on the product packaging or the official Haute Decor website.

For more information, you may visit the [Haute Decor Store on Amazon](#).