



[Manuals.plus](#) /

› [Frigidaire](#) /

› Frigidaire 10 Cubic Foot Chest Freezer (Model EFRF1049AMZ6COM) User Manual

## Frigidaire EFRF1049AMZ6COM

# Frigidaire 10 Cubic Foot Chest Freezer (Model EFRF1049AMZ6COM) User Manual

Model: EFRF1049AMZ6COM | Brand: Frigidaire

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Frigidaire 10 Cubic Foot Chest Freezer, Model EFRF1049AMZ6COM. Please read this manual thoroughly before using your appliance and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the freezer is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the freezer before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.

## SETUP AND INSTALLATION

### Unpacking

Carefully remove all packaging materials. Inspect the freezer for any shipping damage. Report any damage to your retailer immediately.

### Location

Place the freezer on a flat, stable surface. Ensure adequate air circulation around the unit. Avoid direct sunlight or heat sources. The unit features two adjustable leveling legs for stability.



Image: Diagram illustrating the product dimensions (Depth: 33.25", Width: 44.25", Height: 27.5").

### Electrical Connection

Connect the freezer to a dedicated 115 Volt, 60 Hz, AC only, 15-amp fused electrical outlet. Do not use extension cords or adapter plugs.

### Initial Operation

After positioning, allow the freezer to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle. Once plugged in, the power-on indicator light will illuminate.



*Image: The Frigidaire 10 Cubic Foot Chest Freezer with its lid open, revealing the spacious interior and a removable wire storage basket.*

## **OPERATING INSTRUCTIONS**

---

### **Temperature Control**

The freezer features an adjustable thermostat with seven temperature settings. Rotate the control knob to the desired setting. A higher number indicates a colder temperature. Start with a medium setting (e.g., 4) and adjust as needed based on your food storage requirements.



*Image: Close-up view of the control panel, showing the adjustable thermostat dial (settings 1-7) and indicator lights for Power (green) and Run (blue).*

### **Loading the Freezer**

Allow the freezer to cool for several hours before loading it with food. The 10 cubic foot capacity provides ample space for various items. Utilize the removable vinyl-coated wire basket for organizing smaller or frequently accessed items.



*Image: The interior of the chest freezer, with the lid open, revealing the removable wire basket containing various frozen food packages.*

## Power-On Indicator Light

A green light indicates that the freezer is receiving power. A blue light indicates the compressor is running to maintain the set temperature.

## MAINTENANCE

---

### Defrosting

This freezer is not frost-free and will require manual defrosting. Defrost when frost accumulation reaches approximately 1/4 inch (6 mm) thick. To defrost:

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in another freezer or cooler.
3. Open the freezer lid and place towels around the base to absorb water.
4. Locate the exterior defrosting drain plug and remove it to allow water to drain.
5. Once defrosted, clean the interior with a mild detergent and water. Dry thoroughly.
6. Replace the drain plug, plug in the freezer, and allow it to cool before returning food.

### Cleaning

Clean the interior and exterior surfaces regularly with a mild soap and water solution. Avoid abrasive cleaners. The removable basket can be washed with warm soapy water.

## Power Outage

In case of a power outage, keep the freezer lid closed to maintain temperature for as long as possible. Avoid opening the lid unnecessarily.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Freezer does not operate.	Not plugged in. Circuit breaker tripped/fuse blown. Power outage.	Ensure plug is securely in outlet. Reset circuit breaker or replace fuse. Check household power supply.
Freezer temperature is not cold enough.	Temperature control set too warm. Lid opened too frequently. Excessive food load. Poor air circulation.	Adjust thermostat to a colder setting. Minimize lid openings. Allow time for new food to cool. Ensure adequate space around the freezer.
Excessive frost buildup.	Lid not sealing properly. Lid opened too frequently. High humidity environment.	Check lid gasket for damage or obstruction. Minimize lid openings. Defrost as needed.

## SPECIFICATIONS

**Brand:** Frigidaire

**Model:** EFRF1049AMZ6COM

**Capacity:** 10 Cubic Feet

**Dimensions (D x W x H):** 33.25 x 44.25 x 27.5 inches

**Weight:** 70 pounds

**Color:** White

**Voltage:** 115 Volts

**Installation Type:** Freestanding

**Material Type:** Plastic

**Included Components:** Freezer unit, 1 removable wire basket

## WARRANTY AND SUPPORT

Specific warranty details for this product may vary by region and retailer. Please refer to the warranty card included with your purchase or contact Frigidaire customer support for detailed information.

For technical assistance or service inquiries, please visit the official Frigidaire website or contact their customer service department. Contact information is typically provided in the product packaging or on the manufacturer's website.